
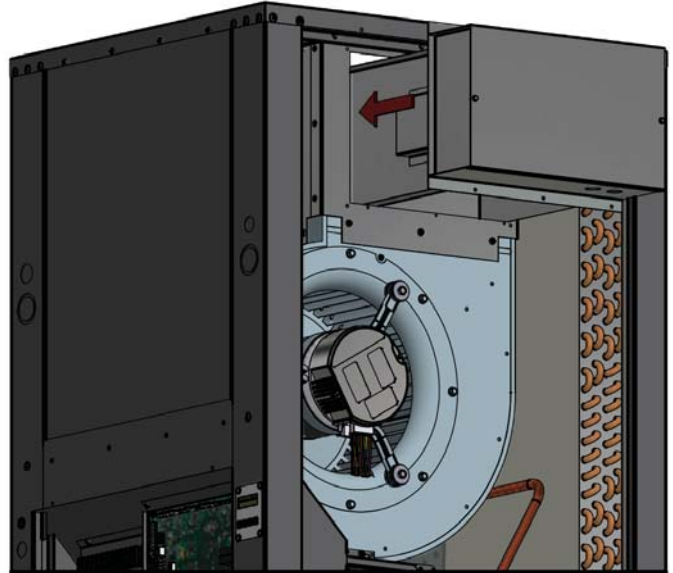


Internal Plenum Heater Installation


R, TF, ATA, ATF, DX, DXTF Series

1. Remove four screws as shown, and remove blank panel.

2. Slide plenum heater into cutout until heater flange is flush with blower.

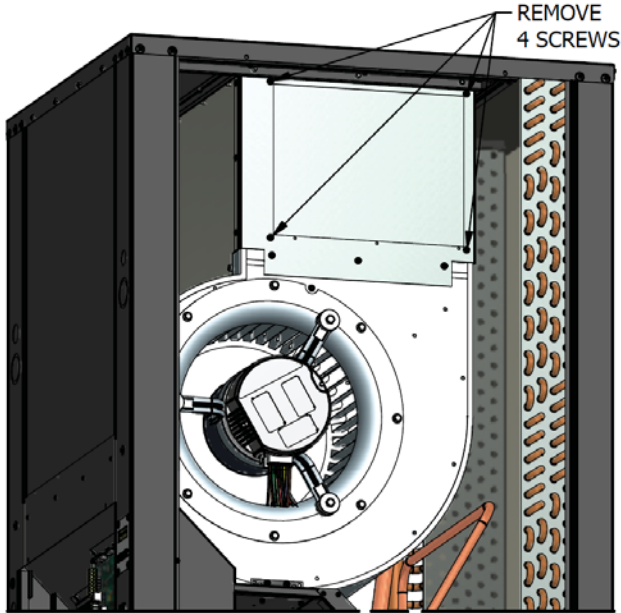

3. Slide plenum heater UP approximately 3/8". Top flange of heater is held in top groove of blower assembly and requires no fasteners. Install 3 screws through bottom flange of heater through pre-punched holes in heater and blower assembly.

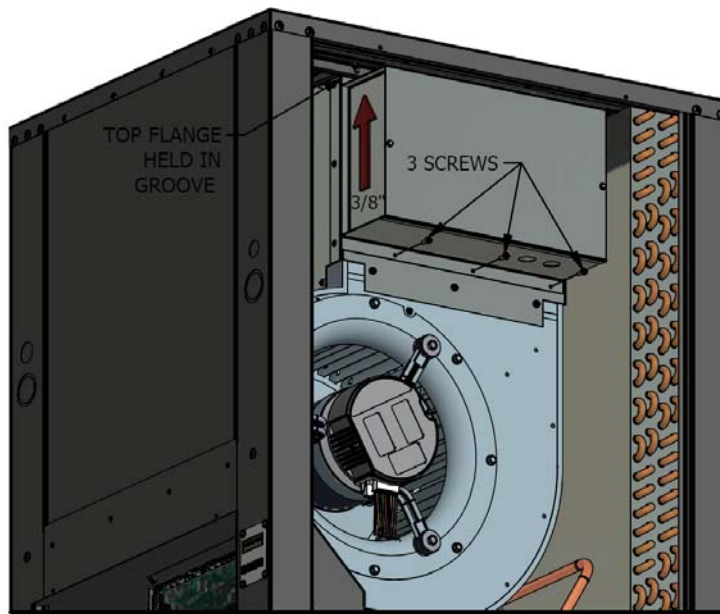

Drawn By Dan Rheault	Date 9-Jan-2015
Checked By Dan Rheault	Date 9-Jan-2015
Eng. Approved By	Date
Mfg. Approved By	Date
Approved By	Date

MARITIME GEOTHERMAL LTD.		P.O. Box 2555 170 Plantation Rd. Petitcodiac, NB CANADA E4Z 6H4	
Drawing Name			
Internal Plenum Heater Installation			
Size LET	Drawing Number 001915INF	Revision 01	Sheet 1 / 1

01	Initial Release	Dan Rheault	Dan Rheault	9-Jan-2015
REV	ECO#	IMPL BY	APVD BY	DATE