





# **Engineering Specification**

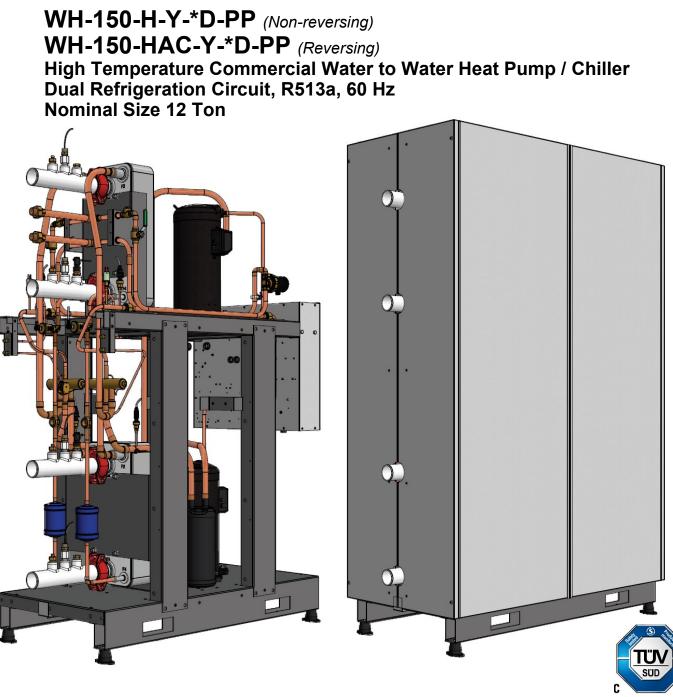

Maritime Geothermal Ltd. P.O. Box 2555, 170 Plantation Road Petitcodiac, NB E4Z 6H4 (506) 756-8135 info@nordicghp.com www.nordicghp.com 002777SPC-01

้บร

## **Model Nomenclature**

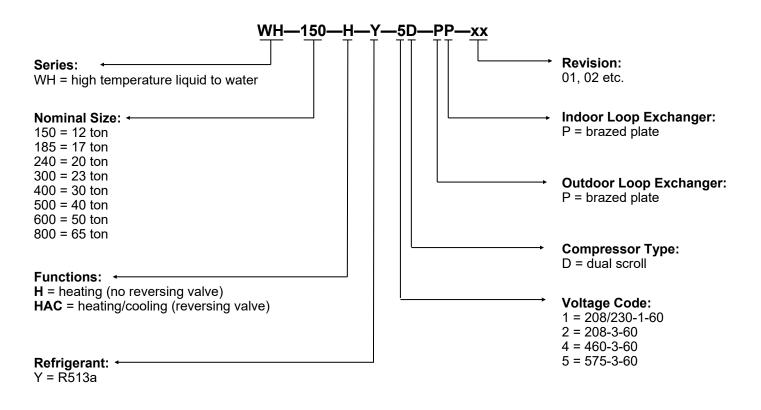

APPLICATION TABLE											
MODEL SIZE         FUNCTION         REFRIGERANT         VOLTAGE         COMPRESSOR         OUTDOOR COIL         INDOOR COIL         INDOOR COIL         REVISIONS									IS		
WH-150	H HAC	Y	1 2 4 5	D	Ρ	Ρ	01				
This document applies only to the models and revisions listed in this table.											

Maritime Geothermal Ltd. has a continuous improvement policy and reserves the right to modify specification data at any time without prior notice .


## **Design Features**

- Low GPW R513a refrigerant, complies with 2025 environmental standards while retaining A1 (non-flammable) classification
- Capable of 160°F (71°C) indoor loop LLT, with a minimum outdoor loop temperature of 45°F (7°C)
- 11 gauge heavy duty standalone frame with slots for 4-side fork lift access
- Designed to be lined up side by side with zero side clearance, for multiple-unit installations
- TUV listed for electrical certification (CSA/UL/ETL equivalent)
- Rubber mounting feet (optional spring foot kit, below)
- Insulated heat exchangers and piping
- Dual refrigeration circuits: each circuit operates independently
- Scroll compressors
- Suction line accumulator (each circuit)
- Liquid line solid core filter-dryer (each circuit)
- Liquid line sight glass (each circuit)
- Electronic Expansion Valves (EEVs) (each circuit)
- 4-way reversing valve on reversing -HAC units (each circuit)
- Refrigeration service ports for each refrigeration circuit (1/4" Schrader)
- 316 stainless steel brazed plate heat exchangers
- 316 stainless piping with 2" Victaulic connections for the outdoor and indoor loops
- 3-phase protection
- High and low pressure sensors (each circuit)
- Suction line temperature sensor (each circuit)
- Manual reset high pressure control (each circuit)
- Flow switch for outdoor loop, and also for indoor loop on reversing -HAC units
- Temperature sensor and P/T port on all four water lines (Outdoor In, Outdoor Out, Indoor In and Indoor Out)
- Advanced control board with BACNet interface for remote operation and data access including all sensor data and alarm conditions, PWM outputs (or 0-10VDC), configurable analog inputs (0-10VDC or 4-20mA) with on board 5VDC, 12VDC and 24VDC power supplies.
- USB port for complete data access using laptop computer and provided software; including real-time charting, data logging, and diagnostic functionality with manual override operation
- 2 x 16 LCD display for control and data access
- Random start on power up (0-2 minutes)
- Dry contacts for external pump control (24VAC 5A MAX)
- 16ga satin galvanized acoustically insulated (1" thick) enclosure with powder coat finish and six removable panels, offering complete 360 degree access for servicing


## **Available Accessories**

- Spring foot kit, for use where floors have deflection (e.g. mezzanines)
- Tank temperature sensor(s) for standalone configuration

## **Design Features**

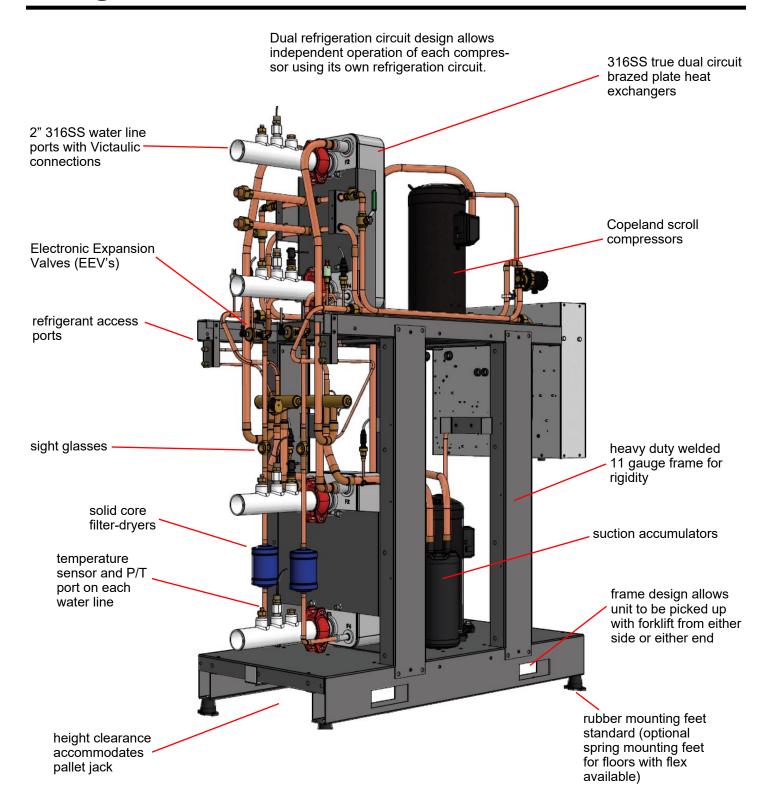


## **Design Features**

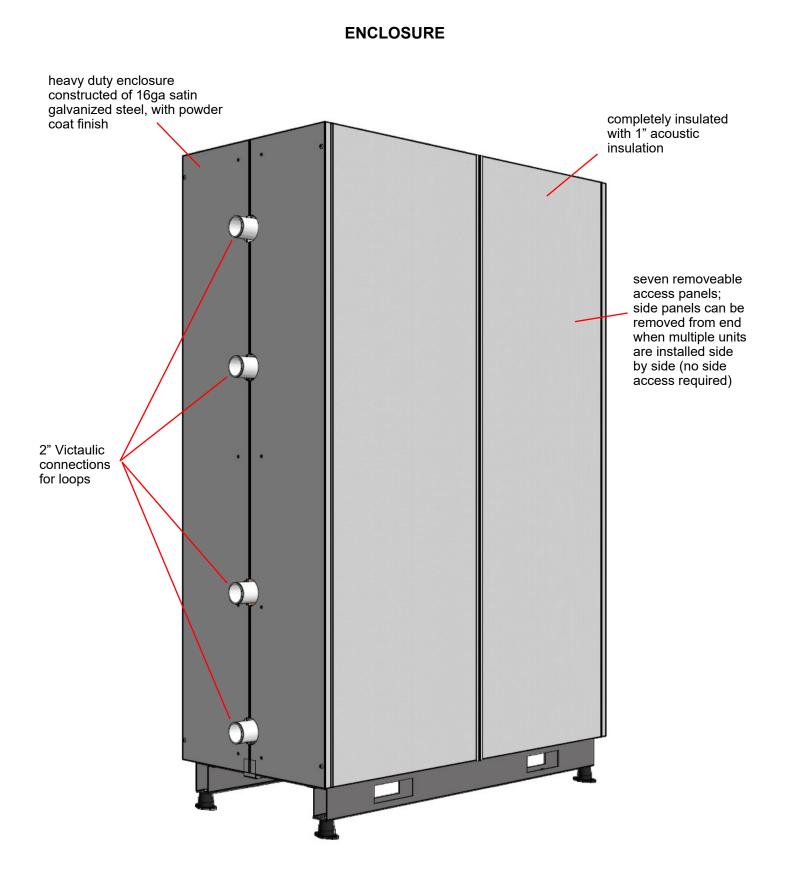

24-Oct-2024


### WITHOUT ENCLOSURE

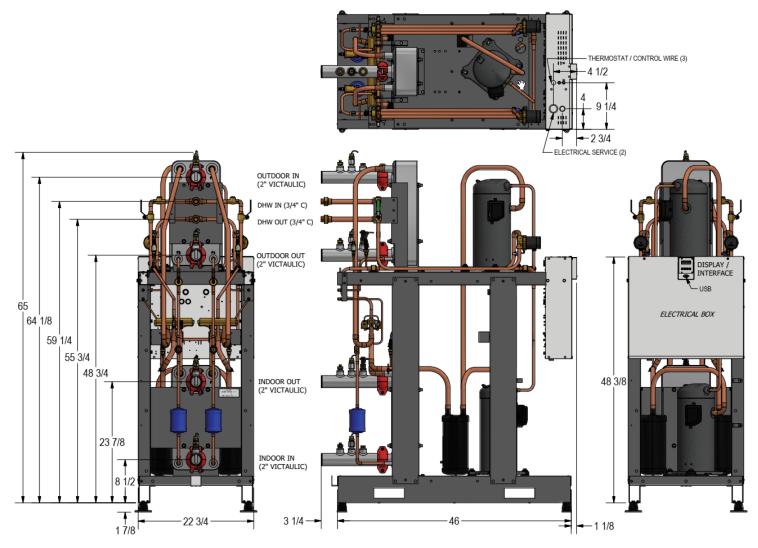

All dimensions in inches.

## **Dimensions**

### WITH ENCLOSURE

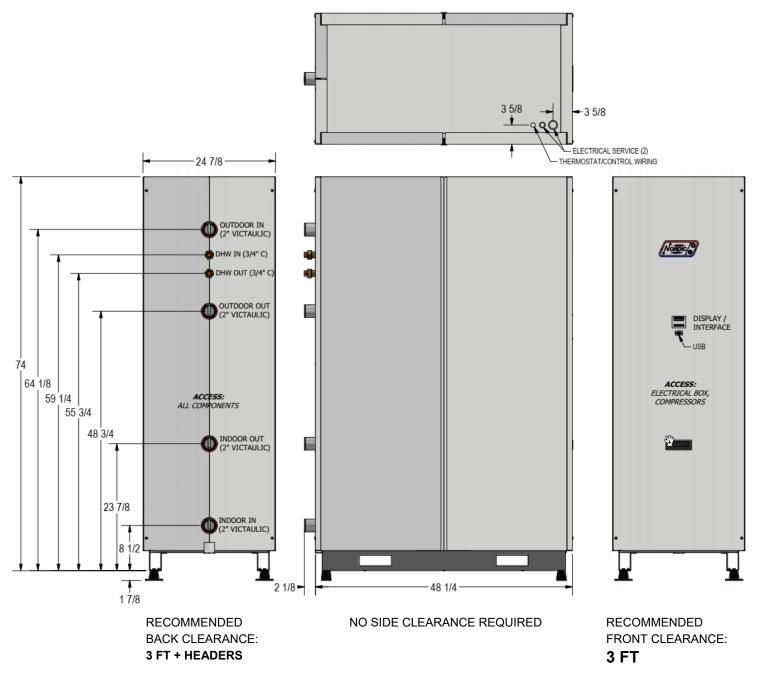

All dimensions in inches.

## **Specifications**

Electrical Specifications (R513a)									
Nomenclature	Pow	ver Supply	/	Compro (eac		FLA	MCA	Maximum Fuse/Breaker	Minimum Wire Size
Identifier	V-ø-Hz	MIN	MAX	RLA	LRA	Amps	Amps	Amps	ga
1	230-1-60	187	253	28.8	176	58.5	65.7	80	#4-2
2	208-3-60	187	229	18.6	156	38.1	42.8	60	#6-3
4	460-3-60	414	506	9.0	75	18.5	20.8	30	#10-3
5	575-3-60	518	632	7.4	54	15.3	17.2	20	#12-3

Refrigerant Charge (Per Circuit)									
MODEL	TYPE	lb	kg	Oil Type					
WH-150	R513a	5.5	2.5	POE					

Oil capacity is marked on the compressor label.
 Refrigerant charge is subject to revision; actual charge is indicated on the unit nameplate.

Shipping Information										
MODEL	WEIGHT	DIMENSIONS in (cm)								
WODEL	lb. (kg)	L	W	Н						
WH-150	950 (432)	78 (198)	32 (81)	82 (208)						

## **Specifications**

Flow Rates & Volumes									
	Nominal Size			d Liquid Flandoor Loop	Heat P Indoor		Heat P <b>Outdoo</b>		
MODEL	(60Hz)	100% CA (2 COMPR	APACITY RESSORS)		PACITY RESSOR)	Holdup		Holdup Volume	
	tons	gpm(US)	L/s	gpm(US)	L/s	US gal	L	US gal	L
WH-150	12	36	2.3	18	1.2	1.90	7.2	1.90	7.2

Loop Pres Drop Data	Loop Pressure Drop Data			INDOOR (water 130°F)		INDOOR (water 104°F)		<b>DOOR</b> 50°F)	OUTDOOR (15% methanol 32°F)		OUTDOOR (35% prop.glycol 32°F)	
	gpm	L/s	psi	kPa	psi	kPa	psi	kPa	psi	kPa	psi	kPa
	24	1.5	0.9	6.2	0.9	6.2	1.0	6.9	1.1	7.6	1.2	8.3
	28	1.8	1.2	8.3	1.2	8.3	1.3	9.0	1.4	9.7	1.7	12
WH-150	32	2.0	1.5	10	1.5	10	1.6	11	1.8	12	2.2	15
WH-150	36	2.3	1.8	12	1.9	13	2.0	14	2.2	15	2.7	19
-	40	2.5	2.2	15	2.3	16	2.4	17	2.6	18	3.2	22
	48	3.0	3.2	22	3.3	23	3.4	23	3.6	25		

WH-SE	RIES Operating Te	emperature Limits								
Loop	Mode	Parameter	(°F)	(°C)	Note					
	HEATING (indoor is hot loop)	Minimum EWT	70 - 110	21 - 43	Use formula (Outdoor EWT + 20°F) or (Outdoor EWT + 11°C). Lower temperatures require 0-10VDC modulating water valve, or manual flow reduction at startup.					
Indoor Loop		Maximum LWT	160	71						
	COOLING	Minimum LWT	37	3	EWT should normally be 45°F or greater.					
	(reversing HAC units only, indoor is cold loop)	Maximum ELT	90	32	0-10VDC modulating water valve required on indoor loop above this temperature, or manual flow reduction at startup					
		Minimum LWT	37	3	EWT should normally be 45°F or greater.					
Outdoor	HEATING (outdoor is cold loop)	Maximum ELT	90	32	0-10VDC modulating water valve required on outdoor loop above this temperature to limit suction pressure (contact Engineering for firmware revision of this feature)					
Loop	<b>COOLING</b> (reversing HAC units only, outdoor	Minimum EWT	70 - 110	21 - 43	Use formula (Outdoor EWT + 20°F) or (Outdoor EWT + 11°C). Lower temperatures require 0-10VDC modulating water valve.					
	is hot loop)	Maximum LLT/LWT	160	71						
EWT: Entering Water Temperature										

LWT: Leaving Water Temperature

Values in these tables are for rated liquid and water flows.

### **Performance Tables - WH-Series**


#### WH-150-H\*\*-Y-\*D-PP R513a, 60 Hz, 2 x ZR68KCE-TFD (460-3-60)


- Cooling via reversing models (-HAC), or switching indoor/outdoor
   Lower cooling mode outdoor loop ELT's may require flow control
   Compressor current is for 460-3-60.
   [Multiply by 2.2 for 208-3-60, by 0.8 for 575-3-60.]


1								,	Ľ.	мишріу бу		-		o oo.j	
		OU	TDOOR I	LOOP (W	(ater)		ELECT	RICAL							
	ELT	Evap.	Flow	LLT	Delta T	Heat Abs.	Compressor	Input	EWT	Cond.	Flow	LWT	Delta T	Heating	СОРн
	(°F)	Temp.	(gpm)	(°F)	(°F)	(Btu/hr)	Current (A)	Power (W)	(°F)	Temp.	(gpm)	(°F)	(°F)	(Btu/hr)	COPH
	50	40	36	46	-4.3	78,100	13.4	8,286	114	126	36		5.9	106,000	3.75
	60	48	36	55	-5.3	94,900	13.8	8,604	113	126	36		6.9	123,900	4.22
	70	57	36	64	-6.4	114,400	14.3	8,946	112	126	36	120	8.1	144,600	4.74
	80	65	36	72	-7.6	137,000	14.8	9,320	111	127	36		9.4	168,400	5.30
	90	74	36	81	-9.1	163,100	15.4	9,731	109	127	36		11.0	195,900	5.90
HEATING	50	41	36	46	-3.8	68,200	15.0	9,993	134	145	36		5.7	101,900	2.99
IFI	60	50	36	55	-4.6	82,600	15.5	10,315	133	146	36		6.6	117,400	3.34
	70	58	36	65	-5.5	99,000	15.9	10,649	132	146	36	140	7.6	135,000	3.72
# ]	80	67	36	73	-6.6	117,900	16.5	11,026	131	146	36		8.7	155,200	4.13
	90	75	36	82	-7.8	139,500	17.0	11,423	130	146	36		10.0	178,100	4.57
	50	42	36	47	-3.1	56,400	16.9	11,836	155	166	36		5.4	96,400	2.39
	60	51	36	56	-3.8	68,500	17.4	12,194	154	166	36		6.2	109,700	2.64
	70	60	36	65	-4.6	82,200	18.0	12,591	153	166	36	160	7.1	124,800	2.90
	80	68	36	75	-5.5	97,800	18.5	13,001	152	167	36		8.0	141,800	3.20
	90	77	36	84	-6.5	115,800	19.1	13,447	151	167	36		9.1	161,300	3.52
	<b>-</b> 1 <b>-</b>	0			<b>D</b> # <b>T</b>		Compressor			-	-	1147	<b>D</b> # <b>T</b>	<b>0</b> "	
	ELT	Cond.	Flow		Delta T	Heat Rej.	· · +	Input	EWT	Evap.	Flow		Delta T	Cooling	EER
	(°F)	Temp.	(gpm)	(°F)	(°F)	(Btu/hr)	Current (A)	Power (W)	(°F)	Temp.	(gpm)	(°F)	(°F)	(Btu/hr)	
	50**	75	36	56	6.2	104,100	8.2	3,916		37	36	49	-5.1	91,200	23.3
*	55**	80	36	61	6.1	102,900	8.4	4,132		37	36	49	-5.0	89,200	21.6
ž	60**	85	36	66	6.1	101,700	8.5	4,357		38	36	49	-4.9	87,200	20.0
	65**	90	36	71	6.0	100,400	8.7	4,588		38	36	49	-4.7	85,100	18.5
2	70	96	36	76	5.9	99,200	8.9	4,835	54	39	36	49	-4.6	83,100	17.2
COOLING*	75	101	36	81	5.8	97,900	9.1	5,095	04	39	36	49	-4.5	80,900	15.9
	80	106	36	86	5.7	96,700	9.3	5,369		40	36	49	-4.4	78,800	14.7
	85	111	36	91	5.7	95,500	9.6	5,654		40	36	49	-4.3	76,600	13.5
	90	117	36	96	5.6	94,400	9.9	5,962		41	36	50	-4.1	74,400	12.5
	95	122	36	101	5.5	93,300	10.2	6,288		41	36	50	-4.0	72,200	11.5

METRIC

		OU	TDOOR I	-00P (W	/ater)		ELECT	RICAL			INDOO	r loop	(Water)		
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (kW)	$\begin{array}{c} \text{Compressor} \\ \text{Current} \left( A \right)^{\intercal} \end{array}$	Input Power (W)	EWT (°C)	Cond. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Heating (kW)	COPH
	10.0	4.3	2.3	7.6	-2.4	22.9	13.4	8,286	45.6	52.0	2.3		3.3	31.1	3.75
	15.6	9.0	2.3	12.7	-2.9	27.8	13.8	8,604	45.1	52.2	2.3		3.8	36.3	4.22
	21.1	13.7	2.3	17.5	-3.6	33.5	14.3	8,946	44.4	52.3	2.3	49	4.5	42.4	4.74
	26.7	18.4	2.3	22.5	-4.2	40.2	14.8	9,320	43.7	52.5	2.3		5.2	49.4	5.30
6	32.2	23.2	2.3	27.1	-5.1	47.8	15.4	9,731	42.8	52.7	2.3		6.1	57.4	5.90
DN	10.0	5.0	2.3	7.9	-2.1	20.0	15.0	9,993	56.8	62.9	2.3		3.2	29.9	2.99
E	15.6	9.8	2.3	13.0	-2.6	24.2	15.5	10,315	56.3	63.1	2.3		3.7	34.4	3.34
	21.1	14.5	2.3	18.0	-3.1	29.0	15.9	10,649	55.8	63.2	2.3	60	4.2	39.6	3.72
HE	26.7	19.3	2.3	23.0	-3.7	34.6	16.5	11,026	55.2	63.4	2.3		4.8	45.5	4.13
	32.2	24.0	2.3	27.9	-4.3	40.9	17.0	11,423	54.4	63.5	2.3		5.6	52.2	4.57
	10.0	5.7	2.3	8.3	-1.7	16.5	16.9	11,836	68.1	74.2	2.3		3.0	28.3	2.39
	15.6	10.5	2.3	13.5	-2.1	20.1	17.4	12,194	67.7	74.3	2.3		3.4	32.2	2.64
	21.1	15.3	2.3	18.5	-2.6	24.1	18.0	12,591	67.2	74.6	2.3	71	3.9	36.6	2.90
	26.7	20.1	2.3	23.6	-3.1	28.7	18.5	13,001	66.7	74.7	2.3		4.4	41.6	3.20
	32.2	24.9	2.3	28.6	-3.6	33.9	19.1	13,447	66.1	74.9	2.3		5.1	47.3	3.52
	ELT	Cond.	Flow	LLT	Delta T	Heat Rej.	Compressor	Input	EWT	Evap.	Flow	LWT	Delta T	Cooling	
	(°C)	Temp.	(L/s)	(°C)	(°C)	(W)	Current $(A)^{\dagger}$	Power (W)	(°C)	Temp.	(L/s)	(°C)	(°C)	(W)	COPc
	10.0**	24	2.3	13.4	3.4	30.5	8.2	3,916		3	2.3	9.2	-2.8	26.7	6.83
	12.8**	27	2.3	16.2	3.4	30.2	8.4	4,132		3	2.3	9.2	-2.8	26.1	6.33
U	15.6**	30	2.3	19.0	3.4	29.8	8.5	4,357		3	2.3	9.3	-2.7	25.6	5.86
Ľ	18.3**	32	2.3	21.6	3.3	29.4	8.7	4,588		3	2.3	9.4	-2.6	24.9	5.42
ō	21.1	35	2.3	24.4	3.3	29.1	8.9	4,835	12	4	2.3	9.4	-2.6	24.4	5.04
000	23.9	38	2.3	27.1	3.2	28.7	9.1	5,095	12	4	2.3	9.5	-2.5	23.7	4.66
•	26.7	41	2.3	29.9	3.2	28.3	9.3	5,369		4	2.3	9.6	-2.4	23.1	4.31
	29.4	44	2.3	32.6	3.2	28.0	9.6	5,654		5	2.3	9.6	-2.4	22.4	3.96
	32.2	47	2.3	35.3	3.1	27.7	9.9	5,962		5	2.3	9.7	-2.3	21.8	3.66
	35.0	50	2.3	38.1	3.1	27.3	10.2	6,288		5	2.3	9.8	-2.2	21.2	3.37

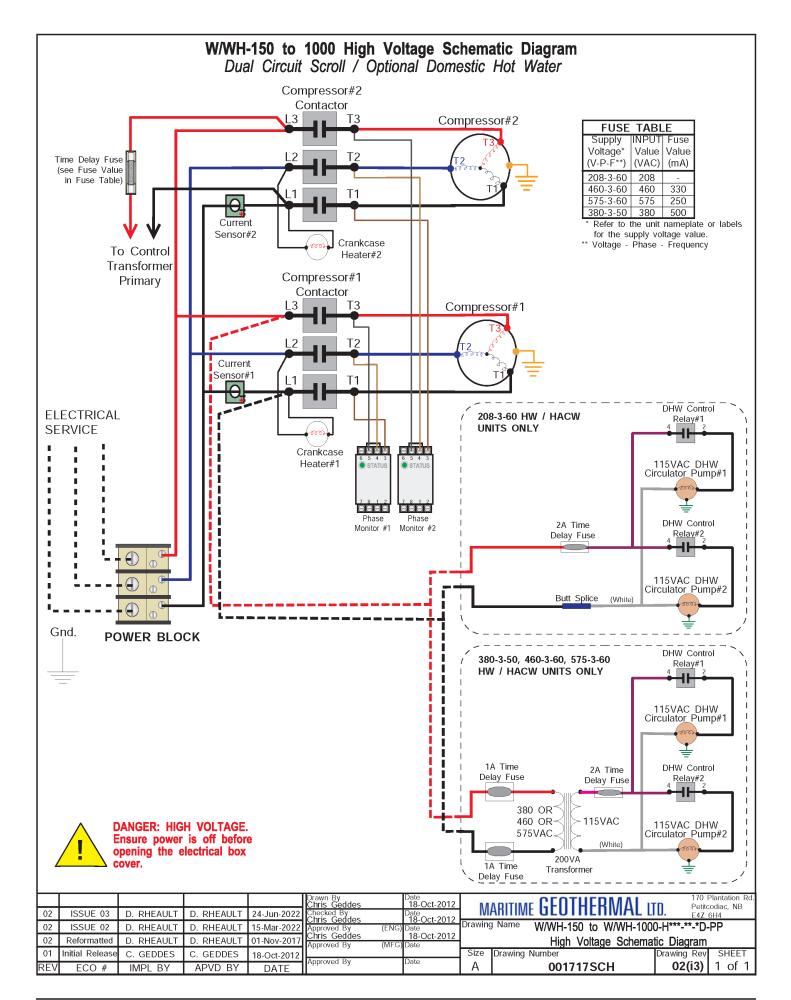

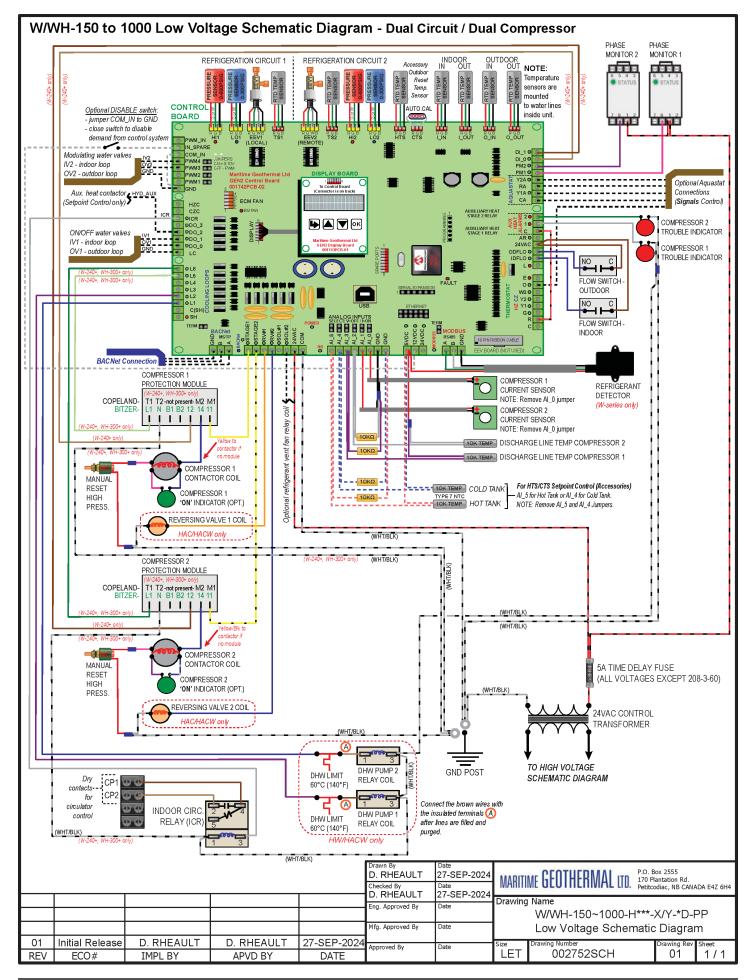

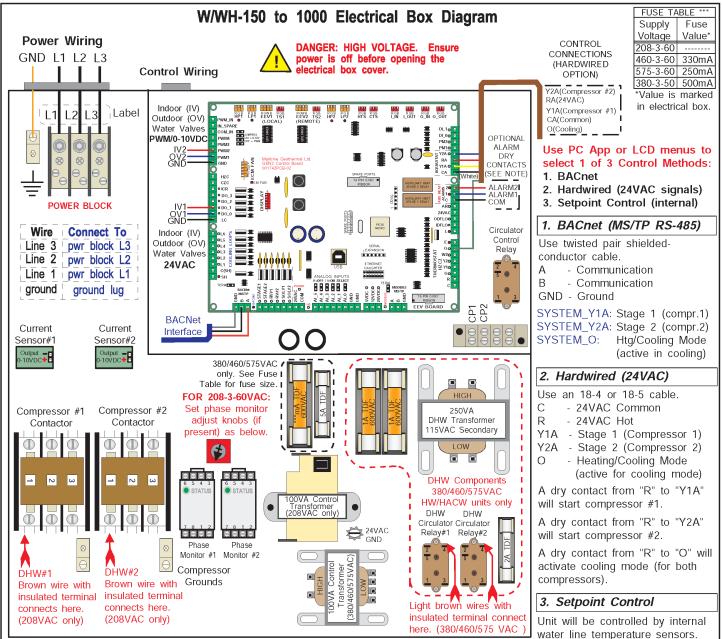

**DHW NOTE:** If the heat pump is to be operated without the hot water circulators connected to the water tank and flooded with water, remove the brown (or light brown) wire with the insulated terminal from the location(s) shown in the diagram above. **The pumps are water lubricated and must not be run dry.** 

#### **IMPORTANT NOTES:**


- 3 PHASE SCROLL COMPRESSORS must rotate in the proper direction. After the initial connection, if the phase protection module(s) indicate a fault on power up, turn the power off and reverse the L1 and L2 supply leads. Turn the power on and clear the fault(s).


- **IMPORTANT:** Ensure sufficient antifreeze concentration is used and correctly set in control board via the PC App, so that the correct low pressure cutout value is implemented to prevent freezing conditions. Failure to do so could cause the heat exchanger to freeze and rupture, voiding the warranty. Stages Y1A & Y2A are completely independent (unlike with residential "Ultratech" compressors). Each may be used at any time.
Anti-short cycle timer of 5 minutes exists for each compressor.
Alarm1 and Alarm2 signals are dry contacts (NO). Connect the signal source to COM. Alarm1 is for stage 1 (Y1A) and Alarm2 is for stage 2 (Y2A). MAX 1amp @ 24VAC


See manual for setup instructions.

- CP1 and CP2 are a dry contact that can be used to turn on circulator pumps when either compressor starts. In Setpoint Control mode, it is indoor circulators only (sampling). MAX 5amps @ 24VAC - Water Valve: 24VAC is present across OV1/IV1 and GND to power an external ON/OFF water valve when either compressor starts. Modulating water valves can be connected between OV2/IV2 and GND. MAX 1amp @ 24VAC

					Drawn By Chris Geddes	Date 18-Oct-2012	R.A	ARITIME <b>GEOTHERMAL</b> L	170 I Petito	Plantation Rd. codiac, NB
02	ISSUE 03	D. RHEAULT	D. RHEAULT	24-Jun-2022	Checked By Chris Geddes	Date 18-Oct-2012	IVI	ARTINE <b>ULUTILIIVIAL</b> L	ID. E4Z	
02				15-Mar-2022	Approved By (ENG)	Date	Diawing	<sup>3 Name</sup> W/WH-150 to W/WH-1000	-H***-*-*D-PF	<b>)</b>
02	Reformatted	D. RHEAULT	D. RHEAULT	01-Nov-2017	Chris Geddes Approved By (MFG)	18-Oct-2012 Date		Electrical Box Diag	gram	
01	Initial Release		C. GEDDES	18-Oct-2012	11 <i>3</i> ( )		Size	Drawing Number	Drawing Rev	SHEET
RE۱	/ ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Α	001719ELB	02(i3)	1 of 1

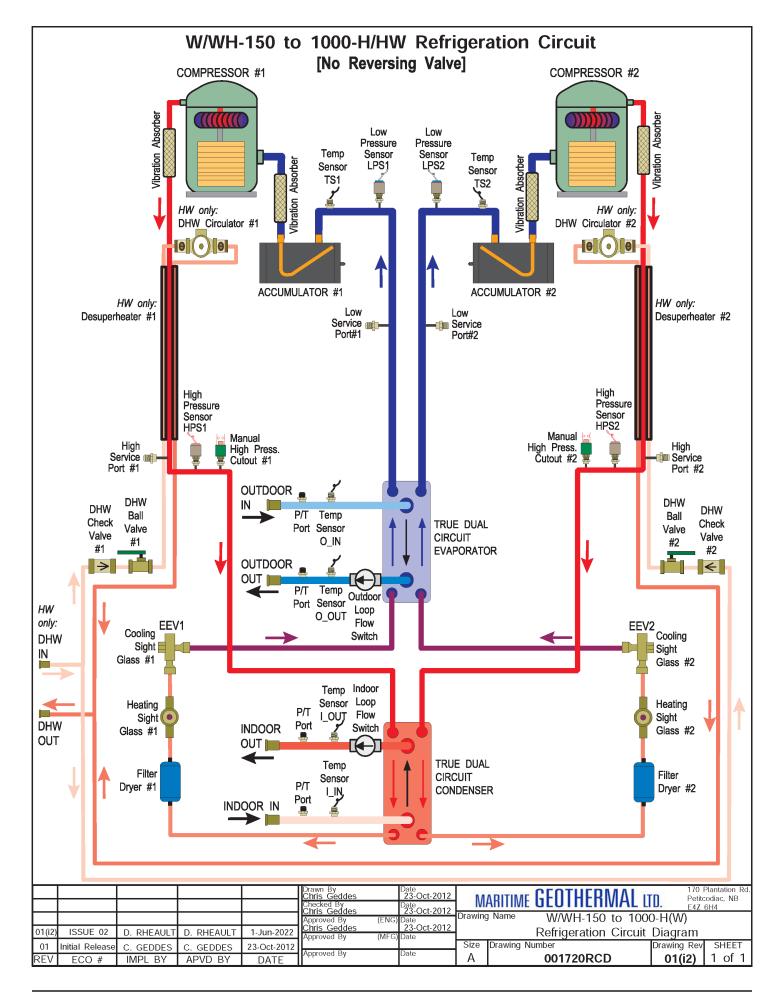

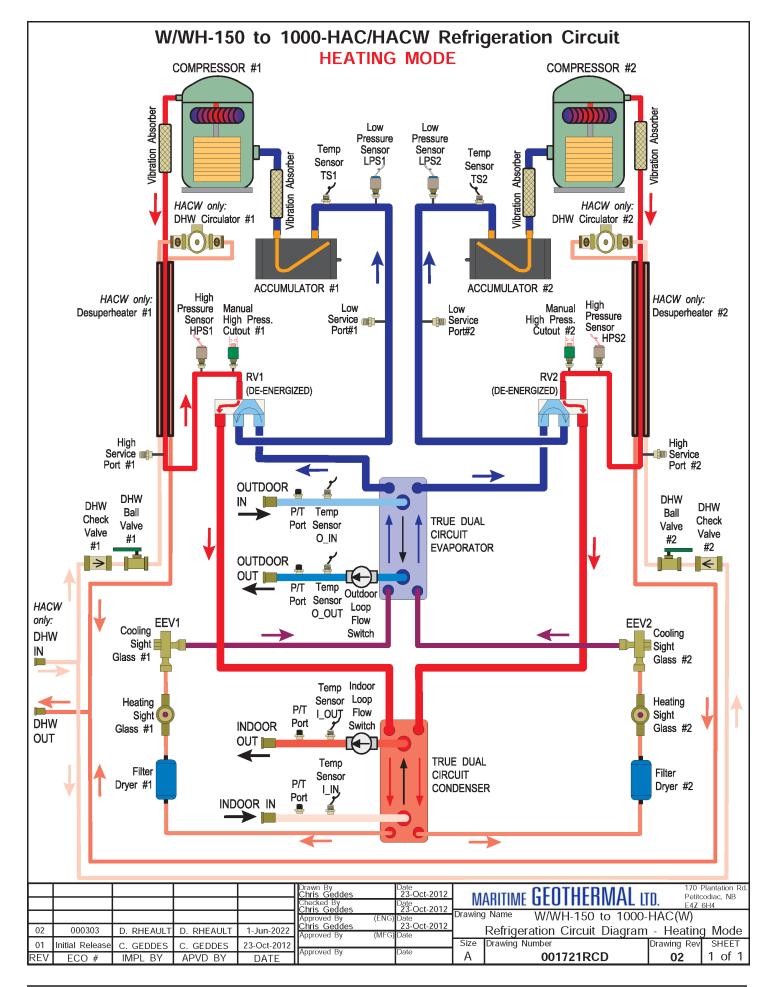

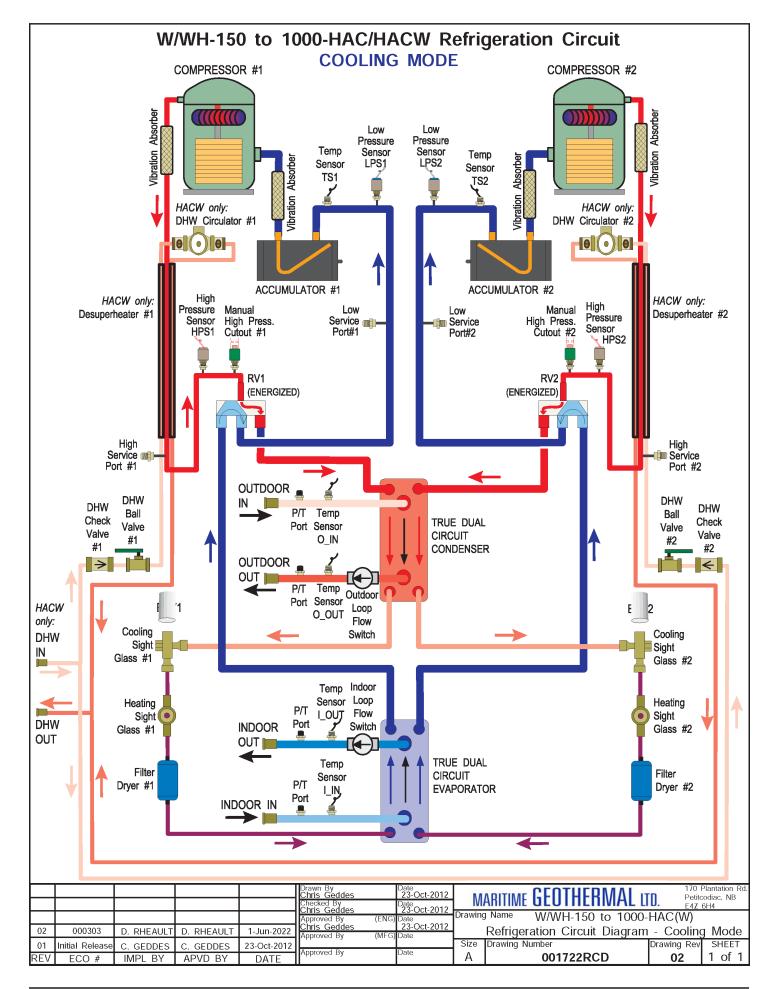

## **BACnet Interface**

The BACnet interface is an **MS/TP** connection via RS-485 twisted pair. BACnet **IP** is not available. Recommended wire: 22-24 AWG single twisted pair, 100-120 Ohms impedance, 17pF/ft or lower capacitance, with braided or aluminum foil shield, such as Belden 9841 or 89841.

The connector on the control board is a three wire removable screw connector. The signals are as follows:

- A: Communications line (+) (right pin)
- B: Communications line (-) (middle pin)
- C: Ground connection (left pin)

If connecting multiple units to one RS-485 connection point, connect the signal cable from the master building controller to the first unit. Connect the second unit to the first unit (in same connector), connect the third unit to the second unit, and so on until all units are connected (daisy-chain). Remove the TERM jumper (located just above the BACnet connector on control board) from all units except the last one. The shield ground should be connected only to the GND pin of the unit for single unit installations. For multiple units, the shield ground should only be connected to the GND pin of the last unit. The shield grounds for intermediate units should be connected together. The shield ground should be left unconnected at the building controller end for all cases.

Vendor: Maritime Geothermal Ltd. Vendor ID: 260 Model Name: MGT GEN2 Control Board

The following parameters can be set via the PC App's Configuration Window:

1)	Baud rate 9600, 19200, 38400, or 76800	HYD AUX in Defrost  BACnet Configuration	
2)	MAC address Maximum value is 125.	OD Fan Reduction V Baudrate MAC Address Instance# 76800 V 125 980000	8 🗸
3)	Instance number Maximum value is 4194303.	IMPORTANT: Cycle power to invol	ke changes.

The BACnet parameter **Max\_Master** has a fixed value of **127** in this device.

BACnet data is available regardless of the selected control method. In order to control the unit via the BACnet interface, set **Control Source** to **BACnet** either by using the PC App's configuration window or the LCD menus.

For tables listing BACnet objects, refer to **Application**, **Installation**, **and Service Manual**.

### General

The water-to-water heat pump shall be a single packaged dual refrigeration circuit heating / cooling unit. The unit shall be listed by a nationally recognized testing laboratory (NRTL), such as UL, CSA, TUV, or ETL. The unit shall be rated in accordance with applicable standards of the Air Conditioning, Heating, and Refrigeration Institute / International Standards Organization (AHRI/ISO) and/or Canadian Standards Association (CSA). The liquid source water to water heat pump, as manufactured by Maritime Geothermal Ltd. of Petitcodiac, New Brunswick, Canada shall be designed to operate correctly within liquid temperature ranges specified on the "Minimum and Maximum Operating Temperatures" page of this engineering specification document.

### **Factory Quality**

Each unit shall be run tested at the factory with water circulating in both indoor and outdoor loops. Quality control system checks shall include: computerized nitrogen pressurized leak test, evacuation of refrigeration circuit to sustained vacuum, accurate system charge, detailed heating and cooling mode tests, and quality cross check all operational and test conditions to pass/fail criteria. Units tested without water flow are not acceptable. The units shall be warranted by the manufacturer against defects in materials and workmanship in accordance with the warranty section at the end of this document. Optional extended factory warranty coverage may be available.

### Cabinet

Each unit shall be constructed with a heavy duty standalone frame, and may optionally be enclosed in a sheet metal cabinet. Frame shall be constructed of powder coated galvanized sheet metal of minimum 11 gauge. Cabinet shall be constructed of powder coated galvanized sheet metal of minimum 16 gauge. Sheet metal gauge shall be higher where structurally required. Design and construction of cabinet shall be such that it is rigid and passes the CSA/UL Loading Test requirements (200 lb roof test and 25 lb guard test). All panels shall be lined with minimum 1 inch [25.4 mm] thick acoustic type glass fiber insulation. All insulation shall meet the fire retardant provisions of NFPA 90A. This material shall also provide acoustical benefit. Any enclosure must have a minimum of six access panels for serviceability of the compressor compartment. Enclosures having fewer than six access panels to compressor/heat exchangers/expansion device/refrigerant piping shall not be acceptable. The electrical box shall have separate holes and knockouts for entrance of line voltage and low voltage control wiring. All factory-installed wiring passing through factory knockouts and openings shall be protected from sheet metal edges at openings by plastic grommets.

### **Refrigerant Circuit**

All units shall contain two separate sealed refrigerant circuits, each containing a hermetic motor scroll compressor, one electronic expansion valve, factory installed high and low pressure sensors, service ports, solid core filter-dryer, sight glass, reversing valve (for reversing units), and suction accumulator. Refrigerant circuits shall share true dual circuit brazed plate heat exchangers.

Refrigerant used shall have a global warming potential (GWP) of less than 700 and shall have an A1 classification (non-flammable).

Compressors shall be specified for heat pump duty with internal isolation consisting of rubber vibration isolators. Compressor motors shall have internal overload protection.

The water to refrigerant heat exchangers shall be of a stainless steel brazed plate design, designed and certified for 650 psig [4480 kPa] working pressure on the refrigerant side and 650 psig [4480 kPa] on the water side. Heat exchangers shall be insulated over all of their outside surface with minimum 3/8" thick closed cell insulation. Insulation consisting of 1/8" closed-cell insulating tape shall not be acceptable.

The electronic expansion valves shall be of stepper-motor rather than pulsing type, and shall provide proper superheat control over the unit's operating range with minimal deviation from superheat setpoint. The valves shall be controlled by electronic superheat controller(s) which provide operator-adjustable superheat and real-time LED/LCD display of current superheat. Superheat shall be determined through the suction pressure-temperature method. Externally mounted pressure controlled water regulating flow valves or thermostatic expansion valves (TXV's) in place of electronic expansion valves are not acceptable.

The suction accumulators shall be insulated with minimum 3/8" thick closed cell insulation to prevent condensation. The accumulator's internal oil return port shall be sized properly for the unit's operating range. To ensure proper oil return, suction accumulator shall not be 'oversized'.

### **Piping and Connections**

The unit shall have two sets of primary water in and water out connections (outdoor and indoor). The primary connection type shall be stainless steel pipe for Victaulic connection.

All internal water and refrigerant piping shall be insulated with minimum 3/8" thick closed cell insulation. Insulation consisting of 1/8" closed-cell insulating tape shall not be acceptable.

### Electrical

Controls and safety devices shall be factory wired and mounted within the unit. Controls shall include 24 volt alternating current (24VAC) activated compressor contactors, reversing valves, and 24VAC 100VA transformer with built in circuit breaker or fused on both primary and secondary sides. Units shall be name-plated for use with time delay fuses or circuit breakers. Unit controls shall be 24VAC and provide heating or cooling as required by the remote thermostat or controller. 3-phase protection shall be factory installed. Unit shall have dry contacts for controlling loop circulating pumps via an external 24VAC contactor. Unit shall provide remote fault indication to the control system via serial communication and fault messages on front panel LCD display.

### Unit Control

The control system shall have the following features:

- 1. Anti-short cycle time delay on compressor operation. Time delay shall be a minimum of 5 minutes, for both thermostat demand and safety control reset starts. An override shall be provided to disable this delay for unit commissioning and testing purposes.
- 2. Random compressor start delay of 0-120 seconds on unit power up to facilitate starting multiple units after a power failure.
- 3. Flow switch on outdoor loop, and also on indoor loop for reversing units.
- 4. Compressor shutdown for high or low refrigerant pressures, low flow conditions and for phase protection faults.
- Automatic intelligent reset: unit shall automatically restart 5 minutes after trip if the fault has cleared. Should a fault reoccur 3 times sequentially then permanent lockout shall occur, requiring cycling of the power to the unit in order to reset.
- 6. Manual reset high pressure in case of electronic board failure.
- 7. The low pressure shall not be monitored for the first 90 seconds after a compressor start to prevent nuisance safety trips.
- 8. 2 x 16 backlit Liquid Crystal Display (LCD) and four buttons for limited data access. Unit may be configured for stand alone operation with optional temperature sensor(s)
- 9. Universal Serial Bus (USB) port for full data access and diagnostic information, including real-time charting and data-logging

Maritime Geothermal works continually to improve its products. As a result, the design and specifications of any product may be changed without notice. Please contact Maritime Geothermal at 1-506-756-8135 or visit www.nordicghp.com for latest design and specifications. Purchaser's approval of this data set signifies that the equipment is acceptable under the provisions of the job specification. Statements and other information contained herein are not express warranties and do not form the basis of any commercial contract or other agreement between any parties, but are merely Maritime Geothermal's statement of opinion regarding its products.

### Warranty: W/WH-Commercial Series

#### COMMERCIAL LIMITED EXPRESS WARRANTY

Unless a statement is specifically identified as a warranty, statements made by Maritime Geothermal Ltd. ("MG") or its representatives relating to MG's products whether oral, written or contained in any sales literature, catalogue or agreement, are not express warranties and do not form a part of the basis of the bargain, but

# are merely MG's opinion or commendation of MG's products. SET FORTH HERE IS THE ONLY EXPRESS WARRANTY THAT APPLIES TO MG'S PRODUCTS. MG MAKES NO WARRANTY AGAINST LATENT DEFECTS. MG MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.

#### LIMITED EXPRESS COMMERCIAL WARRANTY - PARTS

MG warrants its Commercial Class products, purchased and retained in the United States of America and Canada, to be free from defects in material and

- workmanship under normal use and maintenance as follows:
- Heat pumps / chillers built or sold by MG for one (1) year from the Warranty Inception Date (as defined below).
   Compressors of above units for five (5) years from the Warranty Inception Date (as defined below).
   Other accessories, when purchased separately, for (1) year from the date of shipment from MG.

#### The "Warranty Inception Date" shall be the date of original unit installation, as per the date on the installation Startup Record; or sixty (60) days from date of unit shipment from MG, whichever comes first.

To make a claim under this warranty, parts must be returned to MG in Petitcodiac, New Brunswick, freight prepaid, no later than ninety (90) days after the date of the replaced or repaired, return such to a factory recognized distributor, dealer or service organization, freight prepaid, The warranty on any part repaired or replaced under warranty expires at the end of the original warranty period.

#### LIMITED EXPRESS COMMERCIAL WARRANTY - LABOUR

MARITIME GEOTHERMAL LTD. will not be responsible for any consequential damages or labour costs incurred.

This warranty does not cover and does not apply to:

- Air filters, fuses, refrigerant, fluids, oil. Products relocated after initial installation.
- (2) (3)
- Any portion or component of any system that is not supplied by MG, regardless of the cause of the failure of such portion or component.
- (4) (5) Products on which the unit identification tags or labels have been removed or defaced. Products on which payment to MG, or to the owner's seller or installing contractor, is in default.
- (6) Products subjected to improper or inadequate installation, including but not limited to:
  - Indoor or outdoor loop flow lower than listed in engineering specification or as expressly approved by MARITIME GEOTHERMAL LTD.
  - Operating the heat pump either manually or with automated controls so that the unit is forced to function outside its normal operating range Disabling of safety controls
  - Insufficient loop antifreeze concentration for loop temperature, or antifreeze concentration incorrectly set in control board
  - Fouled heat exchangers due to poor water quality
  - Failure to use strainers or clean them regularly
  - Impact or physical damage sustained by the heat pump
  - Poor refrigeration maintenance practices, including brazing without nitrogen flow, or using wrong braze/flux
  - Incorrect voltage or missing phase supplied to unit
  - Unit modified electrically or mechanically from factory supplied condition
  - Water quality outside of recommended limits (e.g. salinity or pH)
  - Unit not mounted with supplied anti-vibration grommets when specified for use
  - Corrosion damage due to corrosive ambient environment
  - Failure due to excessive cycling caused by improper mechanical setup or improperly programmed external controller
  - Physical loads or pressures placed on unit from external equipment
- Mold, fungus or bacteria damage
- (8)Corrosion or abrasion of the product.
- (9) Products supplied by others.
- (10) Electricity or fuel, or any increases or unrealized savings in same, for any reason whatsoever.

#### MG is not responsible for:

- The costs of fluids, refrigerant or system components supplied by others, or associated labour to repair or replace the same, which is incurred as a result of a (1)defective part covered by MG's Limited Commercial Warranty.
- The costs of labour, refrigerant, materials, or service incurred in diagnosis and removal of defective part, or in obtaining and replacing the new or repaired part.
- Transportation costs of the defective part from the installation site to MG, or of the return of that part if warranty coverage declined. (4)The costs of normal maintenance.

MG'S LIABILITY UNDER THE TERMS OF THIS LIMITED WARRANTY SHALL APPLY ONLY TO THE MG UNITS REGISTERED WITH MG THAT BEAR THE MODEL AND SERIAL NUMBERS STATED ON THE INSTALLATION START UP RECORD, AND MG SHALL NOT, IN ANY EVENT, BE LIABLE UNDER THE TERMS OF THIS LIMITED WARRANTY UNLESS THIS INSTALLATION START UP RECORD HAS BEEN ENDORSED BY OWNER & DEALER/INSTALLER AND RECIEVED BY MG LIMITED WITHIN 90 DAYS OF START UP.

Limitation: This Limited Express Commercial Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined that other warranties exist, any such express warranty, including without imitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Commercial Warranty.

#### LIMITATION OF REMEDIES

In the event of a breach of the Limited Express Commercial Warranty, MG will only be obligated at MG's option to repair the failed part or unit, or to furnish a new or nebuilt part or unit in exchange for the part or unit which has failed. If after written notice to MG's factory in Petitcodiac, New Brunswick of each defect, malfunction or other failure, and a reasonable number of attempts by MG to correct the defect, malfunction or other failure, and the remedy fails of its essential purpose, MG shall AND EXCLUSIVE REMEDY OF THE BUYER OR PURCHASER AGAINST MG FOR BREACH OF CONTRACT, FOR THE BREACH OF ANY WARRANTY OR FOR MG'S NEGLIGENCE OR IN STRICT LIABILITY.

#### LIMITATION OF LIABILITY

MG shall have no liability for any damages if MG's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes, or work stoppages, fire, flood, accident, shortages of transportation, fuel, material, or labour, acts of God or any other reason beyond the sole control of MG. MG EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR MG'S NEGLIGENCE OR AS STRICT LIABILITY

#### OBTAINING WARRANTY PERFORMANCE

Normally, the dealer or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any MG recognized distributor, dealer or service organization. If assistance is required in obtaining warranty performance, write or call Maritime Geothermal Ltd.

NOTE: Some states or Canadian provinces do not allow limitations on how long an implied warranty lasts, or the limitation or exclusions of consequential or incidental damages, so the foregoing exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and from Canadian province to Canadian province.