





Application, Installation, & Service Manual

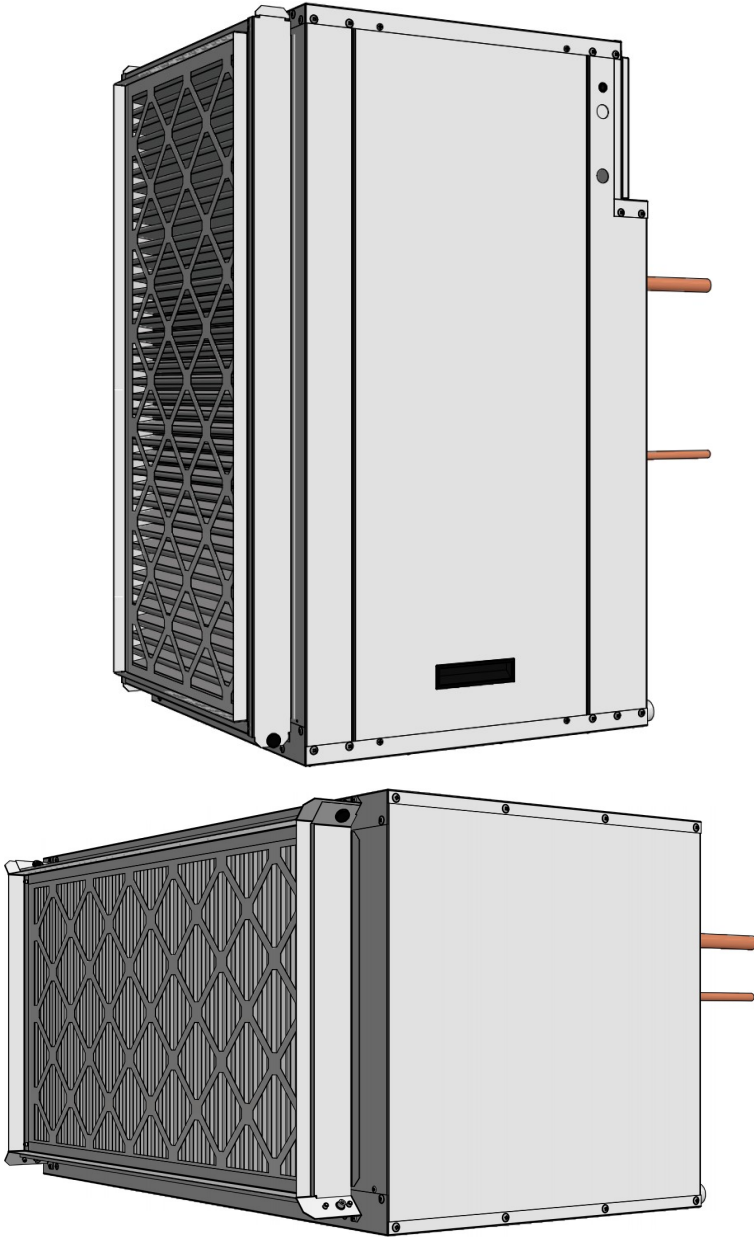

RS-Series Liquid to Air Split Geothermal Heat Pump

Two-Stage R410a
Model Sizes 45-80

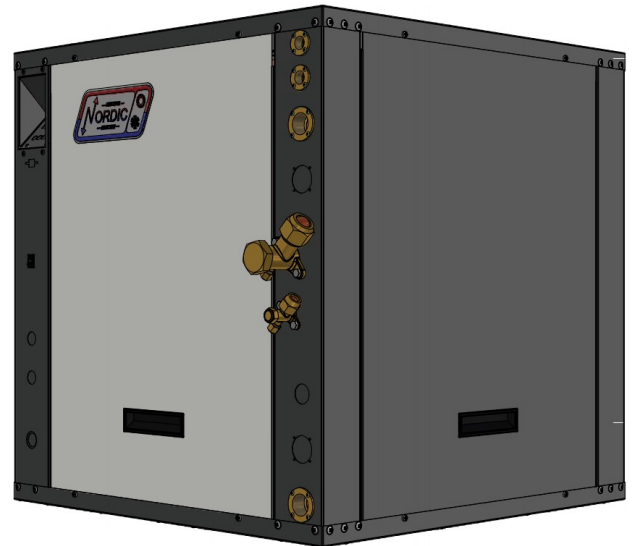

Maritime Geothermal Ltd.
P.O. Box 2555, 170 Plantation Road
Petitcodiac, NB E4Z 6H4
(506) 756-8135



info@nordicghp.com
www.nordicghp.com
002514MAN-03





SAFETY PRECAUTIONS



- WARNING:** Ensure all access panels are in place and properly secured before applying power to the unit. Failure to do so may cause electrical shock.
- WARNING:** Before performing service or maintenance on the heat pump system, ensure all power sources are DISCONNECTED. Electrical shock can cause serious personal injury or death.
- WARNING:** Heat pump systems contain refrigerant under high pressure and as such can be hazardous to work on. Only qualified service personnel should install, repair, or service the heat pump.
- CAUTION:** Safety glasses and work gloves should be worn at all times whenever a heat pump is serviced. A fire extinguisher and proper ventilation should be present whenever brazing is performed.
- CAUTION:** Venting refrigerant to atmosphere is illegal. A proper refrigerant recovery system must be employed whenever repairs require removal of refrigerant from the heat pump.

Model Nomenclature

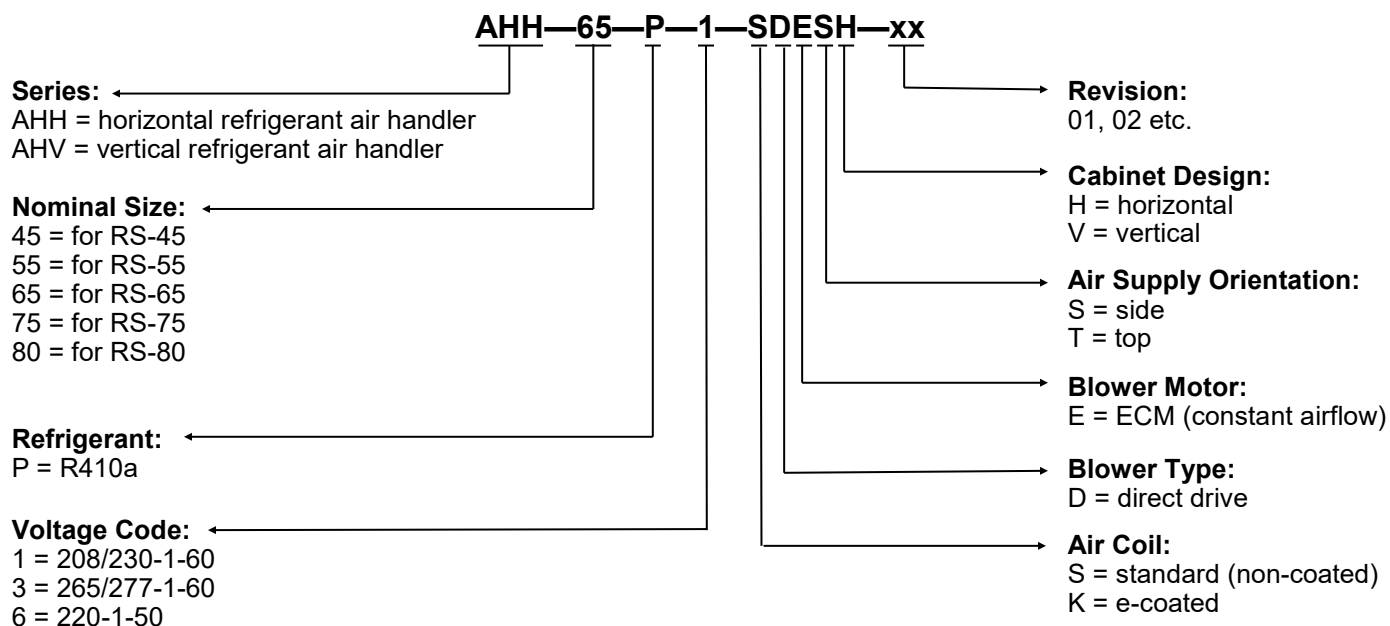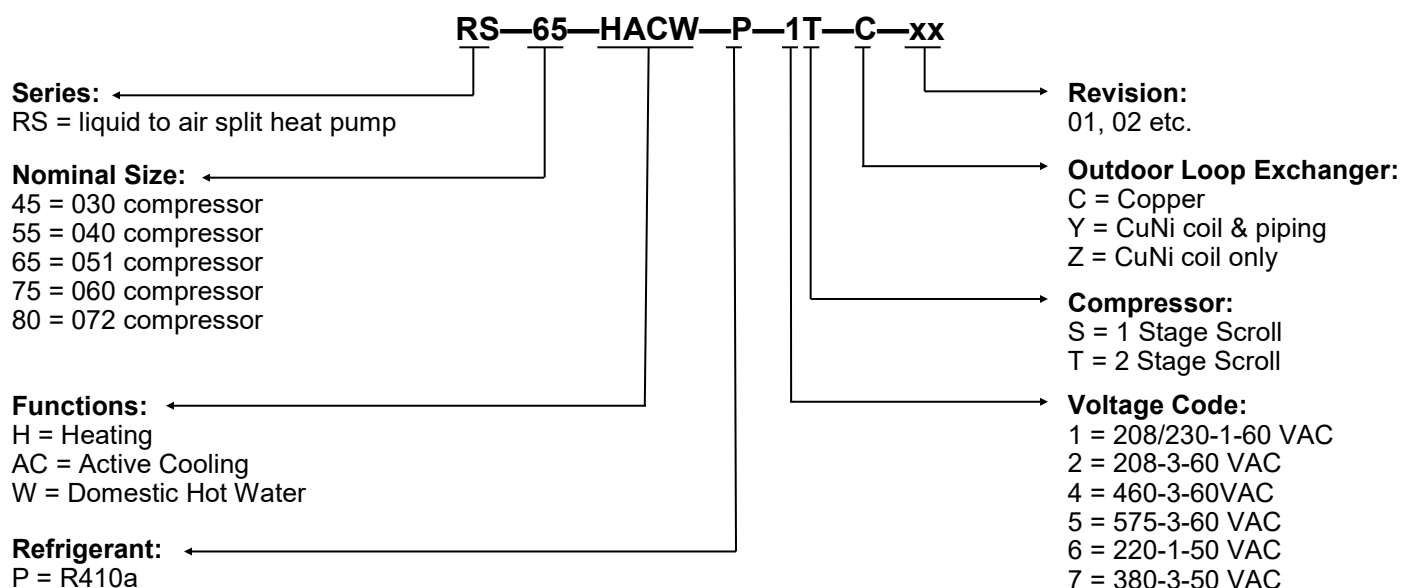

APPLICATION TABLE: RS COMPRESSOR UNIT									
SIZE	FUNCTION	REFRIGERANT	VOLTAGE	COMPRESSOR	OUTDOOR COIL	REVISIONS			
RS-45	HACW	P	1 2 4 5 6 7	T	C Y Z	08			
RS-55	HACW	P	1 2 4 5 6 7	T	C Y Z	08			
RS-65	HACW	P	1 2 4 5 6 7	T	C Y Z	08			
RS-75	HACW	P	1	T	C Y Z	08			
			2	T					
			4	T					
			5	T					
			6	S					
			7	T					
RS-80	HACW	P	1 2 4 5 7	S	C Y Z	08			

APPLICATION TABLE: AHH HORIZ. AIR HANDLER					
SIZE	REFR.	VOLTAGE	CONFIG.	REVISIONS	
AHH-45	P	1 3 6	SDSH	02	
AHH-55	P	1 3 6	SDSH	02	
AHH-65	P	1 3 6	SDSH	02	
AHH-75	P	1 3 6	SDSH	02	
AHH-80	P	1 3 6	SDSH	02	

APPLICATION TABLE: AHV VERT. AIR HANDLER					
SIZE	REFR.	VOLTAGE	CONFIG.	REVISIONS	
AHH-45	P	1 3 6	SDSH	02	
AHH-55	P	1 3 6	SDSH	02	
AHH-65	P	1 3 6	SDSH	02	
AHH-75	P	1 3 6	SDSH	02	
AHH-80	P	1 3 6	SDSH	02	

This manual applies only to the models and revisions listed in these tables.

Maritime Geothermal Ltd. has a continuous improvement policy and reserves the right to modify specification data at any time without prior notice .

Table of Contents

Tables, Figures, & Documents	5	000608INF - Typical Horiz. Ground Loop Configuration	25
RS-Series System Description	6	000609INF - Typical Vert. Ground Loop Configuration	26
General Overview	6	000906CDG - Circulator Pump Module Installation	27
1. Heating Mode	6	001823CDG - Dual Flow Pump Module Installation	28
2. Cooling Mode	6	002336PDG - Pump Module Inst - 2 Units on 1 Loop	29
Factory Options	6	Open Loop Installations	30
RS-Series Sizing	7	Well Water Temperature	30
Heat Pump Sizing	7	Well Water Flow	30
Plenum Heater Sizing	7	Well Water Quality	30
Installation Basics	8	Water Discharge Methods	30
Sample Bill of Materials - Ground Loop Installations	8	Water Valve	31
Sample Bill of Materials - Open Loop Installations	8	Water Flow Control	31
Unpacking the unit	9	Submersible Pump Selection	32
Unit Placement	9	Stage 1 vs. 2 on Open Loop	32
Air Outlet & Return Orientation	9	Plumbing the Heat Pump	32
Plenum Heater Installation (Optional)	9	Pipe Insulation	32
Wiring	10	000907CDG - Typical Open Loop Installation	33
RS Compressor Unit Power Supply Connections	10	001822CDG - Dual Flow Open Loop Installation	34
AHH/AHV Air Handler Power Supply Connections	10	000619INF - Ground Water Disposal Methods	35
Plenum Heater Power Supply Connections	10	Startup Procedure	36
Outdoor Loop Pump Module Wiring (Ground Loop Only)	10	Pre-start Inspection	36
Control Transformer	10	Unit Startup	37
Domestic Hot Water (Desuperheater)	10	Startup Record	38
Thermostat Connections	11	Routine Maintenance	39
Compressor Unit/Air Handler Control Interconnection	11	Maintenance Schedule	39
Plenum Heater Control Connections	11	Troubleshooting Guide	40
Air Handler Blower Motor	11	Repair Procedures	49
002515CDG - Typical RS-Series Wiring Connections	12	Pumpdown Procedure	49
Safety Controls	13	General Repair Procedure	49
Open/Closed Loop LPC Selection	13	Vacuumping & Charging Procedure	49
001901PDG - Wiring For Best Cooling Mode Dehum.	14	Compressor Replacement Procedure	50
Piping	15	Model Specific Information	51
RS Compressor Unit: Domestic Hot Water (Desuperheater)	15	Shipping Information	51
RS Compressor Unit: Outdoor Loop	15	Refrigerant Charge	51
Air Handler: Condensate Drain	15	RS Compressor Unit Sound Levels	51
002516PDG - Typical Piping/Duct Connections	16	Operating Temperature Limits	51
000970PDG - Desup. Connection to DHW Pre-Heat Tank	17	Standard Capacity Ratings	52
002384PDG - DHW Pre-Heat Tank - Multiple Units	18	Pressure Drop Data	53
Refrigerant Connections	19	Performance Tables: RS-45	55
Line Set Interconnect Tubing	19	Performance Tables: RS-55	56
RS Compressor Unit Connections	19	Performance Tables: RS-65	57
AHH/AHV Air Handler Connections	19	Performance Tables: RS-75	58
Oil Traps	19	Performance Tables: RS-80	59
Filter-Dryer	19	Airflow Data	60
Pipe Insulation	20	Electrical Specifications: RS Compressor Unit	61
Silver Soldering Line Sets	20	Electrical Specifications: AHH/AHV Air Handler	62
Pressure Testing	20	Electrical Specifications: Plenum Heater	62
Vacuumping the System	20	Wiring Diagram: RS Compressor Unit (208/230-1-60)	63
Charging the System	20	Electrical Box Layout: RS Compressor Unit (208/230-1-60)	64
Ductwork	21	Wiring Diagram: AHH Horizontal Air Handler	65
Blower Motor	21	Wiring Diagram: AHV Vertical Air Handler	65
Duct Systems - General	21	Refrigeration Circuit - Heating Mode	66
Duct Systems - Grill Layout	21	Refrigeration Circuit - Cooling Mode	67
Thermostat Location	21	Dimensions: Model Size 45	68
Plenum Heater	21	Dimensions: Model Sizes 55/65/75/80	70
Duct Sizing Guide	22	Warranty	72
Ground Loop Installations	23		
Circulator Pump Module	23		
Flushing & Purging	23		
Adding Antifreeze Solution	24		
Initial Pressurization	24		
Pipe Insulation	24		

Tables, Figures, & Documents

Tables

Table 1 - Heat Pump Size vs. Heated Area for a Ground Loop System	7
Table 2 - Heat Pump Size vs. Heated Area for an Open Loop System	7
Table 3 - Plenum Heater Sizing	7
Table 4 - Power Supply Connections (Compressor Unit)	10
Table 5 - Power Supply Connections (Air Handler)	10
Table 6 - Power Supply Connections (Plenum Heater)	10
Table 7 - Ground Loop Circulator Connections	10
Table 8 - Thermostat Signal Connections	11
Table 9 - Control Interconnection	11
Table 10 - Plenum Heater Control Connections	11
Table 11 - Airflow Selections	11
Table 12 - Control Board Fault Codes	13
Table 13 - Line Set Sizing	19
Table 14a - 3-way Service Valve Tooling	19
Table 14b - 3-way Service Valve Torques	19
Table 15 - Extra Charge for Model Size 45	20
Table 16 - Extra Charge for Model Sizes 55-75	20
Table 17 - Heat Pump Size vs. Hot Air Grills	21
Table 18 - Duct Sizing Guide	22
Table 19 - Antifreeze Percentages	24
Table 20 - Volume of Fluid per 100ft. Of Pipe	24
Table 21 - Required Open Loop Flow	30
Table 22 - Shipping Information: RS Compressor Unit	51
Table 23 - Shipping Information: Vertical Air Handlers	51
Table 24 - Shipping Information: Horizontal Air Handlers	51
Table 25 - Refrigerant Charge	51
Table 26 - RS Compressor Unit Sound Levels	51
Table 27 - Operating Temperature Limits	51
Table 28 - Standard Capacity Ratings - Ground Loop Heating 60Hz	52
Table 29 - Standard Capacity Ratings - Ground Water Heating 60Hz	52
Table 30 - Standard Capacity Ratings - Ground Loop Cooling 60Hz	52
Table 31 - Standard Capacity Ratings - Ground Water Cooling 60Hz	52
Table 32 - Loop Pressure Drop Data	53
Table 33 - MED Airflow (nominal).....	61
Table 34 - LOW Airflow (-6%).....	61
Table 35 - HIGH Airflow (+6%).....	61
Table 36 - MAX Airflow (+12%)	61
Table 37 - Electrical Specifications: RS Compressor Unit	62
Table 38 - Electrical Specifications: AHH/AHV Air Handler	63
Table 39 - Plenum Heater Electrical Specifications	63

Figures

Figure 1 - Ground Loop Accessories & Tools	23
Figure 2 - Open Loop Accessories & Tools	31

Documents

002515CDG - Typical RS-Series Wiring Connections	12
001901PDG - Wiring For Best Cooling Mode Dehumidification	14
002516PDG - Typical Piping/Duct Connections - RS Series	16
000970PDG - Desuperheater Connection to DHW Pre-Heat Tank	17
002384PDG - Desuperheater Connection to DHW Pre-Heat Tank - Multiple Units	18
000608INF - Typical Horizontal Ground Loop Configuration	25
000609INF - Typical Vertical Ground Loop Configuration	26
000906CDG - Geo-Flo Circulator Pump Module Installation	27
001823CDG - Dual Flow Circulator Pump Module Installation for 2-Stage Heat Pumps.....	28
002336PDG - Circulator Pump Module Installation - Two Units on One Ground Loop.....	29
000907CDG - Typical Ground Water (Open Loop) Installation	33
001822CDG - Dual Flow Groundwater (Open Loop) Installation for 2-Stage Heat Pumps	34
000619INF - Ground Water Disposal Methods	35
001235SCH - RS-Series Schematic Diagram 208/230-1-60	63
001236ELB - RS-Series Electrical Box Diagram 208/230-1-60	64
001746SCH - AHH Schematic Diagram	65
001747SCH - AHV Schematic Diagram	65
001233RCD - RS-Series Refrigeration Circuit - Heating Mode	66
001234RCD - RS-Series Refrigeration Circuit - Cooling Mode	67

RS-Series System Description

General Overview

The **Nordic** RS-series is a split water source heat pump (with remote indoor air handler) that can heat or chill air in a forced air duct system. As opposed to a package heat pump, a split system provides the ability to locate the compressor unit and air handler in different locations.

Being a 'ground source', 'water source', 'geoexchange', or 'geothermal' heat pump, the RS-series does require either a **closed ground loop** or **open loop water well** for a heat source/sink. There is no outdoor fan unit for ground source heat pumps.

In addition to the main space heating/cooling functions, there is a double-wall desuperheater for pre-heating domestic hot water with ~5% of the heat pump's capacity. This function is only active when the heat pump is running for space heating or cooling purposes. An energy-efficient bronze head ECM circ pump for the desuperheater circuit is built in, along with a temperature control.

A two-stage scroll compressor with suction accumulator is standard. The blower motor is a premium constant-airflow ECM. The outdoor loop refrigerant to water heat exchanger is a heavy duty coaxial copper / steel model, with optional CuNi inner tube available for open loop applications. Thermostatic expansion valves (TXVs) regulates superheat. The cabinets are constructed from powder coated galvanized sheet metal.

1. Heating Mode

In heating mode, the system heats warm air in a duct system. Heat is extracted from the ground loop or well water. The heat pump is activated by a standard 3H/2C 24V room thermostat, which will call for stage 1 or stage 2 heat according to its own algorithm. The thermostat can also call for stage 3 (due to air temperature falling further below the setpoint, or after a certain run time), which will activate the optional electric plenum heater. The plenum heater accessory is available in different sizes to provide either full backup or partial auxiliary heat.

If a closed ground loop is used, the circulation pumps are powered and controlled by the heat pump; if open loop, a water valve is opened by the heat pump during heating operation and closed when the heat pump is idle.

2. Cooling Mode

In cooling mode, the system cools air in the duct system. Heat is extracted from the ducted air stream and rejected to the ground loop or well water.

Air Handler Options

There are two **Nordic** air handler configurations available, horizontal (AHH) or vertical (AHV). Third party air handlers can also be used with the **Nordic** RS compressor unit; in this case caution should be used to select an air handler that has a large enough refrigeration volume to provide good performance.



RS-Series Sizing

Heat Pump Sizing

The following table is a rough guideline as to the size of space each heat pump size can handle for **ground loop (closed loop)** installations.

TABLE 1 - Heat Pump Size vs. Heated Area for a Ground Loop System		
Model	ft ²	m ²
RS-45	1400	130
RS-55	2000	185
RS-65	2600	240
RS-75	3100	290
RS-80	3500	325

The following table is a rough guideline as to the size of home each heat pump size can handle for **ground water (open loop)** installations.

TABLE 2 - Heat Pump Size vs. Heated Area for an Open Loop System		
Model	ft ²	m ²
RS-45	1800	165
RS-55	2500	230
RS-65	3200	295
RS-75	3800	355
RS-80	4200	390

THE TABLES ABOVE ARE FOR ESTIMATION ONLY. THEY SHOULD NOT BE USED TO SELECT A FINAL UNIT SIZE. They simply show what size unit is required for a northern home with typical construction: R20 walls, R40 ceiling, and average size and number of windows. The heated area is the area of the above grade main level; the tables account for a basement the same size as the heated area.

MARITIME GEOTHERMAL LTD. HIGHLY RECOMMENDS THAT A PROPER HEAT LOSS/GAIN ANALYSIS BE PERFORMED BY A PROFESSIONAL WITH APPROVED CSA F-280 SOFTWARE BEFORE SELECTING THE HEAT PUMP SIZE. For heating dominant climates, we recommend sizing the unit to 100% of the heating design load for maximum long term efficiency with minimal supplementary heat. The unit should be installed as per CSA standard 448.2-02. For ground loop applications, the ground loop should be designed using suitable software with a multi-year analysis.

The analysis will result in a heat load for the coldest day, which is influenced by, for example, the number of levels, the size of the windows, the orientation of the home, attached garage, bonus rooms, walk-in basement, and coldest outdoor temperature for the region.

A heat pump model size can then be selected by comparing the calculated heat load to the heat pump capacity at the standard indoor air temperature, which can be found in the performance tables in the [Model Specific Information](#) section. For RS-series, the *Standard Capacity Ratings* rather than detailed performance tables can be used for simplicity. For 100% heat pump sizing, choose a heat pump with a standard capacity rating that matches or just slightly exceeds the calculated heat load.

Some background on *Standard Capacity Ratings*: closed ground loops are normally designed to reach a minimum temperature of just below freezing at the end of the heating season, in order to take advantage of the latent heat of groundwater (at least in northern climates). Hence, the Standard Capacity Ratings for Ground Loop Heating should apply in all northern climates. Conversely, the Standard Capacity Ratings for Ground Water (open loop) heat pumps assume a well water temperature of 50°F (10° C). In more southerly climates, the groundwater or ground loop will probably be at a warmer minimum temperature, and it will be necessary to consult the more detailed performance tables for heat pump output at a different ELT.

In cooling dominant climates, the heat pump should be similarly sized using the Ground Loop Cooling or Ground Water Cooling Standard Capacity Ratings. **Even in northern heating dominant climates, it should be ensured that 100% of the cooling load will be covered when sizing the heat pump, since there is normally no auxiliary or backup cooling available.**

Plenum Heater Sizing

The plenum heater is available as an accessory in 5, 7, 10, 15 and 20kW sizes. If full backup is desired, choose a size that covers **100% of the coldest day heat load**, according to the heat loss analysis mentioned in the last section. If that is not available, use the following recommendation:

TABLE 3 - Plenum Heater Sizing			
Model	Plenum Heater Size (kW)		
	Full Backup	Internally Possible	Not Internally Possible
AHH/AHV-45	10	5, 7, 10	15, 20*
AHH/AHV-55	10	5, 7, 10, 15, 20	
AHH/AHV-65	15	5, 7, 10, 15, 20	
AHH/AHV-75	20	5, 7, 10, 15, 20	
AHH/AHV-80	20	5, 7, 10, 15, 20	
* Although these plenum heaters will not fit inside heat pump, there are versions available for external mounting.			

Two styles of plenum heater are available; the first is for internal installation (inside the air handler). Note limit for size 45 in above table.

The second has a wider element profile for installation outside the unit, in the ductwork.

Installation Basics

Sample Bill of Materials - Ground Loop Installations

FROM MARITIME GEOTHERMAL

- RS SERIES COMPRESSOR UNIT
- AHH (HORIZ.) OR AHV (VERTICAL) AIR HANDLER
- PLENUM HEATER ___kW
- THERMOSTAT (WIFI OR STD)
- P/T PORTS AND HOSE ADAPTERS (2)
- 1 OR 2 PUMP PACK
- PIPE ADAPTERS FOR PUMP PACK

OPTIONAL FROM MARITIME GEOTHERMAL

- ANTI-VIBRATION PAD FOR UNDER COMPR. UNIT
- SOUND JACKET
- SECURE START
- ELECTROSTATIC FILTER

DUCTWORK

- OUTLET PLENUM ADAPTER W/ FLEXIBLE COLLAR
- RETURN AIR ADAPTER W/ FLEXIBLE COLLAR
- FIBREGLASS INSULATION (FOR NOISE, IF REQ'D)
- TRUNK DUCT W/ JOINERS (IF NOT EXISTING)
- 6" ROUND DUCT W/ADAPTERS (IF NOT EXISTING)
- ALUMINUM TAPE
- SHEET METAL SCREWS

DHW

- PREHEAT TANK, 40 OR 60 GAL
- 1/2" COPPER PIPE
- 1/2" FITTINGS, BALL VALVES, BOILER DRAINS, CV

GROUND LOOP

- 3/4" PE PIPE
- 1-1/4" PE PIPE
- PE PIPE FITTINGS
- 1" CLEAR HOSE (HEAT PUMP TO PUMP PACK)
- HOSE CLAMPS
- ANTIFREEZE: METHANOL OR PROP. GLYCOL

ELECTRICAL

- COMPRESSOR UNIT SERVICE WIRE: 6-3 OR 8-3
- AIR HANDLER SERVICE WIRE: 14-2
- PLENUM HEATER SERVICE WIRE
- HEAT PUMP BREAKER
- AIR HANDLER BREAKER
- PLENUM HEATER BREAKER
- THERMOSTAT WIRE 18-8 (THERMOSTAT TO RS)
- THERMOSTAT WIRE 18-5 (INTERCONNECTION RS-AH)
- THERMOSTAT WIRE 18-2 (RS-PLENUM HEATER)
- FORK TERMINALS FOR TSTAT WIRE (10)
- CONDENSATE PUMP & HOSE (IF REQUIRED)

REFRIGERATION

- 1/2" & 7/8" (OR 3/8" & 3/4") ACR TUBING
- PIPE INSULATION
- EXTRA R410A REFRIGERANT FOR LINESETS >20 FT
- 2" STYROFOAM INSUL. (IF PAD NOT PURCHASED)

Sample Bill of Materials - Open Loop Installations

FROM MARITIME GEOTHERMAL

- RS SERIES COMPRESSOR UNIT
- AHH (HORIZ.) OR AHV (VERTICAL) AIR HANDLER
- PLENUM HEATER ___kW
- THERMOSTAT (WIFI OR STD)
- P/T PORTS AND HOSE ADAPTERS (2)
- DOLE VALVE
- MOTORIZED WATER VALVE

OPTIONAL FROM MARITIME GEOTHERMAL

- ANTI-VIBRATION PAD FOR UNDER COMPR. UNIT
- SOUND JACKET
- SECURE START
- ELECTROSTATIC FILTER

DUCTWORK

- OUTLET PLENUM ADAPTER W/ FLEXIBLE COLLAR
- RETURN AIR ADAPTER W/ FLEXIBLE COLLAR
- FIBREGLASS INSULATION (FOR NOISE, IF REQ'D)
- TRUNK DUCT W/ JOINERS (IF NOT EXISTING)
- 6" ROUND DUCT W/ ADAPTERS (IF NOT EXISTING)
- ALUMINUM TAPE
- SHEET METAL SCREWS

DHW

- PREHEAT TANK, 40 OR 60 GAL
- 1/2" COPPER PIPE
- 1/2" FITTINGS, BALL VALVES, BOILER DRAINS, CV

WATER SYSTEM

- 1" BLACK PLASTIC WATER PIPE
- 1" BARBED FITTINGS & HOSE CLAMPS
- VSP SUBMERSIBLE PUMP (IF NOT EXISTING)
- PRESSURE TANK (IF NOT EXISTING)
- CYCLE STOP VALVE (IF FIXED SPEED PUMP)

ELECTRICAL

- COMPRESSOR UNIT SERVICE WIRE: 6-3 OR 8-3
- AIR HANDLER SERVICE WIRE: 14-2
- PLENUM HEATER SERVICE WIRE
- HEAT PUMP BREAKER
- AIR HANDLER BREAKER
- PLENUM HEATER BREAKER
- THERMOSTAT WIRE 18-8 (THERMOSTAT TO RS)
- THERMOSTAT WIRE 18-5 (INTERCONNECTION RS-AH)
- THERMOSTAT WIRE 18-2 (RS-PLENUM HEATER)
- FORK TERMINALS FOR TSTAT WIRE (10)
- CONDENSATE PUMP & HOSE (IF REQUIRED)

REFRIGERATION

- 1/2" & 7/8" (OR 3/8" & 3/4") ACR TUBING
- PIPE INSULATION
- EXTRA R410A REFRIGERANT FOR LINESETS >20 FT
- 2" STYROFOAM INSUL. (IF PAD NOT PURCHASED)

Unpacking the Unit

When the RS compressor unit and air handler reach their destination, they should be immediately unpacked to determine if any damage has occurred during shipment. Any visible damage should be noted on the carrier's freight bill and a suitable claim filed at once.

The heat pump is well constructed and every effort has been made to ensure that it will arrive intact, however it is in the customer's best interest to examine the unit thoroughly when it arrives.

Unit Placement

Ducted or forced air heat pumps should be centrally located in the home with respect to the conditioned space. A heating system cannot be expected to produce an even temperature throughout the building when it is located at one end of the structure and the heated or cooled air is transmitted with uninsulated metal ductwork.

A split **RS**-series heat pump provides the flexibility of locating the air handler in the most central location for air ducting, while locating the compressor unit in a mechanical room (noting that that interconnecting line set cannot be more than 70 ft long).

Compressor unit:

The front access panel where pipe connections are located and right side access panel should remain clear of obstruction for a distance of **2 ft (0.7 m)** to facilitate servicing and maintenance. No access is required on the back side.

Raising the compressor unit off the floor a few inches is generally a good practice since this will prevent rusting of the bottom panel of the unit and deaden vibrations. An anti-vibration pad, available as an accessory, or a piece of 2" styrofoam should be placed under the unit.

Air Handler:

The front access panel (with the fan motor behind it) should remain clear of obstruction for a distance of **2 ft (0.7 m)** to facilitate servicing and general maintenance.

Ensure the unit is level to eliminate any possible condensate draining issues. The vertical air handler has an air filter rack which can be installed with the removable end (where the filter is inserted) on either side to facilitate changing the filter. The horizontal air handler has a filter rack on which any side can be removed for air filter change. Be careful not to run piping in front of the filter rack access cover, since access is required in order to change the air filter.

Air Outlet & Return Orientation

On both the horizontal and vertical air handlers, the air outlet and return locations are **fixed** and not field-changeable. Therefore there are no factory options like right/left return. Installation flexibility is provided by having the freedom to orient the air handler separately from the compressor unit.

Looking at the side of the air handler where the refrigerant pipes come out (the side that has the fan motor access panel), air returns or flows into the unit from the back side. The back side is where the filter rack is located.

On the AHH horizontal air handler, air is discharged to the right. On the AHV vertical air handler, air is discharged upward.

Refer to the [Dimensions](#) section toward the end of this manual for physical dimensions of the units.

Plenum Heater Installation (Optional)

The plenum heater is normally mounted into the air handler cabinet. Remove the screws from the cover plate, remove the cover plate, and place the plenum heater in the cutout. Slide it toward the air outlet and secure the bottom flange with three cover plate screws. For horizontal AHH model, use the indicated knockouts on the air handler cabinet for electrical connections.

When installation is complete, check the appropriate box of the label on the unit door to indicate which size heater was installed.

A plenum heater can also be installed in the air discharge duct outside the heat pump cabinet in a manner that allows all of the airflow to pass through it to prevent any hot spots in the heater elements. There is an accessory plenum heater available with a wider element cage for this application. Ensure that the plenum heater is mounted in an approved position as per its instructions.

Wiring

NOTE: Three separate power supplies are required, for the compressor unit and air handler and plenum heater. Each must have its own supply wires and breaker.

RS Compressor Unit Power Supply Connections

The compressor unit has a concentric 1.093" / 0.875" knockout for main power supply connection from the breaker panel to its electrical box. (There are also 0.875" knockouts and a plastic grommet for control connections to thermostat, plenum heater, air handler, and water valve; and power to ground loop pump pack.)

A schematic diagram (SCH) and electrical box layout diagram (ELB) can be found on the electrical box cover of the unit as well as in the [Model Specific Information](#) section of this manual. The Electrical Tables in the [Model Specific Information](#) section contain information about the wire and breaker



NOTE: A properly qualified electrician should be retained for all connections to the heat pump and associated controls. The connections to the unit **MUST CONFORM TO LOCAL CODES.**



IMPORTANT NOTE FOR 3-PHASE UNITS: If on startup compressor is noisy and not pumping, reverse L1 and L2 supply wires.

TABLE 4 - Power Supply Connections (Compr. Unit)

Line	Description	Voltages
L1	Line 1	All
L2	Line 2	All
L3	Line 3	3-phase only
GND	Ground	All (connect to ground lug)
N	Neutral	208/230-1-60**, 208-3-60**, 380-3-50

** Neutral only required if connecting 115VAC circulators to the heat pump for 208/230-1-60 and 208-3-60 models (the heat pump itself does not require a neutral). Neutral is required for 380-3-50 models for desuperheater operation.

AHH/AHV Air Handler Power Supply Connections

The air handler is powered from its own breaker. Note that only single phase electrical service is available for the **Nordic AHH/AHV**, so the advice of an electrician or alternate air handling units should be sought for 3-phase installations.

TABLE 5 - Power Supply Connections (Air Handler)

Line	Description
L1	Line 1
L2	Line 2
GND	Ground

Use a 2-conductor outdoor rated 14ga cable.



IMPORTANT NOTE: Local codes may require a disconnect switch visible and/or reachable from the air handler to be installed in the power supply cable.

Plenum Heater Power Supply Connections

The plenum heater is powered from its own breaker.

TABLE 6 - Power Supply Connections (Pl. Heater)

Line	Description	Voltages
L1	Line 1	All
L2	Line 2	All
L3	Line 3	3-phase only
GND	Ground	All (connect to ground lug)

Outdoor Loop Pump Module Wiring (Ground Loop Only)

The compressor unit has provision for connecting the circulator pump module so that the pumps will be turned on whenever the compressor operates. Connect the circulator pump module to the appropriate two terminals (115V or 230V) of the terminal strip marked **OUTDOOR CIRCULATORS**, as per the voltage of the circulator pump module. Ground wire should be connected to the ground lug in the electrical box. Ensure that the total current draw does not exceed the value indicated on the label in the heat pump electrical box.

TABLE 7 - Ground Loop Circulator Connections

Terminal	Description
115V	Connection for 115V circulator
115V	
230V	Connection for 230V circulator
230V	

Use a 2-conductor 14ga cable.

Control Transformers

The compressor unit and air handler each have their own 24vac class II control transformer. 208/230-1-60 and 208-3-60 models have a resettable breaker on the secondary side for circuit protection. Should the breaker trip, locate and correct the problem and then reset the breaker by pressing in on it.

All other voltage models have a transformer with primary and secondary fuses for circuit protection.



IMPORTANT NOTE: For 208/230VAC-1-60 units, if connecting to 208VAC power supply move the red wire connected to the 240 terminal of the transformer to the 208 terminal of the transformer.

Domestic Hot Water (Desuperheater)

The desuperheater (located in the compressor unit) is pre-wired and no field connections are necessary. There is a built-in temperature switch to turn off the built-in DHW circulator when the output temperature reaches 140°F (60°C), and on again when the temperature falls to 120°F (49°C).

After the desuperheater is filled with water and purged of air, activate the built-in DHW circulator by connecting the brown wire with the blue insulated terminal to L1 of the compressor contactor as shown on the wiring diagram in the [Model Specific Information](#) section. **Ensure the power is off when connecting the wire.** Also, turn on the DHW ON/OFF switch.

Thermostat Connections

The air/room thermostat is connected to the compressor unit, which in turn acts as a master to the air handler.

A three-stage heating and two stage cooling heat pump configurable thermostat is required for two-stage models. The stages are S1 = Stage 1 compressor, S2 = Stage 2 compressor and S3 = electric auxiliary (heating only). One can be purchased with the unit, or other heat pump thermostats with the same number of stages can be used. Refer to diagram on a following page for connections between the thermostat and the heat pump.

NOTE: A very few models are not available in two-stage. Model numbers with a T in the Compressor designator are two-stage; models with an S are single stage (verify the model number against pages 2 and 3 of this manual, or refer to the [Electrical Specifications](#) near the end of this manual to determine if the model is two stage or one stage). The Y2 signal is not used for these units, and they only require a 2 stage heat 1 stage cool

TABLE 8 - Thermostat Signal Connections

Signal	Description
C	24VAC Common (Ground)
G	Fan low speed (for air recirculation)
Y1	Heat Pump Stage 1
R _H	24VAC Hot
L	Fault (24VAC when fault condition)
W ₂	Heat Pump Stage 3 (auxiliary heat) / Emergency Heat
O	Cooling Mode (reversing valve)
Y2	Heat Pump Stage 2 (not used for single stage units)
Use an 18-8 thermostat cable.	

Compressor Unit / Air Handler Control Interconnection

The RS compressor unit receives commands from the air/room thermostat and controls the air handler accordingly. Five control wires must be installed between the units for this purpose. These are all dry contact connections, meaning the control transformers in the RS unit and the air handler remain isolated from each other.

TABLE 9 - Control Interconnection

Signal	Description
F _R	24VAC from air handler
F _G	24VAC back to AH for fan low speed / recirc. (If using a third party air handler with a single speed fan, connect F _R and F _G only.)
F _{Y1}	24VAC back to AH for stage 1 fan speed
F _{Y2}	24VAC back to AH for stage 2 fan speed
F _{W2}	24VAC back to AH for stage 3 / aux. fan speed
Use an 18-5 thermostat cable.	

Plenum Heater Control Connections

The plenum heater is activated in a similar way by the compressor unit: when the compressor unit receives a stage 3 heating demand on W₂ from the thermostat, it controls the plenum heat accordingly. Two control wires must be installed between the units for this purpose. These are all dry contact connections, meaning the control transformers in the RS unit and the plenum heater remain isolated from each other.

TABLE 10 - Plenum Heater Control Connections

Signal	Description
I	24VAC from plenum heater (Connect to C or I in plenum heater)
1	24VAC back to plenum heater for ON command (Connect to 1 and 2 in plenum heater)

Air Handler Blower Motor

The Nordic AHH/AHV air handler is equipped with a direct drive ECM fan motor for maximum efficiency. The motor features a soft start which provides a smooth, quiet ramp up to operating speed. The motor will maintain the programmed air flow up to the maximum external static value.


The air flow can be set to four different levels by manually changing the wire position on the tap board located in the air handler's electrical box. The four levels are indicated in the below table. Refer also to the airflow tables in the [Model Specific Information](#) section. Units are shipped with the MED position selected for nominal air flow.

The air flow can be further reduced by 15% by making a dry contact across AR₁ and AR₂ on the air handler's terminal strip. This can be used by a zone controller or other external relay for applications that have multiple zones, or retrofits with undersized ductwork to help reduce air flow noise. It is recommended that airflow reduction only be used with the HIGH or MAX air flow setting. Care should be taken to ensure that the unit does not trip a safety control in heating or cooling mode if the 15% reduction is used in conjunction with the MED or LOW air flow setting.

TABLE 11 - Airflow Selections

Position	Airflow
LOW	-6%
MED	Nominal
HIGH	+6%
MAX	+12%

Typical RS-Series Wiring Connections

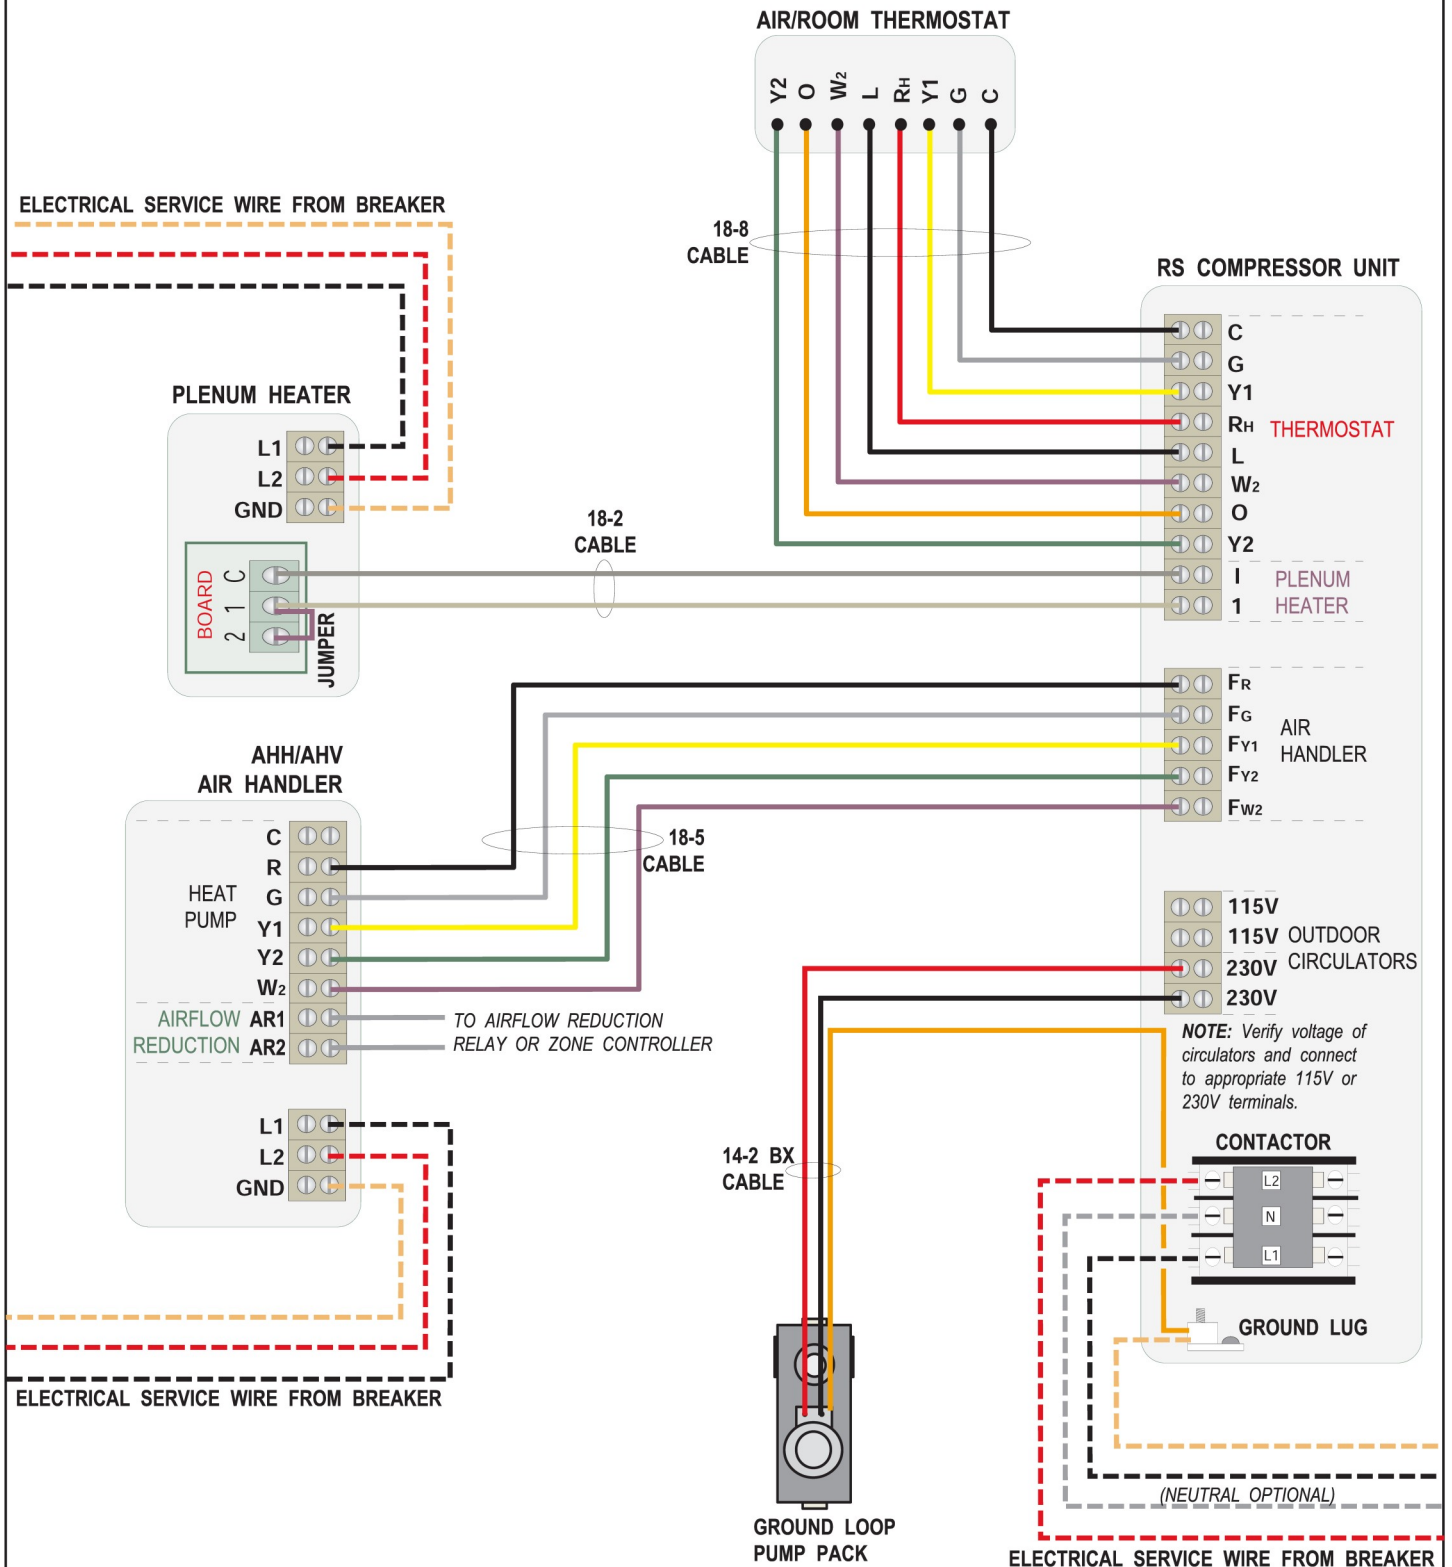

					Drawn By Dan Rheault	Date 2-June-2021	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Dan Rheault	Date 2-June-2021				
					Approved By (ENG)	Date	Typical RS-Series Wiring Connections			
					Approved By (MFG)	Date				
01	Initial Release	Dan Rheault	Dan Rheault	2-June-2021	Approved By	Date	Size A	Drawing Number 002515CDG	Drawing Rev 01	Sheet 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Safety Controls

The heat pump has two important built in safety controls which are designed to protect the unit from situations which could damage it should the operation of the refrigeration circuit fall outside the allowable operating range.

1. High Pressure Control

The high pressure safety control monitors the compressor discharge pressure and will shut the compressor down if the condensing pressure becomes too high.

There are (3) main reasons this control would activate in response to the operating conditions of the unit while operating in heating mode:

1. Low or no airflow.
2. High air temperature (unlikely).
3. Plugged air filter, or dirty air coil.
4. High refrigerant charge after service, or mechanical malfunction (see [Troubleshooting](#) section).

2. Low Pressure Control

The low pressure control monitors the compressor suction pressure and will shut the compressor down if the refrigerant evaporating pressure becomes too low, risking the danger of freezing conditions in the evaporator.

There are (3) main reasons this control would activate in response to the operating conditions of the unit while operating in heating mode:

1. Low or no outdoor loop flow.
2. Low outdoor loop entering liquid temperature.
3. Dirty or fouled outdoor loop heat exchanger.
4. Low refrigerant charge due to leak, or mechanical malfunction (see [Troubleshooting](#) section).

The unit contains a control board that monitors the safety controls and operates the compressor accordingly. The low pressure control and high pressure controls are connected to the control board as shown on the wiring diagram later in this manual.

The compressor will not be allowed to start if a 'fault' condition exists. A 'fault' occurs if either one of the pressure controls exhibits an open circuit. In addition, the board monitors the voltage of the 24vac transformer. A fault will occur if a low voltage condition (electricity grid brownout) is detected.

The control board has an on-board LED and an ALR pin with a 24VAC output, which is routed to the L terminal of the thermostat terminal strip. An external indicator or relay can be connected across L and C on the terminal strip if external signaling is desired. Should a fault condition occur, the LED will flash the code of the fault condition. The codes are shown in the following table. The control board will lock out the compressor for five minutes when a fault occurs. The control board will then restart the compressor if the fault has been cleared. Should a second fault condition occur within a 60 minute period the control board will go into permanent lockout mode and energize the ALR pin. The LED will flash the fault code until the control board is reset by powering down the unit.

The board has a **TEST** jumper, which defeats the 5 minute anti-short cycle timer for test purposes. If left in the TEST position, it will time out and return to normal operation after a set time period. This is to prevent compressor short cycling and possible damage or shortened lifespan if the jumper is accidentally left in the TEST position.

There are also **FREEZE TEMP** and **WATER TEMP** jumpers on the control board. **These are not used and have no effect on heat pump operation.**

TABLE 9 - Control Board Fault Codes

Fault	LED Flashes
High Pressure	1
Low Pressure	2
Brownout	5

Open/Closed Loop LPC Selection

There are two low pressure safety controls in the heat pump: 75 psi for open loop (water), and 55 psi for closed loop (antifreeze). As shipped, the closed loop LPC will be active.

If an open loop is used, it is very important to remove the jumper plug located in the wiring harness behind the piping post, and replace it with the water valve connection harness that comes with the water valve from Maritime Geothermal. This will automatically select the higher LPC, and ensure that the heat pump is properly protected from freezing. It will also ensure the water valve is open before starting the compressor.


See wiring diagram in the [Model Specific Information](#) section for water valve wiring.

Water-to-Air Heat Pumps: Wiring for Best Cooling Mode Dehumidification in Heating-Dominant Climates


Dehumidification is maximized by maximizing run time.

In heating-dominant climates, where heat pump is generally sized for the heating load, maximizing run time in cooling mode can be achieved by disabling the Y2 signal when the O signal is on.

This should be done only if the cooling load is less than 2/3 of the heating load. This can be checked on the heating/cooling load analysis that is often done as part of the installation design.

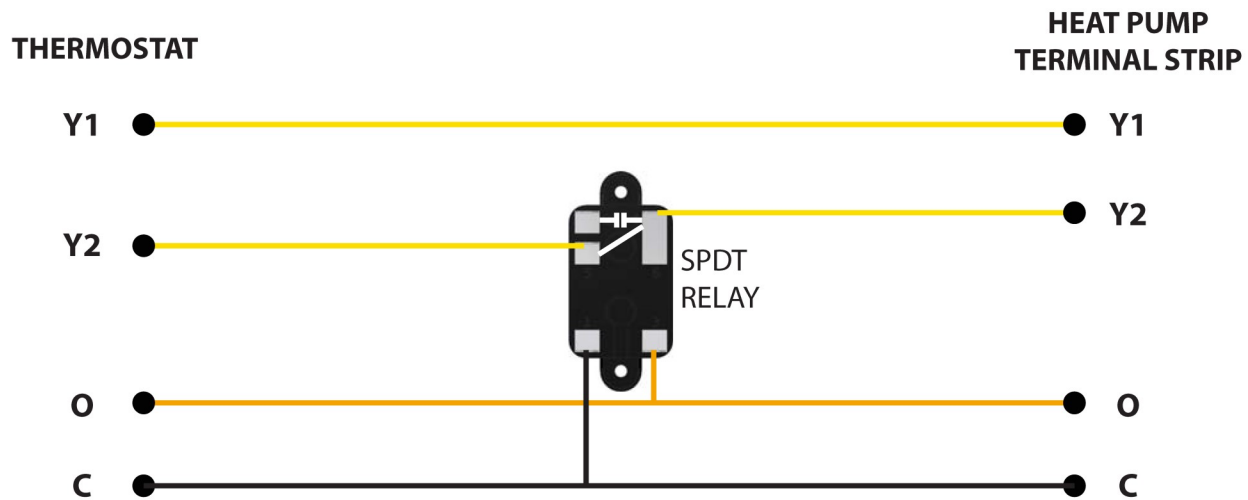

On many open loop systems, where the sizable submersible pump power negates the COP benefit of running on stage 1, Y1 and Y2 are jumpered together. In this case, the wiring should be modified as follows. With this wiring, the heat pump will always run on stage 1 in cooling mode and stage 2 in heating mode.

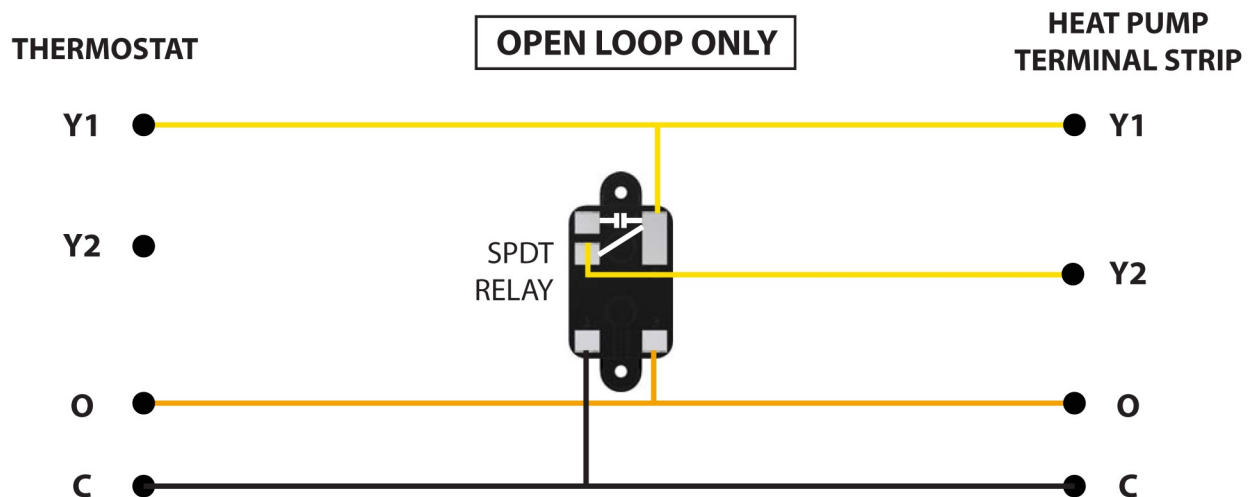

					Drawn By Dan Rheault	Date 9-Dec-2014	MARITIME GEOTHERMAL LTD. <small>P.O. Box 2555 170 Plantation Rd. Petitcodiac, NB CANADA E4Z 6H4</small>		
					Checked By Dan Rheault	Date 9-Dec-2014			
					Eng. Approved By	Date	Drawing Name		
					Mfg. Approved By	Date	Wiring for Cooling Mode in Heating-Dominant Climates		
					Approved By	Date	Size LET	Drawing Number 001901PDG	Revision 01
01	Initial Release	Dan Rheault	Dan Rheault	9-Dec-2014					
REV	ECO#	IMPL BY	APVD BY	DATE					

Piping

RS Compressor Unit: Domestic Hot Water (Desuperheater)

The connections for the DHW circuit are 1/2" brass FPT fittings. They are marked DHW IN and DHW OUT.

A typical piping diagram for a pre-heat tank configuration can be found in document **000970PDG** at the end of this section. Be sure to note the position of the check valve and the direction of water flow. Other configurations are possible, and there may be multiple units tied together in larger buildings.



WARNING: USE ONLY COPPER LINES TO CONNECT THE DESUPERHEATER. TEMPERATURES CAN BE >200°F NEAR THE UNIT WITH DESUPERHEATER TURNED OFF, POTENTIALLY MELTING & RUPTURING PLASTIC PIPING.

Ensure the tank is filled with water and under pressure before activating the built-in DHW circulator as described below. First, slightly loosen the boiler drain on the DHW Out pipe to allow air to escape from the system. This step will make certain that the domestic hot water circulator in the unit is flooded with water when it is started.



CAUTION: the domestic hot water pump is water lubricated; damage will occur to the pump if it is run dry for even a short period of time.

Activate the built-in DHW circulator by connecting the brown wire with the blue insulated terminal to L1 of the compressor contactor. **Ensure the power is off when connecting the wire.** Once connected the DHW switch on the front of the unit may be used to enable/disable the domestic hot water circulator.

The DHW loop may have to be purged of air several times before good circulation is obtained. A temperature difference between the DHW In and DHW Out can be felt by hand when the circulator pump is operating properly.

For the pre-heat tank setup, the final tank should be set to **140°F (60°C)**, which is required by most codes. The pre-heat tank does not require electric elements. This setup takes full advantage of the desuperheater as it is the sole heat provider to the pre-heat tank. The desuperheater remains active during the compressor runtime until the pre-heat tank has been completely heated by the desuperheater alone. This setup is more energy efficient than a single tank setup, and eliminates the possibility of reverse heating of the refrigerant gas under low condensing temperature operating conditions.



CAUTION: If two (2) shut-off valves are located on the domestic hot water lines as shown in the diagram, a pressure relief valve must be installed to prevent possible damage to the domestic hot water circulator pump should both valves be closed.

Note that connection and use of the desuperheater is optional, and there is no problem for the heat pump if desuperheater is left unconnected.

RS Compressor Unit: Outdoor Loop

The connections for the Outdoor Loop circuit are 1" brass female NPT. They are labelled OUTDOOR IN and OUTDOOR OUT.

See the following chapters for details on ground loop and open loop installations.


Air Handler: Condensate Drain

The air handler comes equipped with one 3/4" female PVC socket drain connection. This drain allows the condensate which forms during the air conditioning cycle to be removed from the unit. The drain should be connected and vented as per local codes. During high humidity weather, there could be as much as 25 gallons of water formed per day.

The condensate drain is **not** internally trapped and **requires** an external trap. An external condensate pump may be installed if there is not sufficient slope to drain condensate under gravity to its destination.

To avoid overflow of the condensate pan, the drain line and trap should be inspected periodically to ensure they are not plugged with accumulated debris. There may be an alarm for condensate overflow, which will disable unit operation.

Typical Piping/Duct Connections - RS Series

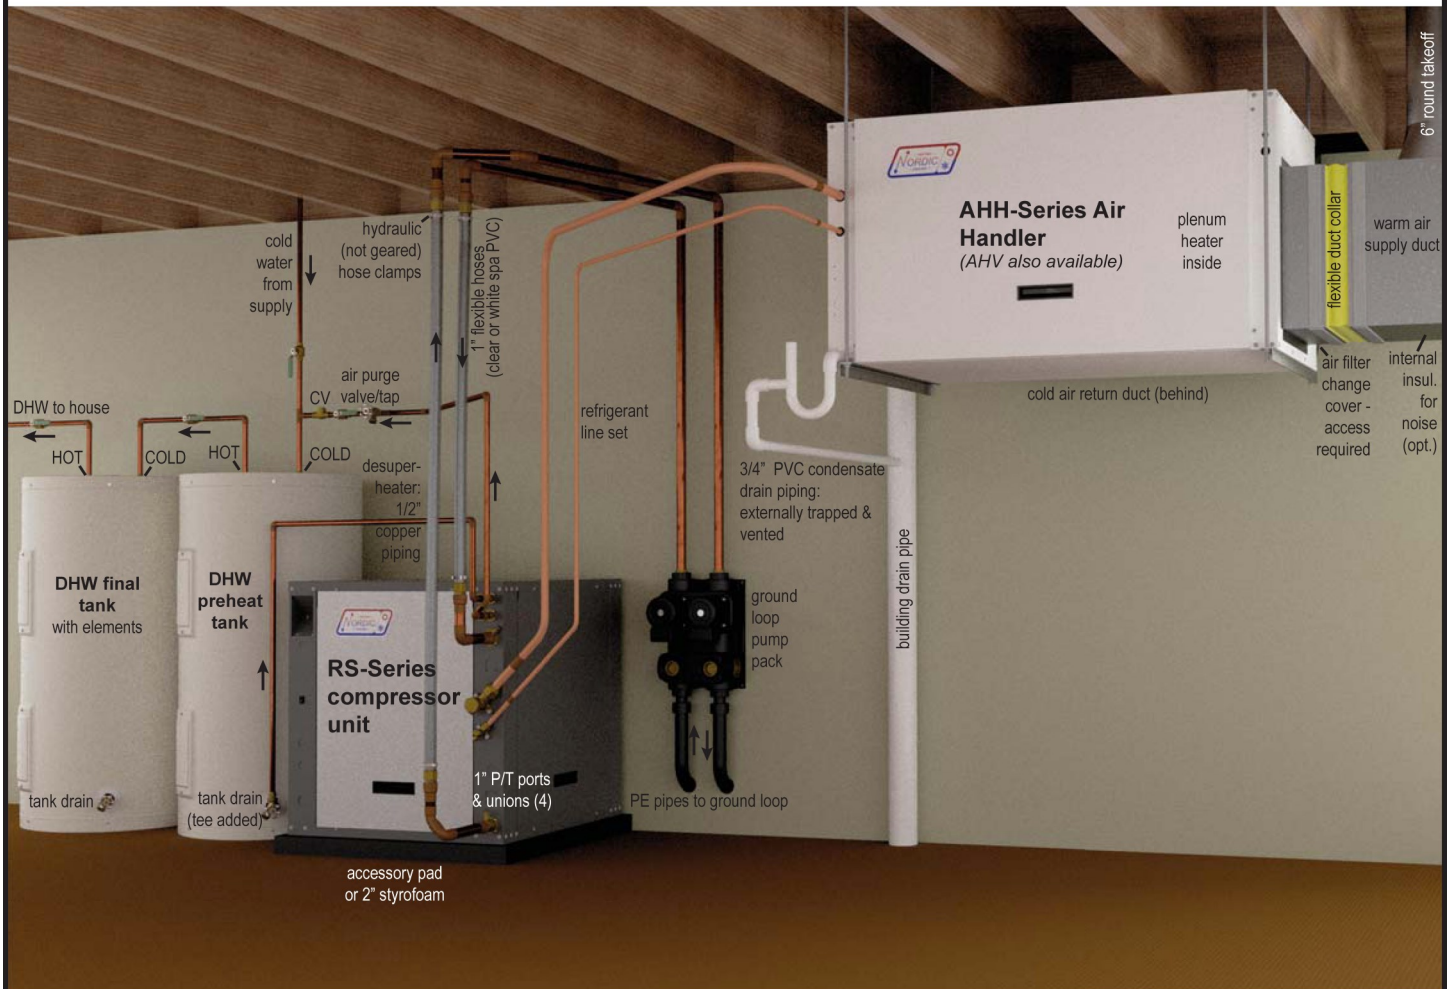

See other diagrams and instructions in the manual for design, selection, and installation details of ground loop and accessories.

Many of the items illustrated in this diagram are available as accessories from Maritime Geothermal Ltd.. Other items are commonly available from plumbing or HVAC wholesalers.


There are some valid connection methods or details which differ from those shown, including:

- Open loop installation, which uses a well water system in place of a ground loop.
- A vertical Nordic (AHV-series) air handler, or 3rd party air handler
- Piping or air ducting routed differently from that shown, or different piping & component types.


					Drawn By Dan Rheault	Date 4-Jun-2021	MARITIME GEOTHERMAL LTD. P.O. Box 2555 170 Plantation Rd. Petitcodiac, NB CANADA E4Z 6H4			
					Checked By Dan Rheault	Date 4-Jun-2021				
					Eng. Approved By	Date	Drawing Name Typical Piping/DuctConnections - RS Series			
					Mfg. Approved By	Date				
					Approved By	Date	Size LET	Drawing Number 002516PDG	Revision 01	Sheet 1 / 1
01	Initial Rel.	Dan Rheault	Dan Rheault	4-Jun-2021						
REV	ECO#	IMPL BY	APVD BY	DATE						

Desuperheater Connection to DHW Pre-Heat Tank

Top Port Configuration

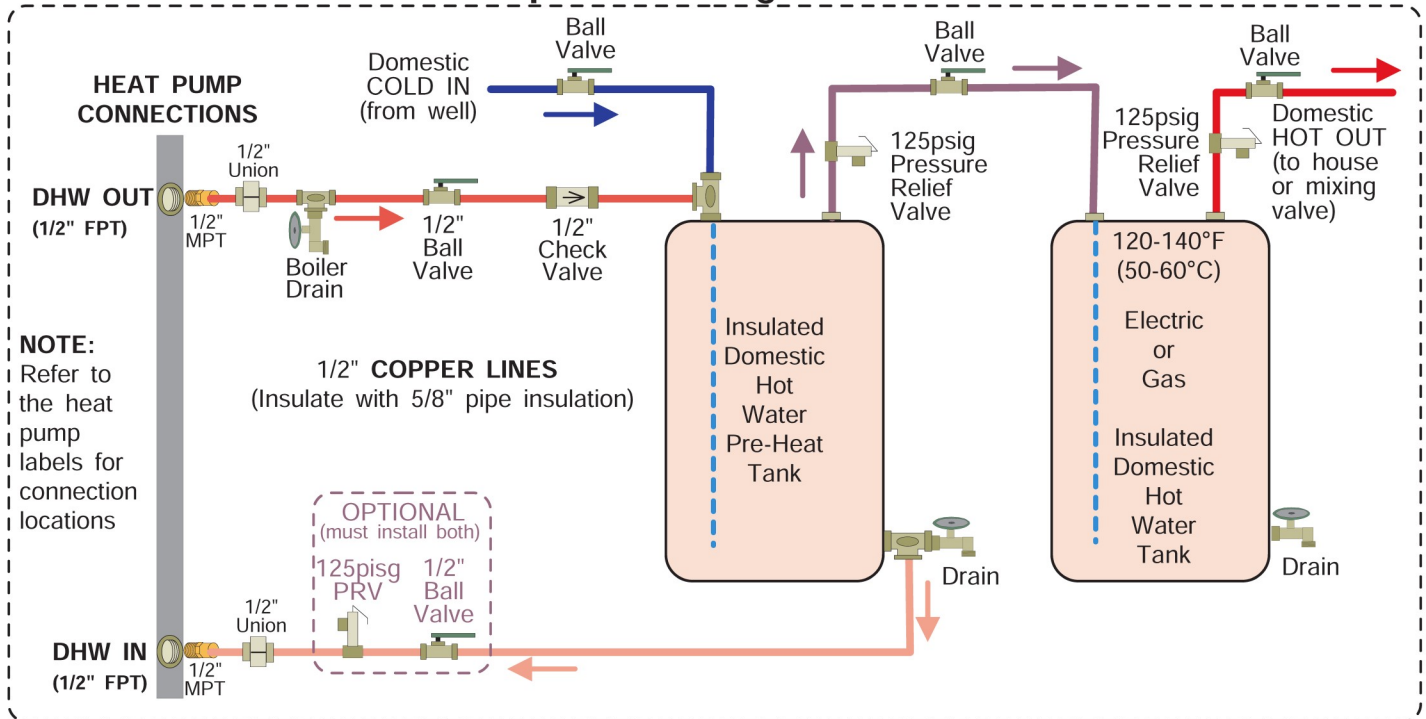


Side Port Configuration

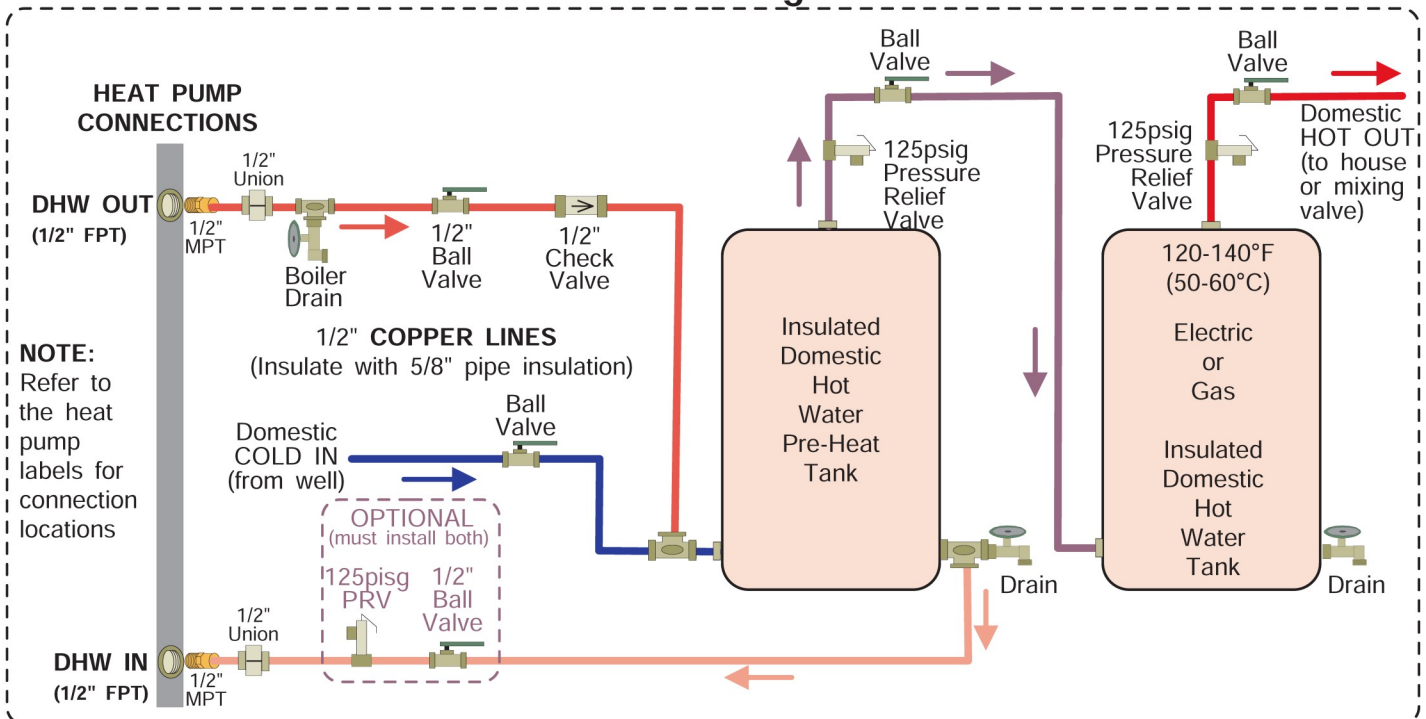

					Drawn By Chris Geddes	Date 10 MAR 09	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Petitcodiac, NB E4Z 6H4</div>			
					Checked By Chris Geddes	Date 10 MAR 09				
01a	Re-titled	D. RHEAULT	D. RHEAULT	15 JAN 19	Approved By Chris Geddes	(ENG) Date 10 MAR 09	Drawing Name Single Unit Connection to DHW Pre-Heat Tank (Brass FPT)			
01	Initial Release	C. GEDDES	C. GEDDES	10 MAR 09	Approved By	(MFG) Date				
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A	Drawing Number 000970PDG	REV 01a	SHEET 1 of 1

Desuperheater Connection to DHW Pre-Heat Tank - Multiple Units

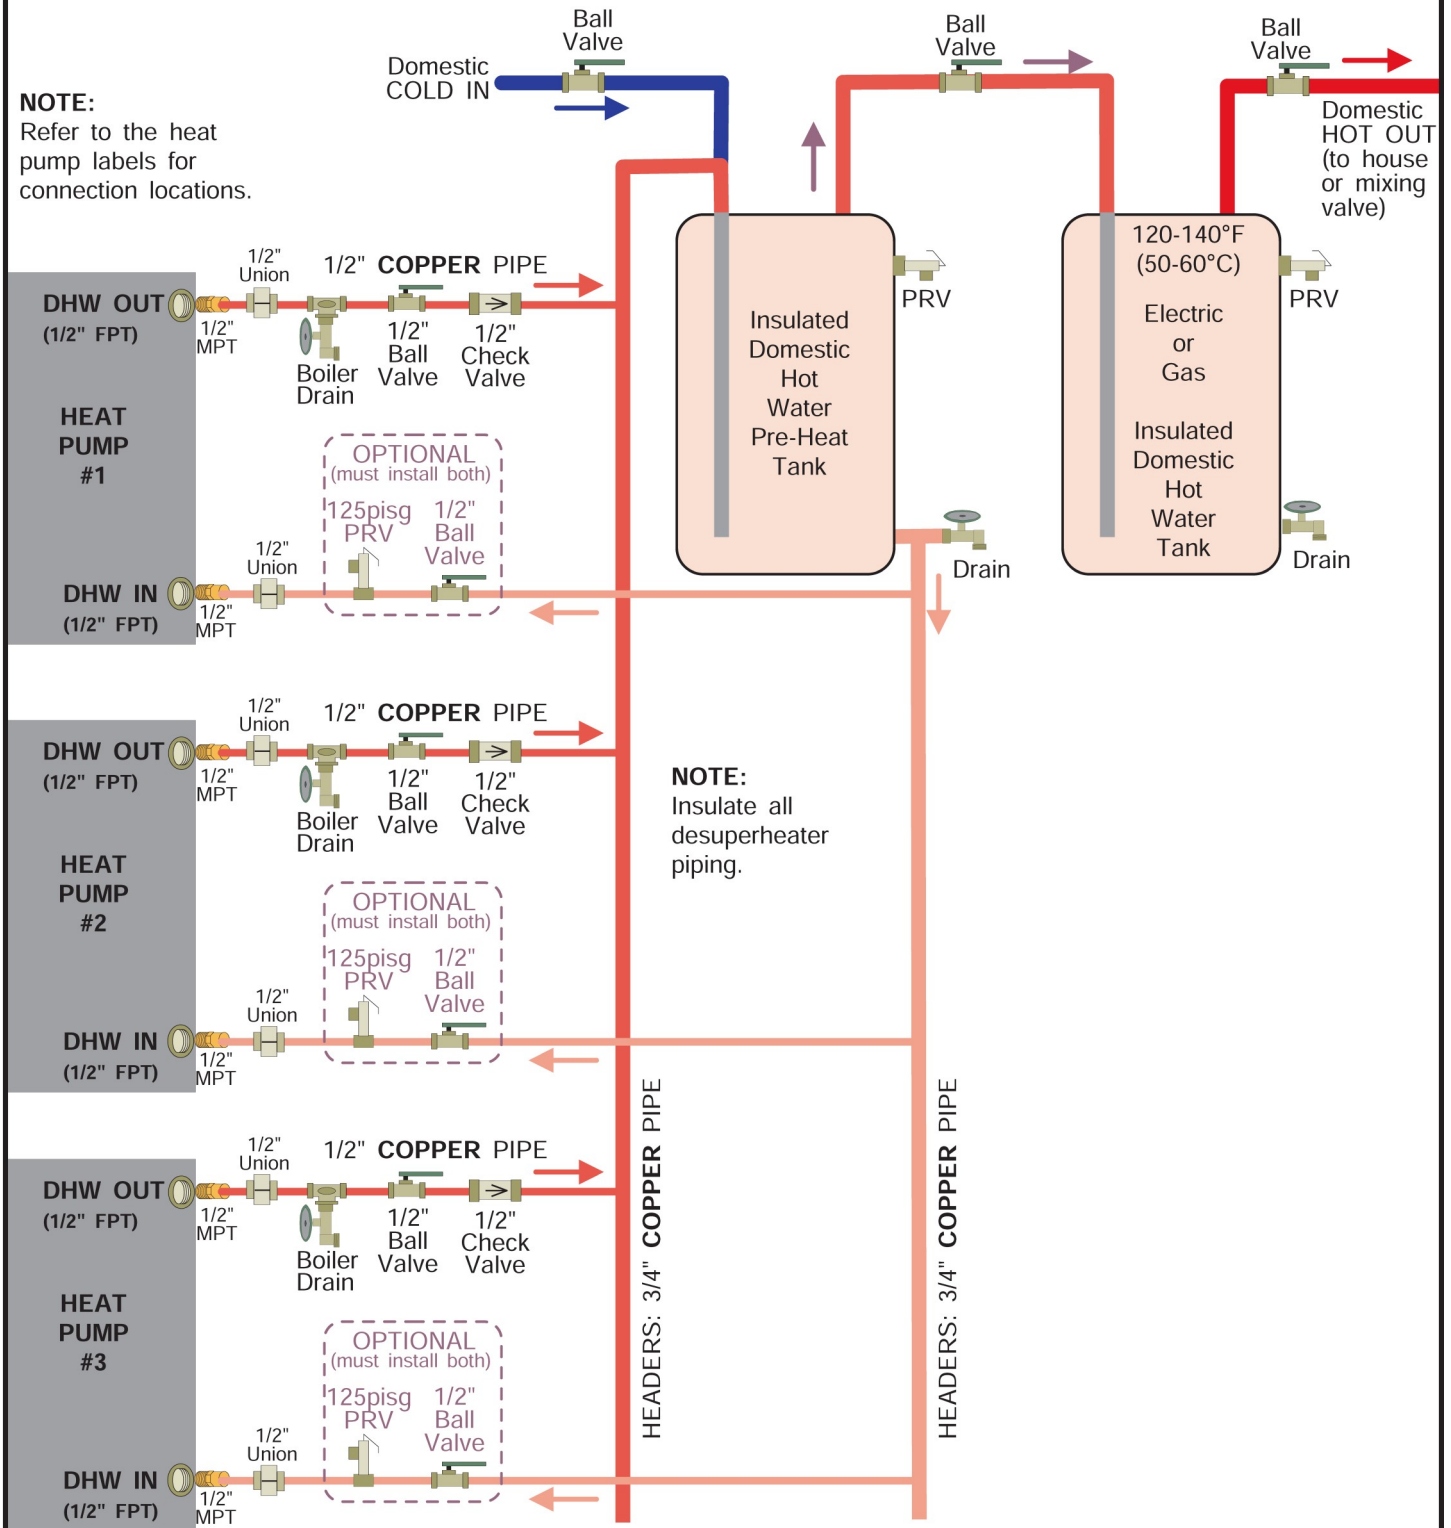

					Drawn By Dan Rheault	Date 24-Apr-2019	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Pettitcodiac, NB E4Z 6H4</div>			
					Checked By Dan Rheault	Date 24-Apr-2019				
					Approved By Dan Rheault	(ENG) Date 24-Apr-2019	Drawing Name Multiple Unit Desuperheater Connection to DHW Pre-Heat Tank (Brass FPT)			
					Approved By (MFG)	Date				
01	Initial Release	D. RHEAULT	D. RHEAULT	24-Apr-2019	Approved By	Date	Size A	Drawing Number 002384PDG	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Refrigerant Connections

Line Set Interconnect Tubing

Once both the RS compressor unit and AHH/AHV air handler have been mounted, the line set may be run between them. The line set consists of a liquid line and a vapour line.

The tubing used for this procedure must be ACR refrigeration tubing (cleaned & dehydrated). Every effort must be made to insure that the tubing does not become contaminated during installation. It is recommended that caps be placed on the open ends of tubing immediately after cuts are made and that these caps are only removed after all bends have been made and the pipe fixed in its permanent location ready to make the silver soldered joints. It is very important to keep a refrigeration system perfectly clean and dry. Removing the caps just prior to silver soldering or flaring will ensure minimum exposure to humidity in the atmosphere.

TABLE 13 - Line Set Sizing

RS-45	Vapour line O.D.	3/4"
	Liquid line O.D.	3/8"
RS-55/65/75/80	Vapour line O.D.	7/8"
	Liquid line O.D.	1/2"



IMPORTANT NOTE: The line set between the compressor unit and air handler must not exceed 70 ft. (21 m) in length.

RS Compressor Unit Connections

The connections for the interconnect line set are 3-way brass service valves with flare connections. After the line set is installed, the tubing can be vacuumed through the Schrader charging port on the 3-way valve, then the valve opened to let refrigerant contained in the compressor unit into the line set and air handler.

The RS compressor unit comes pre-charged with enough refrigerant for a 20 ft (6.1 m) line set. Longer line sets will require added charge; see next page.

Copper flare to solder adapters are included with the RS compressor unit, to remove the requirement to do an accurate flare in the field, especially on the larger 7/8" pipe. These are placed near the compressor or in the electrical box.

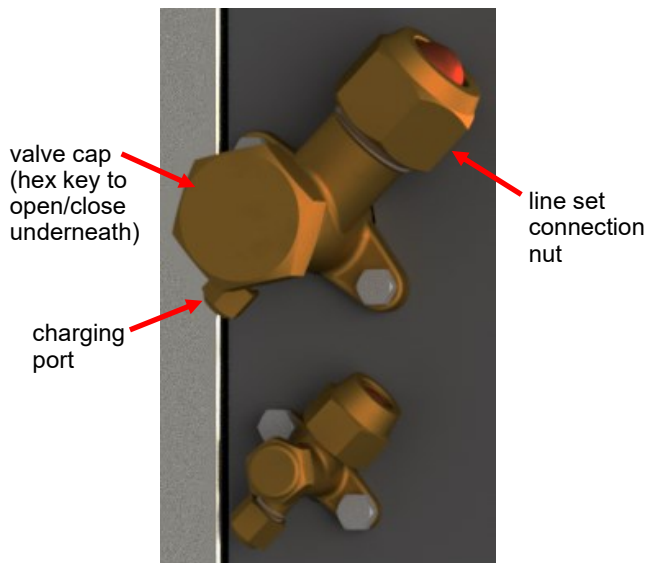


TABLE 14a - 3-way Service Valve Tooling

Nominal Size	Line set connection nut wrench	Hex key to open/close	Valve cap wrench	Charging port cap wrench
3/8"	22 mm (7/8")	5 mm (3/16")	19 mm (3/4")	14 mm (9/16")
1/2"	24 mm (1")	5 mm (3/16")	19 mm (3/4")	14 mm (9/16")
3/4"	32 mm (1-3/8")	5 mm (3/16")	30 mm (1-1/4")	14 mm (9/16")
7/8"	38 mm (1-1/2")	8 mm (5/16")	42 mm (1-3/4")	14 mm (9/16")

TABLE 14b - 3-way Service Valve Torques

Nominal Size	Line set connection nut torque	Hex key torque	Valve cap torque	Charging port cap torque
3/8"	30-35 N.m (22-26 ft.lb)	5-7 N.m (4-5 ft.lb)	20-25 N.m (15-18 ft.lb)	10-12 N.m (7-9 ft.lb)
1/2"	40-45 N.m (30-33 ft.lb)	7-9 N.m (5-7 ft.lb)	25-30 N.m (18-22 ft.lb)	10-12 N.m (7-9 ft.lb)
3/4"	60-65 N.m (44-48 ft.lb)	11-13 N.m (8-10 ft.lb)	35-40 N.m (26-29 ft.lb)	10-12 N.m (7-9 ft.lb)
7/8"	110-120 N.m (81-88 ft.lb)	28-32 N.m (21-24 ft.lb)	47-53 N.m (35-39 ft.lb)	10-12 N.m (7-9 ft.lb)

AHH/AHV Air Handler Connections

The air handler unit has capped off (soldered) pipes from the factory and is charged with 15 - 25 psig of nitrogen. Cut off the end of the pipe and braze onto line set tubing, using a coupling. See diagram in [Piping](#) chapter for a typical installation.

Oil Traps

If the line set has a vertical rise of over 20 ft (6 m), then an oil trap must be placed in the line set every 20 ft (6 m) of rise.

Filter-Dryer

Note that no field installed filter-dryer is required, since one is included in the RS compressor unit.

Pipe Insulation

All line set refrigerant piping between the two units should be insulated with 3/8" thick closed cell pipe insulation to prevent condensation and dripping onto floors or walls during the heating season. It can be slid onto the capped tubing without having to slice it down the side for the most part. Ensure that any joints in the line sets are accessible for leak testing.

Liquid and vapour ports and any remaining exposed tubing should be insulated with 3/8" thick closed cell pipe insulation once the silver soldering and pressure testing is complete. Ensure that all individual pieces of pipe insulation are glued to each other so there are no air gaps.

Silver Soldering Line Sets

All joints are to be silver soldered with 5% silver solder. **It is absolutely required that dry nitrogen be bled through the system during all silver soldering procedures so that no oxidation occurs on the inside of the copper tubing.** Connect a set of refrigeration gauges to the service ports (Schrader ports) on the access valves of the RS compressor unit, the low side (blue hose) to the vapour line and the high side (red hose) to the liquid line. Connect the charge line (yellow hose) to a nitrogen source. Disconnect the high side (red) hose at the manifold so that nitrogen may flow freely through the line set. Adjust the nitrogen pressure through the low side (blue hose) so that it can be very lightly felt when a finger is placed on the disconnected high side (red) hose.

A wet rag may be wrapped around each of the air handler pipes to prevent melting the grommet when silver soldering; however this may not be necessary for a skilled welder due to the distance from the grommet. Ensure that no water enters any of the ports or tubing.

Pressure Testing

Once all connections are complete, the system should be pressure tested to a final test pressure of **125 psig (860 kPa)** with dry nitrogen. Reconnect the high side (red) hose to the manifold and pressurize the line set. It is recommended to pressure test in stages, listening and inspecting for leaks along the way. For example, 10 psig (70 kPa), 25 psig (170kPa), 75 psig (520kPa) and then finally 125PSIG (860kPa). Check all joints at the unit and any made in the interconnect tubing for leaks using soap suds, Spray Nine, etc. It is important not to bypass this step as vacuuming the system with a leak will be impossible and attempting to do so will introduce moisture into the system, making the vacuum process take much longer than if the leak had been found and repaired first. It is recommended that the system be left under pressure for a minimum of two hours to ensure there are no small leaks that were undetected.

Vacuuming the System

Remove the pressure from the system and connect the vacuum pump to the charge line (yellow hose) of the refrigeration manifold. Tighten all hose connections, open the valves on the manifold and start the vacuum pump.

Vacuum the system until the reading on an electronic vacuum gauge remains below 500 microns for a period of 5 minutes after the vacuum pump is shut off and the system sealed.

Charging the System

The RS compressor unit is pre-charged for line sets up to **20 ft** long. Once the system has been vacuumed, if extra refrigerant is required due to the length of the line set, it may be added before opening the access valves. Close off the charge valve on the refrigeration manifold set and disconnect the vacuum pump. Connect the charge (yellow) hose to the **liquid port** of a refrigerant tank and place the tank on a scale. Open the liquid valve of the refrigerant tank and then slightly loosen the charge (yellow) hose at the manifold until liquid comes out, then quickly re-tighten the hose. This will ensure that no air enters the system. Zero the scale and then add the amount of refrigerant calculated from the tables below.

Once the additional charge (if any) has been added, disconnect both hoses from the service ports of the access valves and place the caps back on them, tighten with a wrench.

Remove the caps from the access valves and open both valves with a hex key. Open the valves (counter-clockwise) until they stop turning. Replace the caps and tighten with a wrench.

TABLE 15 - Extra Charge for Model Size 45			
Extra charge for line sets >20 ft (6 m)	1.1 oz per ft OR 0.10 kg per m		
Line set length (ft)	Extra Charge		
	(oz)	(lb)	(kg)
22	2	0.1	0.06
24	4	0.3	0.12
26	7	0.4	0.19
28	9	0.6	0.25
30	11	0.7	0.31
32	13	0.8	0.37
34	15	1.0	0.44
36	18	1.1	0.50
38	20	1.2	0.56
40	22	1.4	0.62
42	24	1.5	0.69
44	26	1.7	0.75
46	29	1.8	0.81
48	31	1.9	0.87
50	33	2.1	0.94
52	35	2.2	1.00
54	37	2.3	1.06
56	40	2.5	1.12
58	42	2.6	1.19
60	44	2.8	1.25
62	46	2.9	1.31
64	48	3.0	1.37
66	51	3.2	1.43
68	53	3.3	1.50
70	55	3.4	1.56

TABLE 16 - Extra Charge for Model Sizes 55-80			
Extra charge for line sets >20 ft (6 m)	2.1 oz per ft OR 0.18 kg per m		
Line set length (ft)	Extra Charge		
	(oz)	(lb)	(kg)
22	4	0.3	0.12
24	8	0.5	0.24
26	13	0.8	0.36
28	17	1.1	0.48
30	21	1.3	0.60
32	25	1.6	0.71
34	29	1.8	0.83
36	34	2.1	0.95
38	38	2.4	1.07
40	42	2.6	1.19
42	46	2.9	1.31
44	50	3.2	1.43
46	55	3.4	1.55
48	59	3.7	1.67
50	63	3.9	1.79
52	67	4.2	1.91
54	71	4.5	2.02
56	76	4.7	2.14
58	80	5.0	2.26
60	84	5.3	2.38
62	88	5.5	2.50
64	92	5.8	2.62
66	97	6.0	2.74
68	101	6.3	2.86
70	105	6.6	2.98

Ductwork

Blower Motor

The AHH/AHV air handler is equipped with a direct drive ECM blower. See Wiring chapter for description and airflow adjustment.

Refer to airflow tables in the [Model Specific Information](#) section for airflows with the various reductions.

Duct Systems - General

Ductwork layout for a heat pump will differ from traditional hot air furnace design in the number of leads and size of main trunks required. Air temperature leaving the heat pump is normally **95° -105°F (35-40°C)**, much cooler than that of a conventional fossil fuel furnace. To compensate for this, larger volumes of lower temperature air must be moved and consequently duct sizing must be able to accommodate the greater airflow without creating a high static pressure or high velocity at the floor diffusers.

A duct system capable of supplying the required airflow is of utmost importance. Maritime Geothermal Ltd. recommends that the external static pressure from the duct system be kept below 0.2 inches of water total. In some instances the number of floor diffusers will actually double when compared to the number that would be used for a hot air oil-fired furnace. Refer to following tables.

1. Generally allow **100 cfm** for each floor grill.
2. All leads to the grills should be 6" in diameter (28sq.in. each).
3. The main hot air trunks should be at least 75% of the cross sectional area of leads being fed at any given point.
4. Return air grills should have a minimum of the same total cross sectional area as the total of the supply grills.
5. The cross sectional area of the return trunks should equal the cross sectional area of the grills being handled at any given point along the trunk.

It is **VERY IMPORTANT** that all turns in both the supply trunks and the return trunks be made with **TURNING RADII**. Air act like a fluid and, just like water, pressure drop is increased when air is forced to change direction rapidly around a sharp or irregular corner.

It is recommended that flexible collars be used to connect the main trunks to the heat pump. This helps prevent any vibrations from travelling down the ductwork. If a plenum heater is installed, the collar should be at least 12" away from the heater elements.

If desired, the first 5-10 feet of the main supply trunks can be insulated internally with acoustical duct insulation to further inhibit any noise from the unit from travelling down the ductwork. If a plenum heater is installed, insulation should not be placed within 12" of the heater elements.

Duct Systems - Grill Layout

Most forced air heating systems in homes have the floor grills placed around the perimeter of the room. Supply grills should be placed under a window when possible to help prevent condensation on the window. As mentioned in the previous sub-section, supply grill leads should be 6" in diameter (28 square inches each) to allow **100 cfm** of airflow.

In a typical new construction, there should be one supply grill for every 100 square feet of area in the room. When rooms require more than one grill, they should be placed in a manner that promotes even heat distribution, such as one at each end of the room. It is always a good idea to place a damper in each grill supply or place adjustable grills so that any imbalances in the heat distribution can be corrected.

The total number of supply grills available is based on the heat pump nominal airflow. The table shows the number of grills recommended per heat pump size.

TABLE 17 - Heat Pump Size vs. Hot Air Grills		
Model	Size (tons)	# of Grills (@100 cfm)
45	3	12
55	4	15
65	5	19
75	6	21
80	6.5	23

Return grills should be mounted on the floor. At minimum they should be the same size as the supply grill, **it is highly recommended that they be 25% to 50% larger than the total supply**. They should be placed opposite the supply grills when possible to ensure distribution across the room. For rooms requiring more than one supply grill, it may be possible to use one larger return grill if it can be centrally positioned opposite of the supply grills, however it is preferred to have one return for each supply to optimize heat distribution across the room.

Thermostat Location

Most homes are a single ducted air zone with one thermostat. The thermostat should be centrally located within the home, typically on the main floor. It should be placed away from any supply grills, and should not be positioned directly above a return grill. Most installations have the thermostat located in a hallway, or on the inner wall of the living room. It should be noted that most homes do not have any supply ducts in the hallway. This can lead to a temperature lag at the thermostat if there is very little air movement in the hallway, causing the home to be warmer than indicated by the thermostat.

Plenum Heater

The plenum heater will be usually installed inside the air handler, as described in the [Installation Basics](#) section. It also may be installed in the discharge ductwork outside the unit, at least 12" away from any flexible duct collars. There is an accessory plenum heater with a wider cage profile available that is more suitable for duct installation.

TABLE 18 - Duct Sizing Guide (external static of 0.20" H₂O)

Airflow (CFM)	Minimum Duct Area (sq.in)	Diameter (in)	Rectangular Equivalents (in)						Return Air Diameter (in)	Airflow (L/s)
37	20	5	2.25 x 10	3 x 8	3.5 x 6	4 x 5.5	5 x 5		← 5	17
63	20	5	2.25 x 10	3 x 8	3.5 x 6	4 x 5.5	5 x 5		↗ 6	30
100	28	6	3.25 x 10	4 x 8	5 x 6	5.5 x 5.5	6 x 6		← 7	47
152	38	7	3.25 x 14	4 x 11	5 x 8.5	6 x 7	6.5 x 6.5		← 8	72
212	50	8	4 x 15	5 x 12	6 x 10	7 x 8	8 x 8		← 9	100
226	50	8	4 x 15	5 x 12	6 x 10	7 x 8	8 x 8		↗ 10	107
277	64	9	5 x 15	6 x 12	7 x 10	8 x 9	8.5 x 8.5		← 10	131
304	64	9	5 x 15	6 x 12	7 x 10	8 x 9	8.5 x 8.5		↗ 12	143
393	79	10	6 x 15	7 x 13	8 x 11	9 x 10	9.5 x 9.5		← 12	185
411	113	12	7 x 18	8 x 16	9 x 14	10 x 12	11 x 11		← 12	194
655	113	12	7 x 18	8 x 16	9 x 14	10 x 12	11 x 11		↗ 14	309
680	154	14	8 x 22	9 x 19	10 x 17	11 x 15	12 x 14	13 x 13	← 14	321
995	154	14	8 x 22	9 x 19	10 x 17	11 x 15	12 x 14	13 x 13	↗ 16	470
1325	201	16	8 x 30	10 x 22	12 x 18	14 x 16	15 x 15		← 18	625
1450	201	16	8 x 30	10 x 22	12 x 18	14 x 16	15 x 15		↗ 20	684
1750	254	18	8 x 40	10 x 30	12 x 24	14 x 20	16 x 17	16.5 x 16.5	← 20	826
2000	254	18	8 x 40	10 x 30	12 x 24	14 x 20	16 x 17	16.5 x 16.5	↗ 22	944
2250	314	20	10 x 38	12 x 30	14 x 26	16 x 22	18 x 19	18.5 x 18.5	← 22	1062
2600	314	20	10 x 38	12 x 30	14 x 26	16 x 22	18 x 19	18.5 x 18.5	↗ 24	1227
2900	380	22	12 x 36	14 x 30	16 x 26	18 x 23	20 x 20		← 24	1369
3400	380	22	12 x 36	14 x 30	16 x 26	18 x 23	20 x 20		↗ 26	1605
3600	452	24	14 x 38	16 x 32	18 x 28	20 x 25	22 x 22		← 26	1699
4300	452	24	14 x 38	16 x 32	18 x 28	20 x 25	22 x 22		↗ 28	2029
5250	531	26	16 x 38	18 x 32	20 x 30	22 x 24	24 x 24		← 30	2478
6125	616	28	18 x 38	20 x 34	22 x 30	24 x 28	26 x 26		← 32	2891
6500	616	28	18 x 38	20 x 34	22 x 30	24 x 28	26 x 26		↗ 34	3068
7250	707	30	20 x 40	22 x 38	24 x 32	26 x 30	28 x 28		← 34	3422
7800	707	30	20 x 40	22 x 38	24 x 32	26 x 30	28 x 28		↗ 36	3681
8500	804	32	22 x 40	24 x 38	26 x 34	28 x 32	30 x 30		← 36	4012
9200	804	32	22 x 40	24 x 38	26 x 34	28 x 32	30 x 30		↗ 38	4342
9800	908	34	24 x 42	25 x 40	26 x 38	28 x 34	30 x 32	31 x 31	← 38	4625
10900	908	34	24 x 42	25 x 40	26 x 38	28 x 34	30 x 32	31 x 31	↗ 40	5144
			28 x 40	30 x 36	32 x 34	33 x 33			←	
			30 x 42	32 x 38	34 x 36	35 x 35			←	
			30 x 45	34 x 40	36 x 38	37 x 37			←	

Ground Loop Installations

Refer to diagrams **000608INF** & **000609INF** at the end of this section for typical ground loop configurations. They are for reference only, and should not be used to replace formal training and computerized loop design.

Once the ground loop has been pressure tested and the header pipes have been connected to the circulator pump module, the heat pump can be connected to the circulator pump module. **The port connections for the Outdoor Loop are 1" brass FPT fittings. They are marked as OUTDOOR IN and OUT.**

Circulator Pump Module

Maritime Geothermal Ltd. offers compact pump modules with built in three way valves to facilitate filling and purging the ground loop. Refer to drawing **000906CDG** at the end of this section. Alternatively, Grundfoss Model UPS 26-99 or Taco Model 0011 pumps or other brands with similar pumping capability may be used. The single pump module will typically handle systems up to 3 tons (model size 45); the two pump module will typically handle 4 to 6 ton systems (model sizes 55, 65, 75, 80). This is based on a typical parallel system with one circuit per ton.

Maritime Geothermal recommends calculating the total pressure drop of the ground loop (including headers, indoor piping and heat pump exchanger drop) based on the antifreeze type and concentration at the desired minimum loop temperature. A pump module that can deliver the flow required for the unit at the calculated total pressure drop should be selected. Refer to the [Model Specific Information](#) section for unit flow requirements.

Loop pressure drops can be calculated using software such as those mentioned in the Horizontal Ground loops section, or can be calculated in a spreadsheet using the pipe manufacturer's pressure drop tables for pipe diameter and fittings.

The circulator pump module must be connected to the heat pump Outdoor Loop ports with a lineset suitable for the flow required with minimum pressure drop. 1" rubber or plastic lines should be used.

The installation of P/T plugs/ports (pressure / temperature, pronounced "*Pete's plugs*") is recommended on both the entering and leaving lines at the heat pump. This will allow the installer or homeowner to check water flow through the loop by measuring the pressure difference through the heat exchanger and comparing it to that listed in the [Model Specific Information](#) section. P/T ports, adapters, and gauge adapters and are available as accessories from Maritime Geothermal Ltd..


Flushing & Purging

Once the groundloop has been installed and all connections are completed between the heat pump, circulator pump module and ground loop, the entire ground loop system should be **pressure tested with air to 100 PSIG** to make sure there are no leaks on any of the inside fittings. Soap all joints and observe that the pressure remains constant for 1 hour.

When satisfied that all connections are leak free, release the air pressure and connect a purge cart (see [Figure 1](#)) to the flushing access ports at the pump module (refer to drawing **000906CDG**). A temporary flushing system can alternately be constructed using a 45 gal. barrel and a pump with sufficient volume and head capability to circulate fluid at a **velocity of at least 2 ft/min** through all parts of the loop.

Adjust the circulator pump module valves to connect the purge cart to the ground loop. Begin pumping water through the ground loop, ensuring that the intake of the pump stays submerged at all times by continuously adding water. Water flowing back from the return line should be directed below the water level in the barrel or flush tank to prevent air being mixed with the outgoing water.

Figure 1: Ground Loop Accessories & Tools

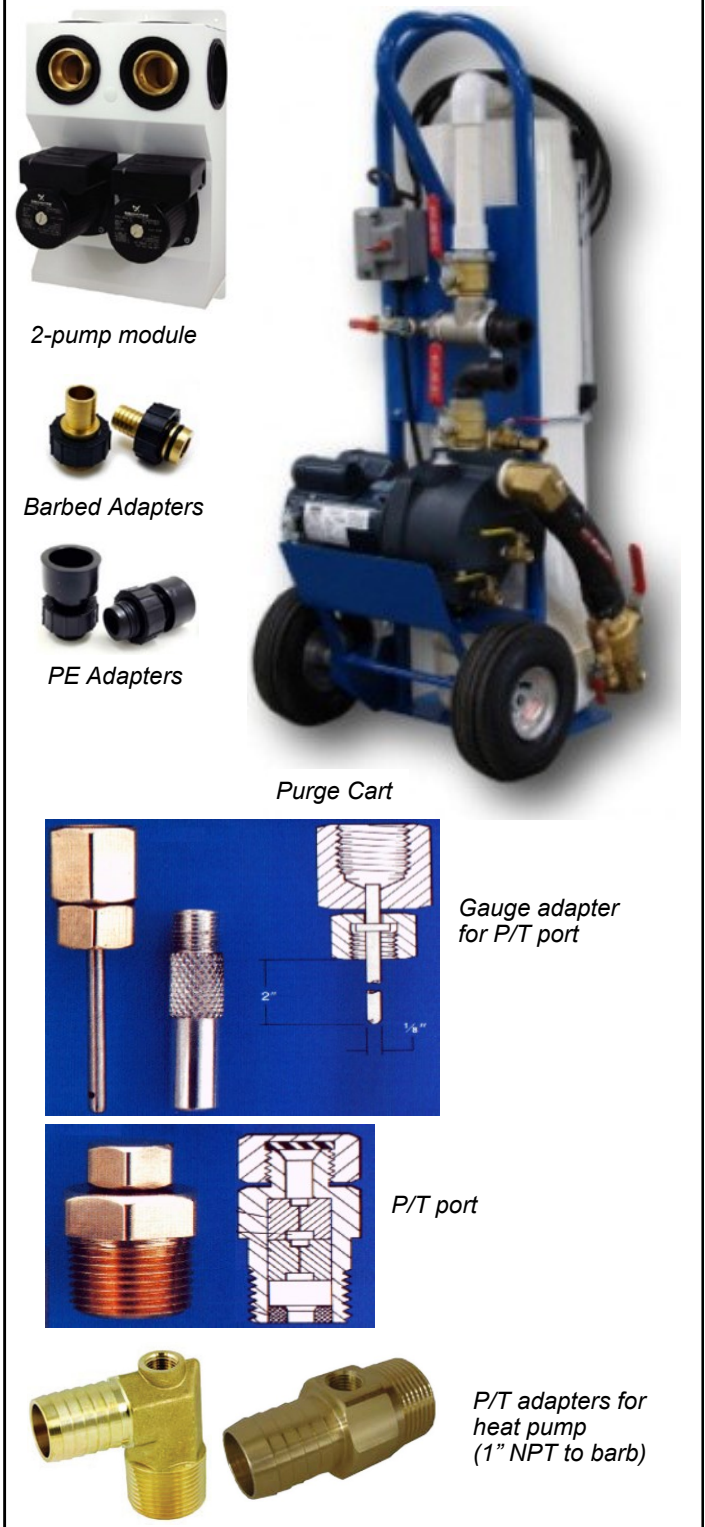

Once the lines have been filled and no more air bubbles are appearing in the line, adjust the circulator pump module valves to circulate water through the heat pump using the same technique as described above. When all air is removed reverse the flow of water through the lines by interchanging the flush cart lines and purge again. You will be able to visibly tell when all air is removed.

Adding Antifreeze Solution

In most mid and northern areas of the US and in all of Canada it is necessary to condition the loop fluid by the addition of some type of antifreeze solution so that it will not freeze during operation in the winter months. This antifreeze is required because the loop fluid will normally reach a low entering temperature of **28°F to 32°F (-2°C to 0°C)** and refrigerant temperatures inside the heat pump's heat exchanger may be as low as **20°F (11°C)** cooler. See following table for details of freeze protection provided by different concentrations.

TABLE 19 - Antifreeze Percentages				
BY VOLUME				
Protection to:	10°F	15°F	20°F	25°F
Methanol	25%	21%	16%	10%
Propylene Glycol	38%	30%	22%	15%
BY WEIGHT				
Protection to:	10°F	15°F	20°F	25°F
Methanol	16.8%	13.6%	10%	6.3%
Propylene Glycol	30%	23.5%	18.3%	12.9%



WARNING: Add enough antifreeze to allow for a temperature 20°F (11°C) lower than the expected lowest loop fluid temperature entering the heat pump. Insufficient antifreeze concentration could cause the heat exchanger to freeze and rupture, voiding the warranty.

Although many different antifreeze solutions have been employed in geothermal systems, the alcohols such as methanol or ethanol have the most desirable characteristics for groundloop applications. The overall heat transfer characteristics of these fluids remain high although care must be taken when handling pure alcohols since they are extremely flammable. Once mixed in a typical 25% by volume ratio with water the solution is not flammable. In situations where alcohols are not allowed as a loop fluid due to local regulations then propylene glycol is a non-toxic alternative which can be substituted. Propylene glycol should only be used in cases where alcohols are not permitted since the heat transfer characteristics are less desirable and it becomes more viscous at low temperatures, increasing pumping power.

The volume of fluid that your loop system holds can be closely estimated by totaling the number of ft. of each size pipe in the system and referencing the following table for approximate volume per 100 ft.

When the volume of the loop has been calculated and the appropriate amount of antifreeze is ready for addition by referencing the table, drain the equivalent amount of water from the flush cart or mixing barrel and replace it with the antifreeze.

TABLE 20 - Volume of fluid per 100 ft. of pipe				
		Volume /100ft.		
Type of Pipe	Diameter	l.gal	gal	L
Copper	1"	3.4	4.1	15.5
	1-1/4"	5.3	6.4	24.2
	1-1/2"	7.7	9.2	34.8
Rubber Hose	1"	3.2	3.9	14.8
Polyethylene	3/4" IPS SDR11	2.3	2.8	10.6
	1" IPS SDR11	3.7	4.5	17.0
	1-1/4" IPS SDR11	6.7	8.0	30.3
	1-1/2" IPS SDR11	9.1	10.9	41.3
	2" IPS SDR11	15.0	18.0	68.1
Other Item Volumes				
Heat Exchanger	Average	1.2	1.5	5.7
Purge Cart Tank	See cart manual	TBD		

When using alcohols, be sure to inject below the water line to reduce initial volatility of the pure antifreeze. If the loop is large it may be necessary to refill the tank with antifreeze several times to get all the antifreeze into the loop. Pump the loop for 5 to 10 minutes longer to ensure the remaining fluid has been well mixed.

Initial Pressurization

At this point open all valves in the flow circuit and slowly close off the supply and return flush cart valves in a manner that leaves about **20-30 psig.** on the system. If an air bladder expansion tank is used it should be charged to the above pressure before actual water pressure is put on the system. Systems without an expansion tank will experience greater fluctuations in pressure between the heating and cooling seasons, causing pressure gauges to have different values as the loop temperature changes. This fluctuation is normal since expansion and contraction of the loop fluid must be handled by the elasticity of the plastic loop.


- Pressurize the loop to a static pressure of **45 psig.** when installing a system in the fall going into the heating season.
- Pressurize the loop to a static pressure of **25 psig.** when installing a system in the spring or summer going into the cooling season.

After operating the heat pump for a period of time, any residual air in the system should be bled off and the static pressure should be verified and adjusted if necessary. Add additional water / antifreeze mix with the purge cart to bring the pressure back to the original setting if required.


Pipe Insulation

All ground loop piping inside the structure (between the structure entry point and the heat pump) should be insulated with 3/8" thick closed cell pipe insulation to prevent condensation and dripping onto floors or walls.


TYPICAL HORIZONTAL GROUND LOOP CONFIGURATION

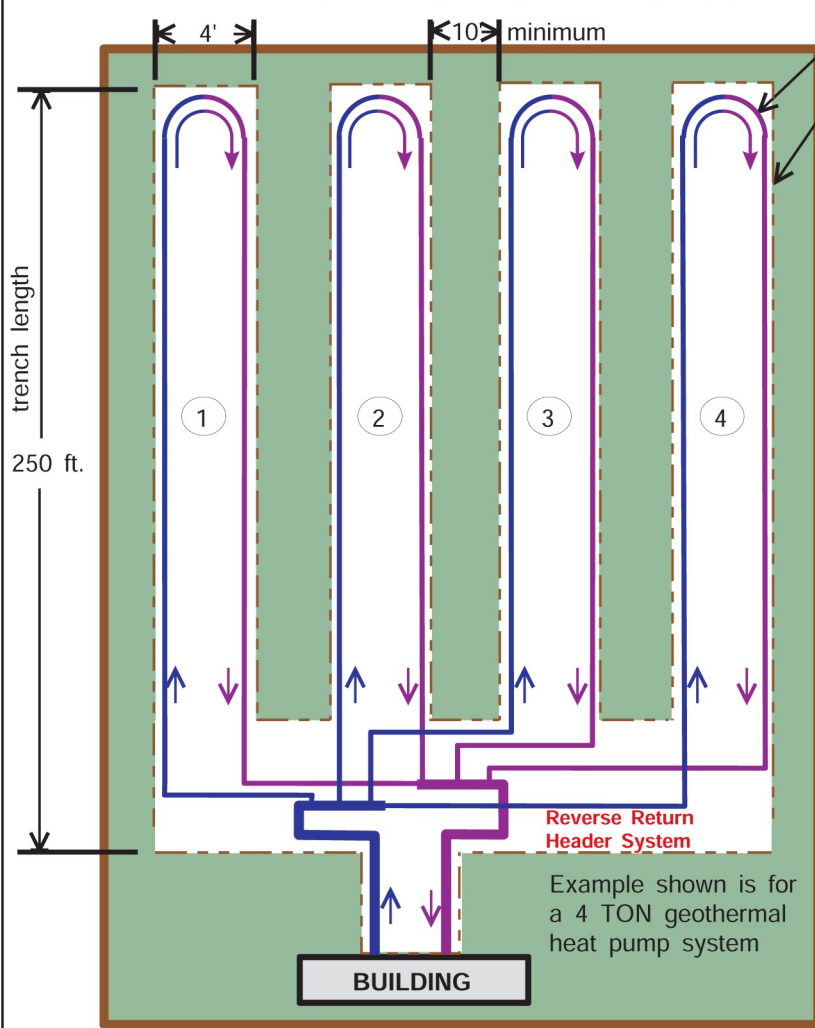

- Type PE 3408 Pipe
- Excavated trenches minimum 4' wide x 6' deep
- Trenches will be backfilled with material which will maximize the thermal conductivity of the adjacent earth.
- Each loop consists of 500ft. of 3/4" type 3408 PE 160 psig (SDR 11) geothermal heat pump polyethylene tubing.
- Each trench is 250ft. beginning from the header. This allows one 500ft. roll of pipe to be used with only two fusion connections (one at each header).
- Allow a minimum of 10 ft. between each trench and preferably 15 - 20 ft. if space is available.
- Insulate all tubing within 12ft. of the structure with 1/2" thick closed cell armaflex insulation.
- Piping that is laid in a header trench should be insulated to a point where each loop branches to it's individual trench.
- The loop with the most pipe in the header trench could be left uninsulated to pick up heat from the header trench as long as the header trench is more than 12' out from the building.
- Reverse return headers minimize flow imbalances between loops.

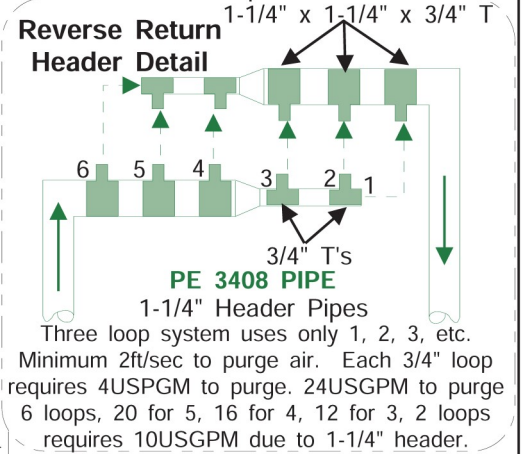

Elevation View of Trench

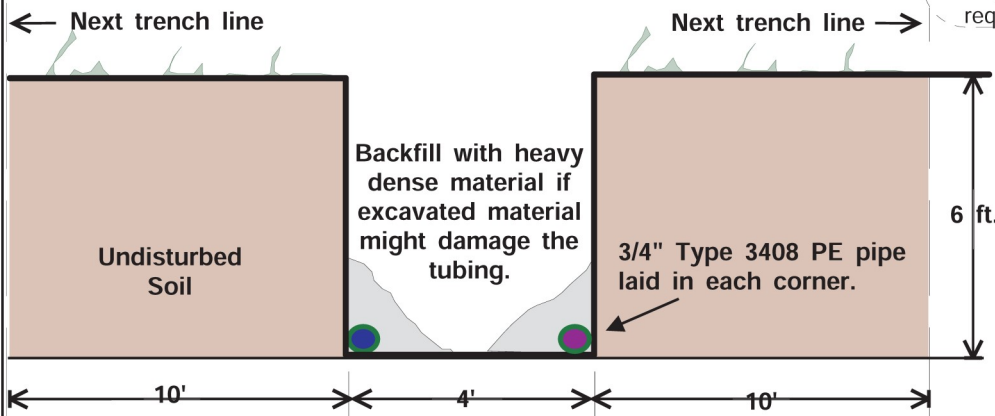


- Hand backfilling in the area just over the plastic pipe is recommended to prevent crushing or pinching of the pipe during backfilling operations.
- Horizontal style pipe runs should be placed 6' deep x minimum of 48" wide trench as shown above, with a minimum of 10ft. between trenches


					Drawn By Chris Geddes	Date 17 JAN 08	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Chris Geddes	Date 17 JAN 08				
					Approved By (ENG) Chris Geddes	Date 17 JAN 08	Drawing Name Typical Horizontal Ground Loop Configuration			
					Approved By (MFG)	Date				
01	Initial Release	C. GEDDES	C. GEDDES	17 JAN 08	Approved By	Date	Size A	Drawing Number 000608INF	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE						

TYPICAL VERTICAL GROUND LOOP CONFIGURATION


Vertical Layout Example 1

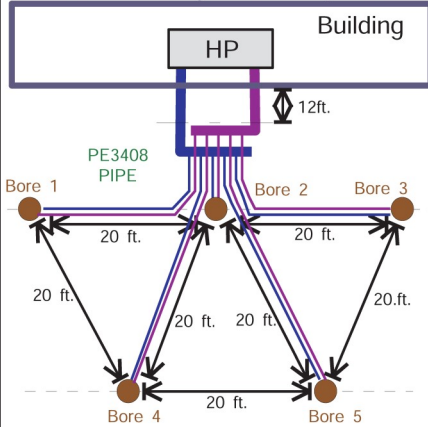


Vertical Layout Example 2

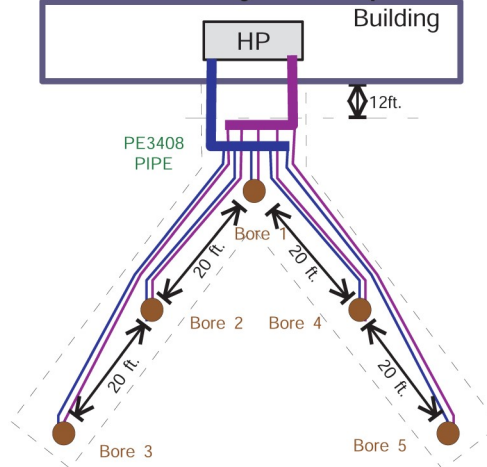

Angled Vertical Layout Example 1
(can be vertical layout with 20ft spacing)

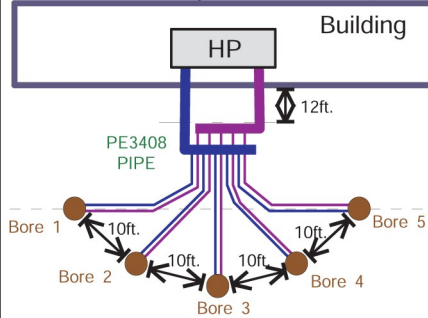


Reverse Return Header Detail

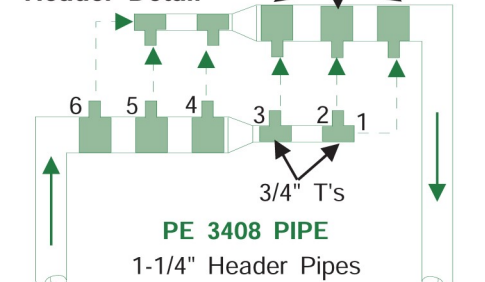

Three loop system uses only 1, 2, 3, etc. Minimum 2ft/sec to purge air. Each 3/4" loop requires 4USGPM to purge. 24USGPM to purge 6 loops, 20 for 5, 16 for 4, 12 for 3, 2 loops requires 10USGPM due to 1-1/4" header.

Borehole Detail

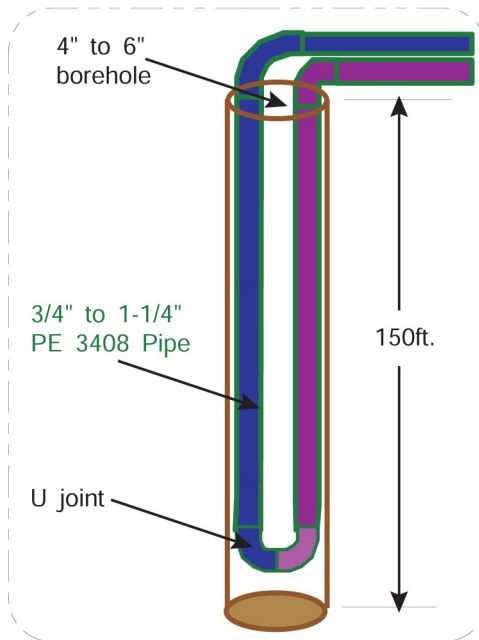


- Examples shown are for a 5 TON geothermal heat pump system
- **Type PE 3408 Pipe**
- Excavated trenches to boreholes minimum 4' wide x 6' deep
- Trenches should be backfilled with material which will maximize the thermal conductivity of the adjacent earth.
- Hand backfilling in the area just over the plastic pipe is recommended to prevent crushing or pinching of the pipe during backfilling operations.
- Allow a minimum of 20 ft. between each borehole for vertical boreholes and 10ft for vertical angled boreholes.
- Piping that is laid in a header trench should be insulated up to the individual trench to the borehole.
- Insulate all tubing within 12ft. of the structure with 1/2" thick closed cell armaflex insulation.
- Reverse return headers minimize flow imbalances between loops.
- The number of boreholes can be reduced by increasing the depth of the boreholes. Do not exceed 300ft depth and care must be taken to size the circulator pump module accordingly.
- Be sure to obtain permission prior to drilling if angled boreholes enter neighbouring properties.

- Each loop consists of minimum 300ft. of 3/4" type 3408 PE 160 psig (SDR 11) geothermal heat pump polyethelene tubing.
- Each borehole is 4-6" diameter and 150ft deep for 1 loop per ton applications.
- Allow enough extra pipe to be able to reach the headers to minimize the number of fusion joints.
- "U" tubes should be taped together every 10ft. A heavy piece of rebar or galvanized pipe can be taped to the last 10ft. to help keep the end straight and also for added weight.
- Fill each "U" tube with water and pressurize to 100PSIG before insertion. The added weight of the water will help with the insertion process
- Tremie grout from the bottom to within 10ft of the top of the borehole. Use neat cement or a mixture of neat cement and bentonite. Check local codes, there may be regulations that must be adhered to.

					Drawn By Chris Geddes	Date 22 JAN 08	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Petitcodiac, NB E4Z 6H4</div>			
					Checked By Chris Geddes	Date 22 JAN 08				
					Approved By (ENG) Chris Geddes	Date 22 JAN 08	Drawing Name Typical Vertical Ground Loop Configuration			
					Approved By (MFG)	Date				
01	Initial Release	C. GEDDES	C. GEDDES	22 JAN 08	Approved By	Date	Size A	Drawing Number 000609INF	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Geo-Flo Circulator Pump Module Installation (Units with Brass FPT Fittings)

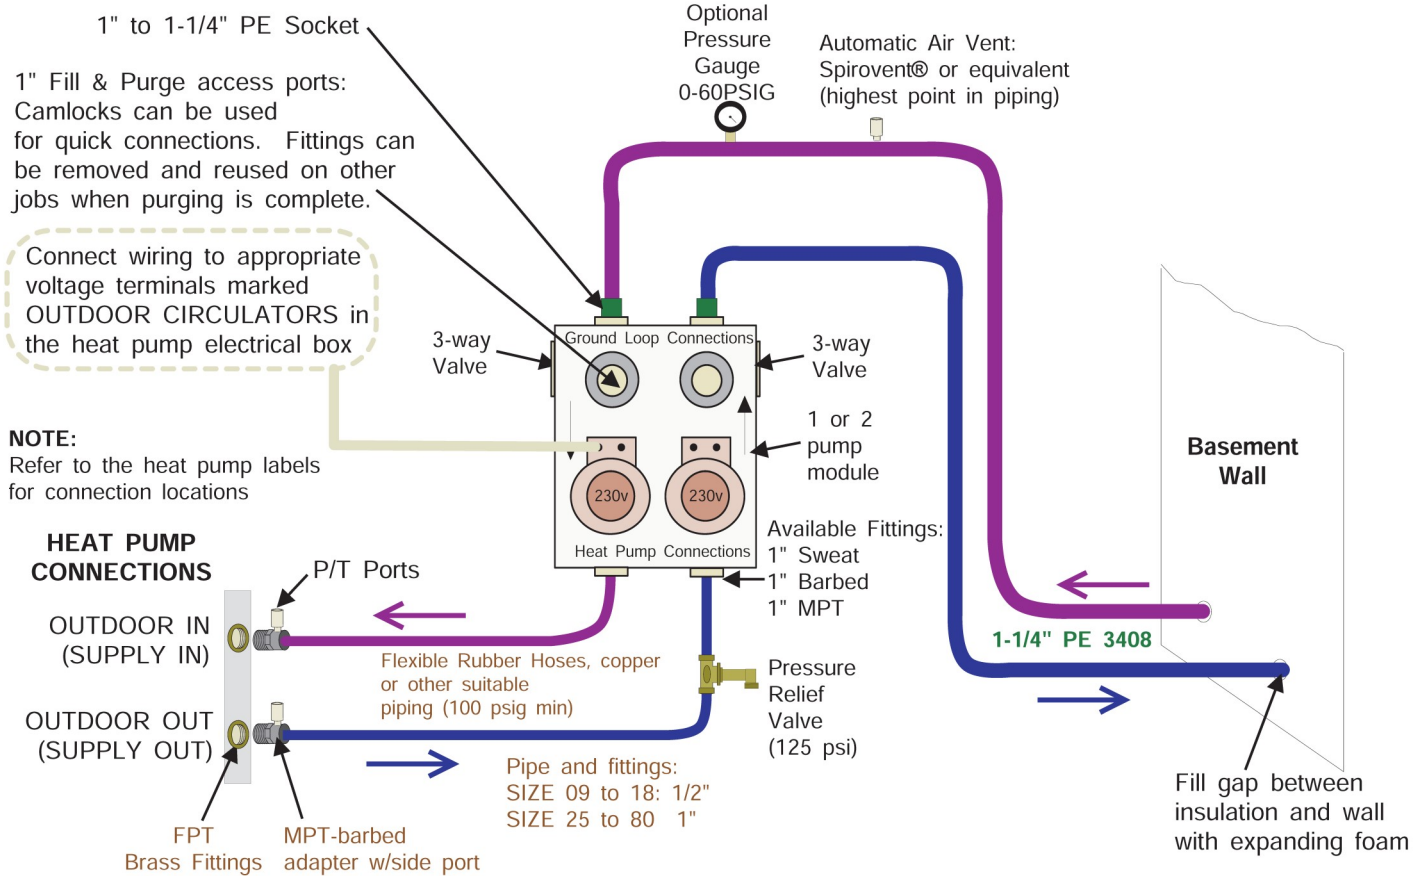


NOTES:


- Circulator Pump Module should be mounted vertically to minimize the possibility of air locking the circulators.
- All lines inside the structure and through the wall should be insulated with 3/8" to 1/2" thick closed cell pipe insulation.
- Holes through the foundation / structure should be filled with expanding foam from both sides to prevent leakage.
- Proper drainage material should be used on the outside of the wall to prevent water buildup.
- Pump module fittings are available from Maritime Geothermal Ltd.
- A pressure gauge is recommended if P/T plugs are not installed.
- For most applications, a 1 pump module will accommodate model sizes 09 to 45, and a 2 pump module will accommodate sizes 55 to 80. The total loop pressure drop including the headers, inside piping and heat exchanger drop should be calculated based on the antifreeze mixture and lowest desired entering water temperature. The pump module selected must provide the required flow at this calculated pressure drop value.

CIRCULATOR PUMP MODULE 3-WAY VALVE POSITIONS (LEFT SIDE VIEW)


1. Valve in Loop fill/purge position.

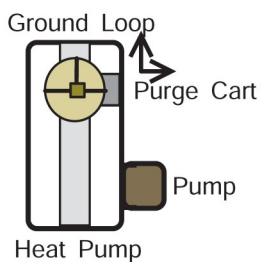

2. Valve in HP fill/purge position

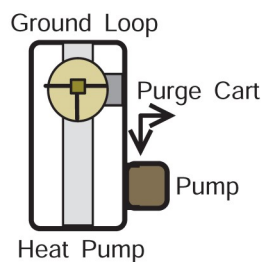


3. Valve in normal running position.

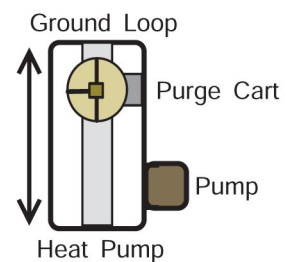

					Drawn By Chris Geddes	Date 09 DEC 08	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
					Checked By Chris Geddes	Date 09 DEC 08	
03	000264	D. RHEAULT	D. RHEAULT	21-Aug-2018	Approved By Chris Geddes (ENG)	Date 21-May-2013	Drawing Name Geo-Flo Circulator Pump Module Installation (Brass FPT)
02	000213	C. GEDDES	C. GEDDES	21-May-2013	Approved By Chris Geddes (MFG)	Date 09 DEC 08	
01	Initial Release	C. GEDDES	C. GEDDES	9-Dec-2008	Approved By	Date	Size A
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Drawing Number 000906PDG
							Drawing Rev 03
							SHEET 1 of 1

Dual Flow Circulator Pump Module Installation for 2-Stage Heat Pumps

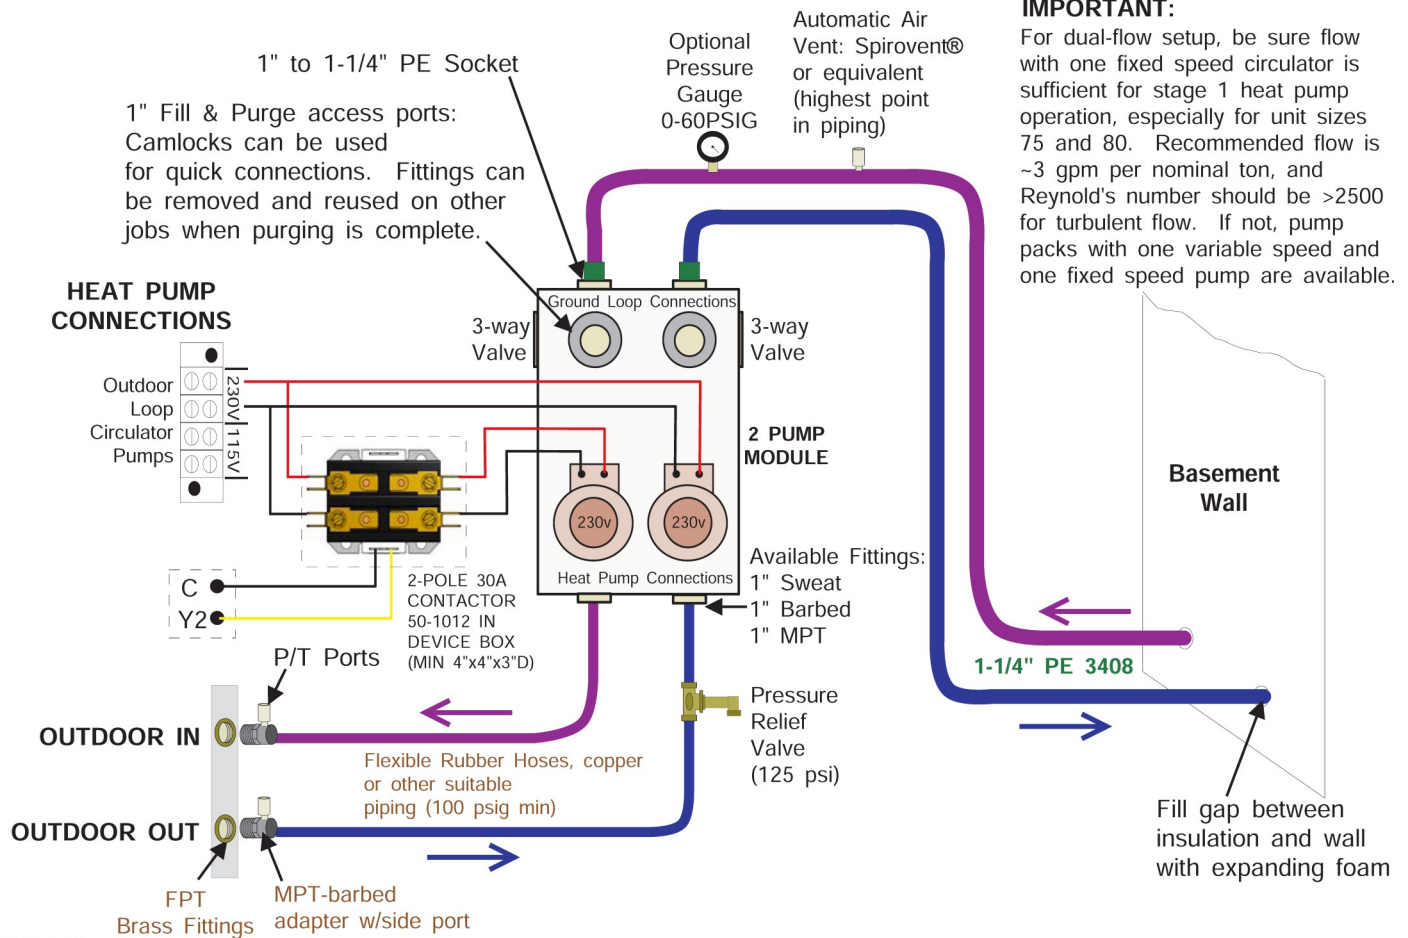


IMPORTANT:
For dual-flow setup, be sure flow with one fixed speed circulator is sufficient for stage 1 heat pump operation, especially for unit sizes 75 and 80. Recommended flow is ~3 gpm per nominal ton, and Reynold's number should be >2500 for turbulent flow. If not, pump packs with one variable speed and one fixed speed pump are available.

NOTES:


- Circulator Pump Module should be mounted vertically to minimize the possibility of air locking the circulators.
- All lines inside the structure and through the wall should be insulated with 3/8" to 1/2" thick closed cell pipe insulation.
- Holes through the foundation / structure should be filled with expanding foam from both sides to prevent leakage.
- Proper drainage material should be used on the outside of the wall to prevent water buildup.
- Pump module fittings are available from Maritime Geothermal Ltd.
- A pressure gauge is recommended if P/T plugs are not installed.
- For most applications, a 1 pump module will accommodate model sizes 09 to 45, and a 2 pump module will accommodate sizes 55 to 80. The total loop pressure drop including the headers, inside piping and heat exchanger drop should be calculated based on the antifreeze mixture and lowest desired entering water temperature. The pump module selected must provide the required flow at this calculated pressure drop value.

CIRCULATOR PUMP MODULE 3-WAY VALVE POSITIONS (LEFT SIDE VIEW)


1. Valve in Loop fill/purge position.

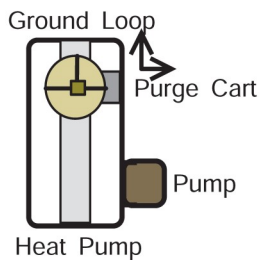

2. Valve in HP fill/purge position.

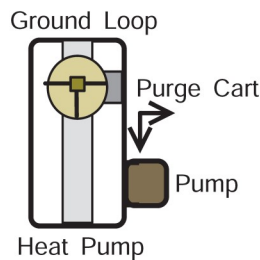

3. Valve in normal running position.

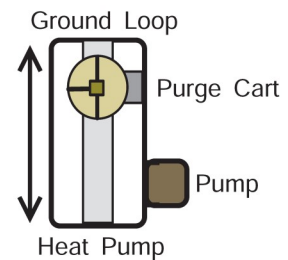


03	000264	D. RHEAULT	D. RHEAULT	21-Aug-2018	Drawn By Dan Rheault	Date 22-Nov-2013	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4	Drawing Name Dual Flow Circulator Pump Module Installation for 2-Stage Heat Pumps		REV	SHEET
02	-	D. RHEAULT	D. RHEAULT	20-May-2014	Checked By Dan Rheault	Date 22-Nov-2013					
01	Initial Release	D. RHEAULT	D. RHEAULT	22-Nov-2013	Approved By (ENG)	Date					
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By (MFG)	Date					
							Size A	Drawing Number 001823CDG		03	1 of 1

Geo-Flo Circulator Pump Module Installation - Two Units On One Ground Loop

NOTE:

Refer to the heat pump labels for connection locations

Connect wiring to appropriate voltage terminals marked **OUTDOOR CIRCULATORS** in the heat pump electrical box

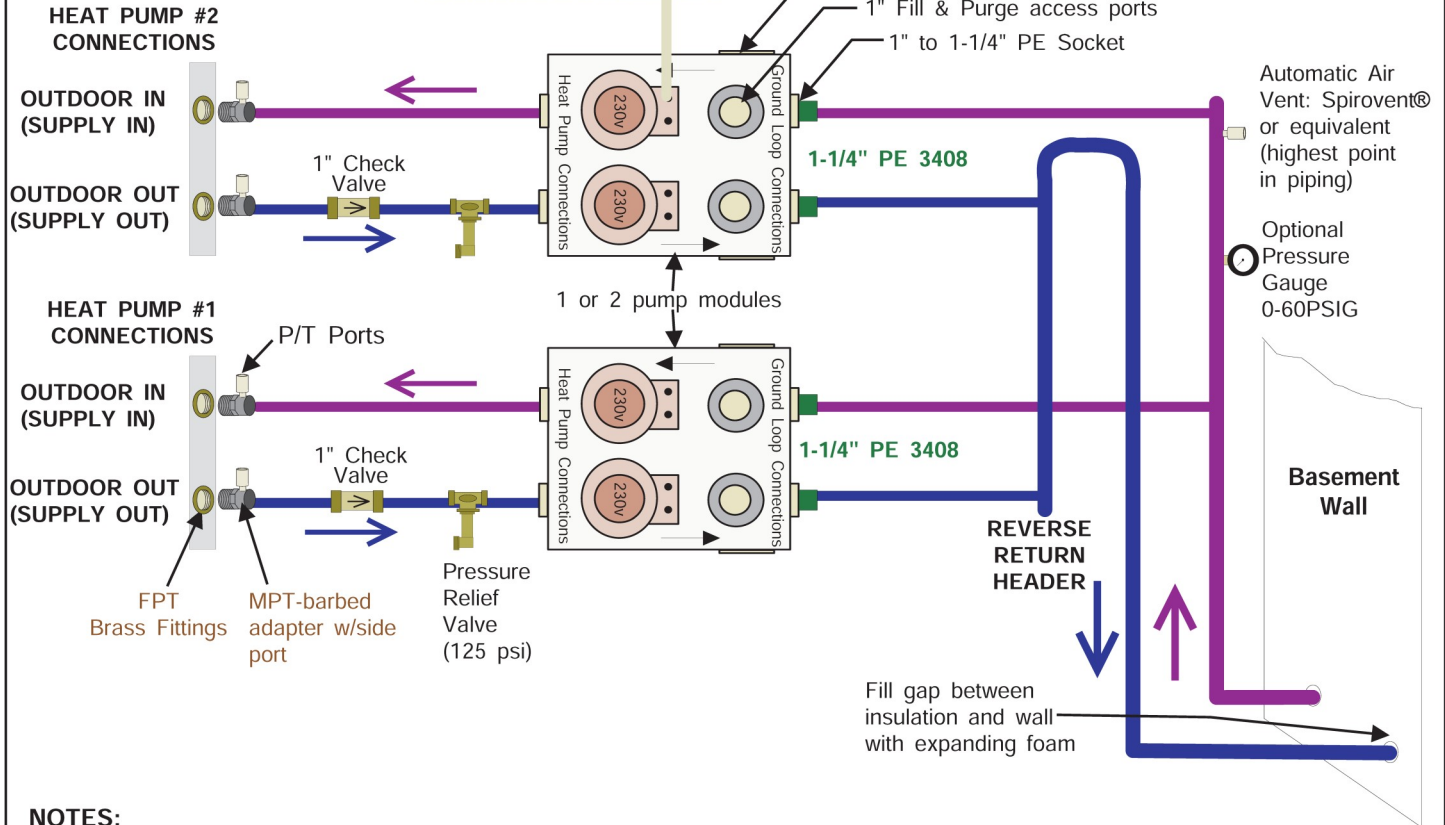


NOTES:


- Circulator Pump Module should be mounted vertically to minimize the possibility of air locking the circulators.
- All lines inside the structure and through the wall should be insulated with 3/8" to 1/2" thick closed cell pipe insulation.
- Holes through the foundation / structure should be filled with expanding foam from both sides to prevent leakage.
- Proper drainage material should be used on the outside of the wall to prevent water buildup.
- Pump module fittings are available from Maritime Geothermal Ltd.
- A pressure gauge is recommended if P/T plugs are not installed.
- For most applications, a 1 pump module will accommodate model sizes 09 to 45, and a 2 pump module will accommodate sizes 55 to 80. The total loop pressure drop including the headers, inside piping and heat exchanger drop should be calculated based on the antifreeze mixture and lowest desired entering water temperature. The pump module selected must provide the required flow at this calculated pressure drop value.

CIRCULATOR PUMP MODULE 3-WAY VALVE POSITIONS (LEFT SIDE VIEW)


1. Valve in Loop fill/purge position.

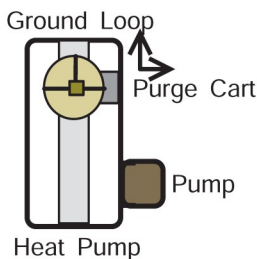

2. Valve in HP fill/purge position

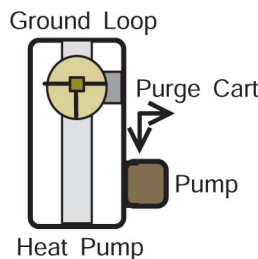

3. Valve in normal running position.

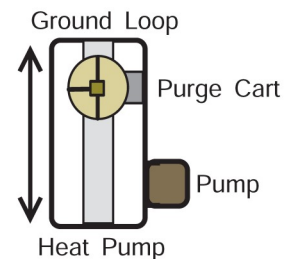

					Drawn By Dan Rheault	Date 21-Aug-2018	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Petitcodiac, NB E4Z 6H4</div>			
					Checked By Dan Rheault	Date 21-Aug-2018				
					Approved By (ENG) Dan Rheault	Date 21-Aug-2018	Drawing Name Geo Flo Circulator Pump Module Installation-Two Units on One Ground Loop			
					Approved By (MFG)	Date				
01	Initial Release	D. RHEAULT	D. RHEAULT	21-Aug-2018	Approved By	Date	Size A	Drawing Number 002336PDG	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Open Loop Installations

Well Water Temperature

The temperature of the well water should be a minimum of **41°F (5°C)**, and should normally be **45°F+ (7°C+)**. In general, groundwater temperatures across the Canadian prairie provinces and Northern Ontario may be close to the 41°F minimum, while in other parts of southern Canada it will probably be 46-50°F, although local exceptions will exist. In more southern locations, it will be warmer.

The well water temperature should be verified as the first step in a proposed open loop installation.

Well Water Flow

The water source is normally a drilled water well with submersible pump that is the same well which supplies domestic water needs. It must be able to supply the required water flow as listed under the Total Flow column in the table.

TABLE 21 - Required Open Loop Flow

Heat Pump Model Size	Heat Pump Flow* gpm (L/s)	Domestic Water Usage gpm (L/s)	Total Flow gpm (L/s)
45	10.0 (0.63)	4 (0.25)	14 (0.88)
55	12.0 (0.76)	4 (0.25)	16 (1.01)
65	14.0 (0.88)	4 (0.25)	18 (1.14)
75	16.0 (1.01)	4 (0.25)	20 (1.26)
80	17.0 (1.07)	4 (0.25)	21 (1.32)
* These are minimum water requirements based on an entering water temperature of 45° F.			

For groundwater temperatures of 50°F or greater, these flows can be reduced by 25% if required.

Rather than being estimated by a well driller, the flow from a proposed source well should be measured by performing an extended flow test to be sure it is capable of supplying the required flow over an extended period of time. This is done by flowing the well at the highest possible rate, noting the static water level in the well, and monitoring the pumping fluid level until stable. Unless the fluid level is very high, fluid level monitoring will require a device called a water level sounder. The flow rate can then be measured either by a cumulative gallon meter, a flowmeter, or by timing the filling of a bucket of known size. The test data can be recorded as follows:

TIME	METER READING (USGAL)	TOTAL FLOW (USGAL)	FLOW RATE (USGPM)	WATER LEVEL (FT)	(IN)	WATER LEVEL (FT)
20:25	131735.5	0		20	6	20.5
20:27	131756	20.5	10.3	24	0	24.0
20:30	131779	23	6.0	26	0	26.0
20:42	131847	68	6.1	29	0	29.0
20:51	131906	59	6.6	29	0	29.0
21:03	131982	76	6.3	29	0	29.0
21:32	132156	174	6.0	29	0	29.0

It is best to flow the well for as long as possible (e.g. 12 hours) at the flow rate required by the proposed heat pump size. However, if the test is performed before a larger submersible pump is installed, it may be assumed that any unused water level drop during the test (that is, any distance remaining be-

tween the pumping fluid level and the pump intake) would contribute linearly to the flow rate should a larger pump be installed.

In the above example, it was recorded that the flow rate stabilized at 6 gpm, while the water level dropped from 20 to 29 feet (9 feet). If the intake of a larger pump could be placed so that a further pumping fluid level drop of 9 feet could be achieved (total 18 feet), it can be assumed that the flow would double to 12 gpm. Of course, this should be verified with a second test once the larger pump is actually installed.

Well Water Quality

The well water should be tested to be sure it meets minimum standards. Although the threat of poor water quality to open loop installations is often exaggerated, poor water quality can lead to rapid heat exchanger failure or frequent servicing.

First, the well should not produce any sand. Sand will physically erode heat exchanger surfaces, and quickly clog return (injection) wells. **Solids** or **TDS** should be less than **1 ppm (1 mg/L)** if a return well is used.

To avoid scale formation on the inside of the heat pump's outdoor loop coil, total **hardness** should be less than **350 ppm / 350 mg/L**. In practice, scaling is very rarely a problem at northern groundwater temperatures of 50°F or less because scale does not generally form at low well water temperatures (unlike, for example, in a domestic hot water tank). In more southern climates, the hardness guideline will be a more important consideration. Should scale form, heat pump performance will gradually deteriorate, and will require periodic flushing with a calcium/lime removing solution (see General Maintenance section). If the need for periodic flushing is anticipated, the optional Cupro-Nickel (CuNi) coil and piping should be ordered.

Corrosive (salty) water can cause failure of the inner tube of the heat exchanger, leading to loss of refrigerant and water entering the refrigeration circuit, which ruins the heat pump. If **chlorides** exceed **20 ppm (20 mg/L)**, the optional CuNi coil and piping should be ordered. If chlorides exceed **150 ppm (150 mg/L)**, or significant **Ammonia (>0.5 ppm)** or **H₂S (>0.2 ppm)** is present, the use of an open loop system should be reconsidered.

Water Discharge Methods

Water disposal methods vary from area to area. However, some consideration should be made to prevent the cooled discharge water from immediately coming in contact with the supply source. Attempting to return the water to the source well will eventually cool the water so much that the heat pump will shut off on its low pressure safety control.

Acceptable methods for disposing of the waste water are listed below. The waste water is clean; the heat pump has no effect other than reducing the temperature of the water. Refer to diagram on following page for typical disposal method diagrams.

- Second well (return well)
- Percolation (Drain, ditch, leaching field)
- Pond, river or stream

ENSURE SELECTED METHOD CONFORMS TO LOCAL REGULATIONS.

A return well should be a minimum of **80 ft.** from the supply

Figure 2: Open Loop Accessories & Tools

Water Level Sounder



Cumulative Gallon Meter





Taco EBV




Rainbird Solenoid Valve

Dole Valve

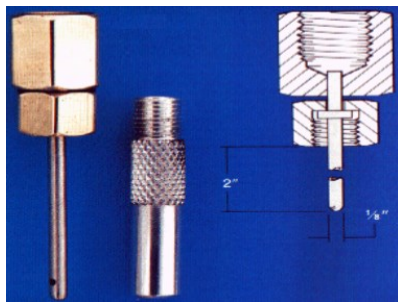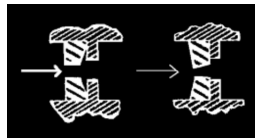

Gauge adapter for P/T port

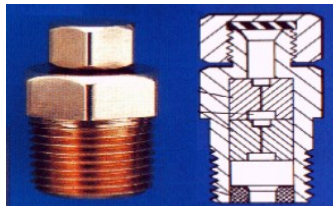

P/T port



P/T adapters for heat pump (1" NPT to barb)

well for residential applications. The water returned to the well will not necessarily be pumped into the same aquifer, depending on underground conditions. The return well must be able to supply at least the same quantity of water as the amount you wish to inject into it, preferably much more, since injection capacity will tend to decrease over time due to clogging. It may be necessary to place a pressure-tight cap on the well to keep the return water from flowing out the top of the well. This cap is commonly required since a certain amount of pressure may be needed to force the return water back down the well in cases of limited injectivity.

Water discharged by percolation will generally soak into the ground within a distance of 50 to 100 ft. If suitable care is taken to ensure that the drain pipe runs downhill and the end of the pipe is protected by a bale of hay or spruce bows, the end of the pipe will not freeze as the pipe will empty out when the heat pump shuts off and the water valve closes. A screen should be installed on the end of large discharge pipes, to prevent animals from building nests inside during extended 'off' periods and causing a backflooding risk for open water drains.

When snow comes it will usually cover the entire process much like a small spring. It is recommended that the pipe be below the frost line when possible for maximum freeze protection.

When discharging into a river or stream, or above the surface of a pond, the same guidelines should be followed as described in the paragraph above for the percolation method.

When discharging the waste water below the surface of a pond or lake, the discharge pipe should be placed below the frost line to prevent the pipe from freezing. As opposed to the percolation method, water will remain in the end of the pipe. It is recommended that the surface of the pond be lower than the installation location of the heat pump. This reduces the back pressure generated by the weight of the water in the pond.

Water Valve

Water flow through the heat pump is turned on and off by a water valve, which is controlled by a 24VAC signal from the heat pump. It should be installed on the OUT pipe of the heat pump, so that the heat exchanger remains full of water at all times. There are 3 types of water valves available from Maritime Geothermal.

- **Hailin** or equivalent slow acting **motorized ball valve**, which is powered open and powered closed.
- **Taco** slow acting **motorized ball valve**, which is powered on and stores the energy required to close using a capacitor.
- **Rainbird** or equivalent fast acting **solenoid valve**.

Most installations use a slow closing motorized ball valve. These take 5-15 seconds to close, so avoid the water hammer which can occur with fast acting valves. A fast acting solenoid valve can be used for applications where water hammer is not expected.

All valves come from Maritime Geothermal Ltd. with a wiring harness, which plugs into a connector behind the pipe post of the heat pump. (If buying a water valve elsewhere, be sure to get the wiring harness from Maritime Geothermal.) This both allows the heat pump to properly control the valve, turning the water flow on and off with the compressor, and also tells the heat pump to select the higher low pressure safety control for open loop operation (since there is no antifreeze present).

Water Flow Control

A flow restricting ('Dole') valve is highly recommended, installed downstream of the water valve. This is a passive (non-electrical) device which automatically varies the size of its rubber orifice in order to restrict flow to its stamped gpm value, regardless of water pressure. This is important in order to provide some backpressure to the water system, which could otherwise be too low for the comfort of people taking showers or otherwise using the domestic water system. It also prevents excessively low refrigerant discharge pressure when in cooling mode. Dole valves are available as an accessory.

Dole valves can emit a 'whistling' sound if the pressure drop through them is high. Therefore, they should be placed where the noise will not cause a nuisance, e.g. outside the basement wall or perhaps in a well insulated box.

Submersible Pump Selection

Of course, the submersible pump must be large enough to supply the flow required by the heat pump. This is usually not a problem, pumps often being oversized by default.

However, if a conventional fixed speed pump is too large, its fixed capacity will exceed that of the Dole valve at reasonable pressure switch settings (<80 psi). This will cause the submersible pump to cycle on and off continuously while the heat pump is running, causing excessive wear to the submersible pump. The installation of a large air bladder tank will cause the cycles to have a longer duration, but will not solve the problem.

To avoid this problem, the fixed speed pump should be sized according to its head vs. flow curve. The required head should be calculated using height between the pumping fluid level in the well and the elevation of the heat pump, pipe pressure drop at nominal flow rate, desired system water pressure, and any back pressure from return well. Then a pump can be selected that delivers the nominal flow for the chosen heat pump size at that head. In case this calculation is not exact, a variety of Dole valves can be carried by the installer, and a larger Dole valve installed if submersible pump cycling is observed.

An alternate approach would be to install a variable speed submersible pump, which varies its speed to maintain a constant water system pressure. Or use a mechanical 'cycle stop' valve, which is installed upstream of the air bladder / pressure tank and varies its orifice to put backpressure on the pump during periods of low flow in order to keep it from cycling off.

Stage 1 vs. 2 on Open Loop

In an open loop installation, the submersible water pump draws significant power compared to the heat pump, especially for smaller heat pump sizes. This is particularly true when using a conventional fixed speed submersible pump. Under normal usage, the efficiency of such a pump is not particularly important, due to short run times in a domestic water system. When used with a geothermal heat pump, which can run all day on the coldest days of the year, it is highly recommended that effort be made to select an energy efficient submersible pump. However, these may be hard to find.

The significant power draw of submersible pump will probably negate the COP benefit of running the heat pump on stage 1. In this case, it is recommended to jumper Y1 and Y2 together at the heat pump terminal strip, in order to satisfy the heating demand as quickly as possible and minimize run time. For the same reason, slightly oversizing the heat pump is acceptable on open loop applications, although this will require higher water flow.

If Y1 and Y2 are jumpered together, it is recommended to consult diagram 001901PDG found earlier in this manual, so that stage 1 may be used for cooling in order to achieve better dehumidification. This should be done only if stage 1 alone (67% compressor capacity) can satisfy the cooling demand in the local climate.

Plumbing the Heat Pump

The port connections for the Outdoor Loop are 1" brass FPT fittings. They are marked as OUTDOOR IN and OUT.

Plumbing lines, both IN (supply) and OUT (discharge), must be of adequate size to handle the water flow necessary for the heat pump. A 1" or 1-1/4" copper or plastic line should be run to the Outdoor IN (Supply IN) pipe of the heat pump. Similarly, a 1" or 1-1/4" line should be run from the Outdoor OUT (Supply Out) pipe to the method of disposal. P/T plugs should be installed at each port. See diagram in the Ground Loop chapter for a description of P/T plugs. The water valve should be installed in the OUT (discharge) line. Refer to drawing **000907CDG** at the end of this section for the recommended setup. Placing the water valve in the discharge line ensures that the heat exchanger inside the heat pump remains full of water when the unit is not running. Unions or some other form of disconnect should be used so that the coaxial heat exchanger may be accessed should it required cleaning.

The heat pump has an electrical connector for the water valve just inside the case. After the water valve is installed, run the valve harness into the case through the hole provided. Remove the jumper plug from the Valve Connector and connect the harness in its place.

Optionally, a water flow meter can be installed in the discharge line so that the exact amount of water flowing can be determined at a glance. It should be placed between the Outdoor OUT (Supply OUT) pipe of the heat pump and the water valve.


With proper flow, there should be **5-7°F (3-4°C)** delta T between the IN and OUT water temperatures of the heat pump when operating in the heating mode.

All water line valves on both the supply and discharge lines should be either BALL or GATE valves. GLOBE valves have a higher pressure drop, meaning more pumping power to maintain the required flow to the heat pump.

Pipe Insulation

All ground water piping to and from the Outdoor Loop ports on the heat pump should be insulated with 3/8" closed cell pipe insulation, to prevent condensation and dripping onto floors or walls.

Typical Ground Water Installation for Size 25-80 Heat Pumps for Units With Brass FPT Fittings TACO 24VAC EBV (Electronic Ball Valve)

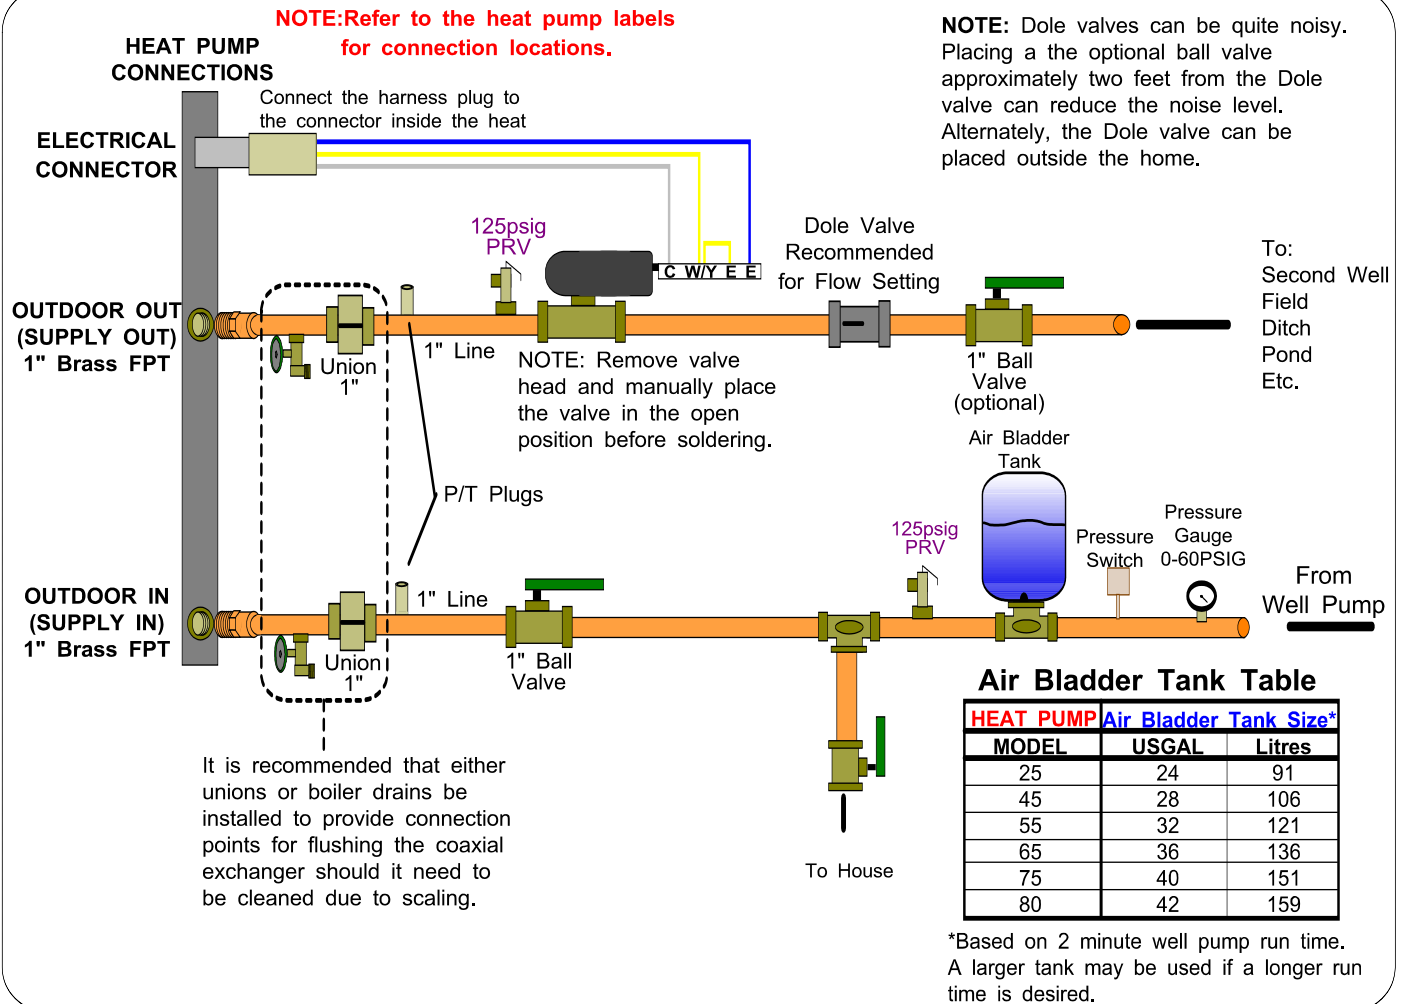


TACO 24VAC Slow Close Water Valve

Connect the harness plug to the connector inside the heat pump.

ELECTRICAL CONNECTOR

Piping is as shown above



NOTE: Ensure the pin is installed in the proper orientation as shown here when re-installing the head.

NOTE: Remove the head from the valve before soldering the valve in place.

Generic 24VAC Solenoid Water Valve


Connect the harness plug to the connector inside the heat pump.

ELECTRICAL CONNECTOR

Piping is as shown above.


					Drawn By Chris Geddes	Date 10 DEC 08	MARITIME GEOTHERMAL LTD.			170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Chris Geddes	Date 10 DEC 08					
02	000228	C. GEDDES	C. GEDDES	21 MAY 2014	Approved By Chris Geddes (ENG)	Date 10 DEC 08	Drawing Name Typical Ground Water Installation for Size 25-80 Heat Pumps (Brass FPT)				
01	Initial Release	C. GEDDES	C. GEDDES	10 DEC 08	Approved By (MFG)	Date					
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A	Drawing Number 000907CDG	Drawing Rev 02	SHEET 1 of 1	

1. Dual-Flow Groundwater (Well) Installation

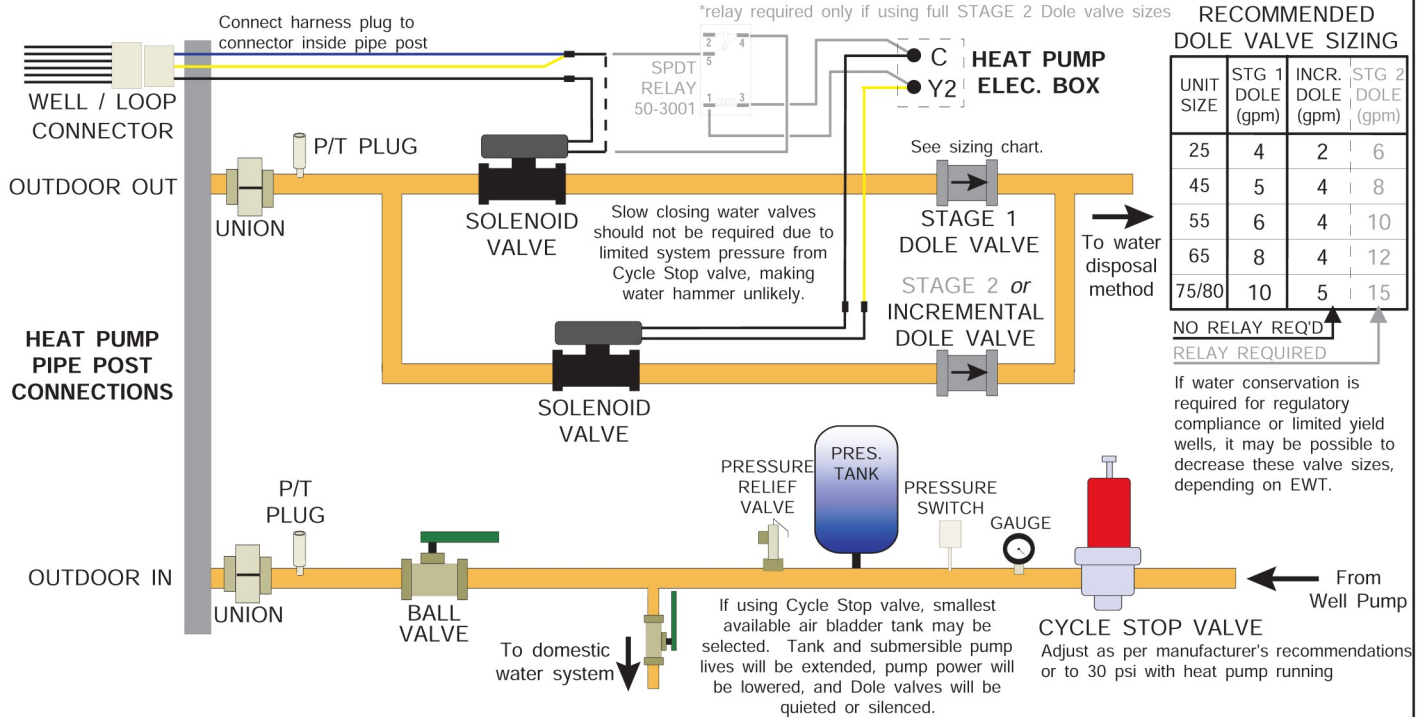




2. Dual-Flow Groundwater (Well) Installation with Slow Closing Water Valve

For Installations Subject to Water Hammer Even at Low System Pressures, or Without Cycle Stop Valve

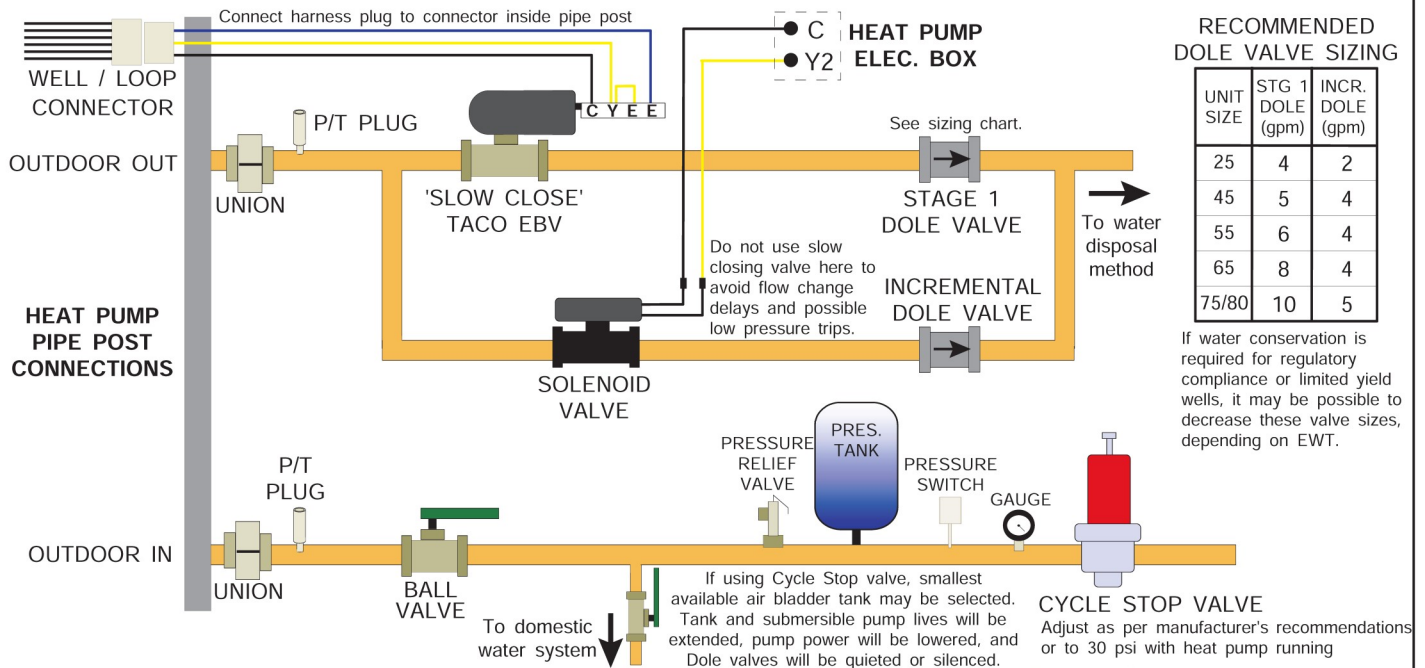

					Drawn By Dan Rheault	Date 22-Nov-2013	MARITIME GEOTHERMAL LTD.			170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Dan Rheault	Date 22-Nov-2013					
					Approved By (ENG)	Date	Drawing Name Dual-Flow Groundwater (Well) Installation for Size 25-75 Heat Pumps				
					Approved By (MFG)	Date					
01	Initial Release	D. RHEAULT	D. RHEAULT	22-Nov-2013	Approved By	Date	Size A	Drawing Number 001822CDG	REV 01	SHEET 1 of 1	
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date					

GROUND WATER DISPOSAL METHODS

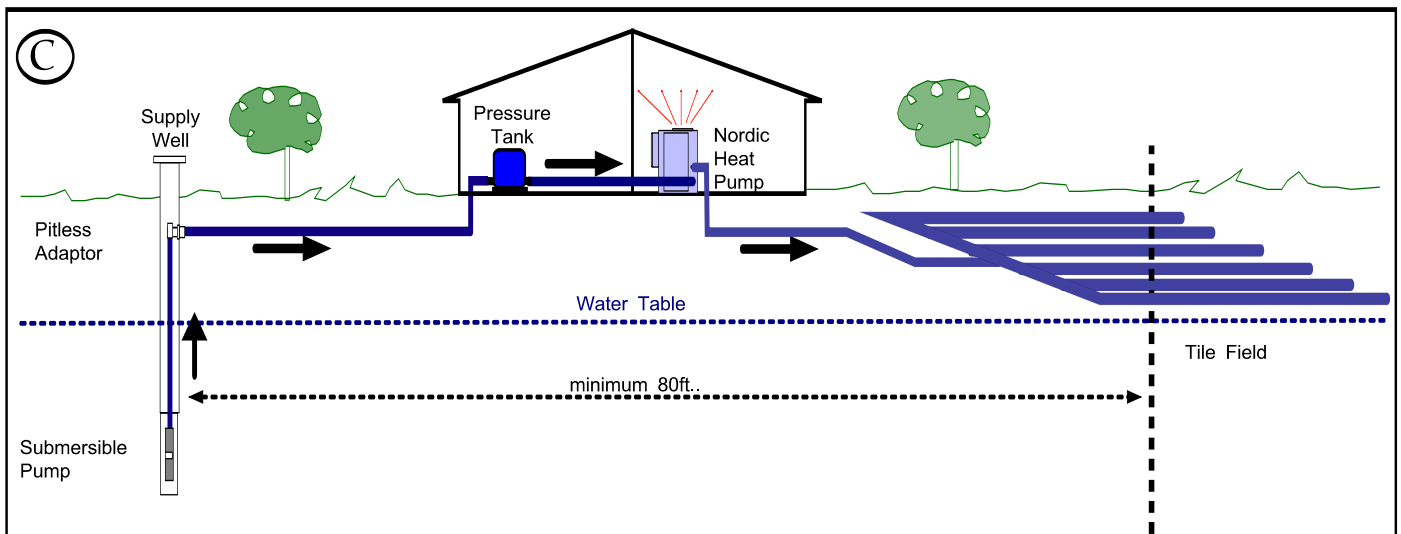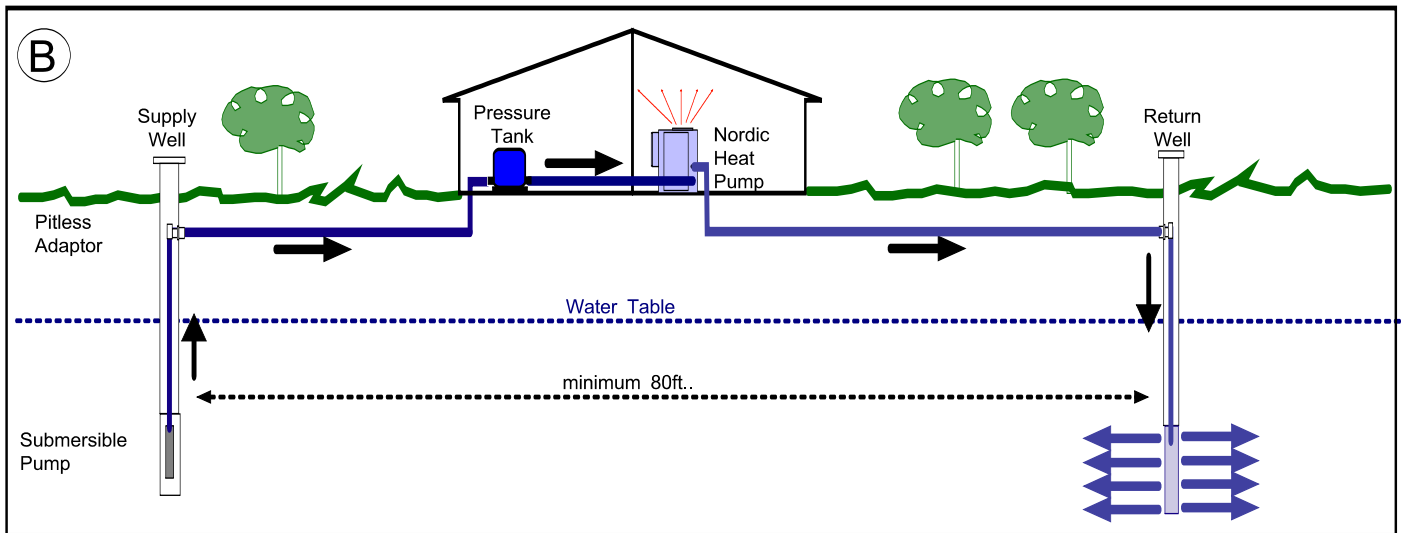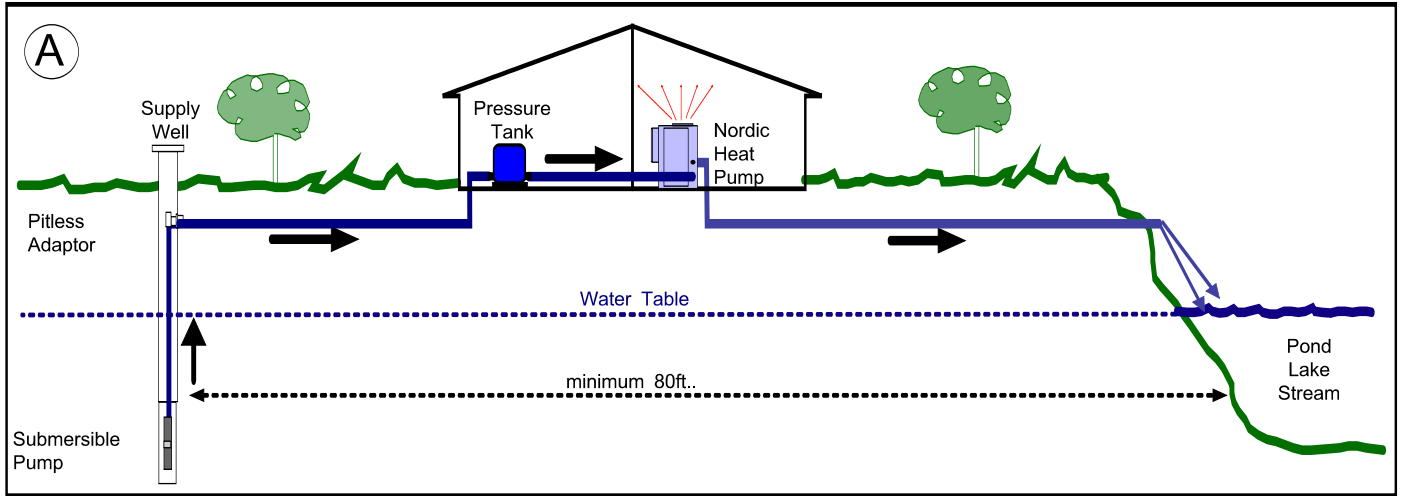

					Drawn By Chris Geddes	Date 04 FEB 08	MARITIME GEOTHERMAL LTD.			170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Chris Geddes	Date 04 JAN 08					
					Approved By Chris Geddes	(ENG) Date 04 FEB 08	Drawing Name Ground Water Disposal Methods				
					Approved By (MFG)	Date					
01	Initial Release	C. GEDDES	C. GEDDES	04 FEB 08	Approved By	Date	Size A	Drawing Number 000619INF	REV 01	SHEET 1 of 1	
REV	ECO #	IMPL BY	APVD BY	DATE							

Startup Procedure

The Startup Record located in this manual is used in conjunction with this startup procedure to provide a detailed record of the installation. A completed copy should be left on site, a copy kept on file by the installer and a copy should be sent to Maritime Geothermal Ltd.

Check the boxes or fill in the data as each step is completed. For data boxes, circle the appropriate units.

Pre-Start Inspection

Line Set:

1. Ensure the system has been pressure tested, vacuumed to 500 microns and any extra charge required has been added.
2. Ensure both access valves have been fully opened and the caps have been put back on and tightened. Check the caps for leaks.
3. Ensure both RS compressor unit and air handler are securely mounted in place.

Ductwork:

1. Verify that all ductwork has been completed and is firmly attached to the air handler. Verify that any dampers or diverters are properly set for operation of the heat pump.
2. Verify that all registers are open and clear of any objects that would restrict the airflow.
3. Verify that a new air filter is installed and the cover is secured.
4. Verify the condensate drain is connected, properly vented and free of debris.
5. If a plenum heater has been installed, verify that it is securely fastened.

Outdoor Loop (Ground Loop):

1. Verify that all shutoff valves are fully open and there are no restrictions in the piping from the compressor unit to the ground loop, and that full flow is available to the heat pump.
2. Verify that the entire system has been flooded and all the air has been purged as much as possible. Further purging may be required after the system has been operating for a while.
3. Verify that the loop contains the proper mix of antifreeze for the intended application. Record the type of antifreeze and the mixture value on the startup sheet; circle % Vol. or % Weight.
4. Record the static loop pressure on the startup sheet.

Outdoor Loop (Open Loop):

1. Verify there are no leaks in the connections to the compressor unit. Verify the water valve is installed and properly oriented in the water out line.
2. Verify that there is flow control in water out line.

Domestic Hot Water (Desuperheater):

1. Verify that all shutoff valves are fully open and there are no restrictions in the piping from the heat pump to the domestic hot water tank.
2. Verify that the entire system has been flooded and all the air has been purged as much as possible. Further purging may be required after the system has been operating for a while.
3. Verify that the brown wire with the insulated terminal is disconnected in the electrical box. Refer to the schematic diagram for more information.

Electrical:

1. **Ensure the power to the both units is off. Ensure the power to the plenum heater is off if equipped.**
2. Verify all high voltage connections. Ensure that there are no stray wire strands, all connections are tight and the ground wire is connected tightly to the ground connector for the compressor unit, air handler, and plenum heater.
3. Record the fuse / circuit breaker size and wire gauge for the compressor unit and air handler. Record the fuse / circuit breaker size, wire gauge and size of the plenum heater if installed.
4. Verify that the control connections from air handler to the thermostat, air handler to compressor unit, and plenum heater to compressor unit are properly connected and all control signals are off, so that the unit will not start up when the power is turned on.
5. Ensure all access panels except the ones that provide access to the electrical boxes are in place.

Unit Startup

The unit is now ready to be started. The steps below outline the procedure for starting the unit and verifying proper operation of the unit. **It is recommended that safety glasses be worn during the following procedures.**

Preparation:

1. Remove the caps from the service ports and connect a refrigeration manifold set to the unit.
2. Turn the power on to the heat pump and set the thermostat to OFF. Set up the thermostat as per the instructions provided with it so that it will function properly with the heat pump system (set for system type: heat pump). The O signal should be set to active in cooling mode.
3. Measure the following voltages on the compressor contactor and record them on the startup sheet: L1-L2, L2-L3, L1-L3.

Heating Mode:

1. Set the thermostat to heating mode and adjust the setpoint to activate Stage 1 and Stage 2. The fan should slowly ramp up to speed after the time delay of the thermostat expires (if applicable) and the compressor will start (allow 30-60 seconds for the water valve to open for ground water systems)
2. Check the refrigeration gauges. The suction and discharge pressures will depend on the loop temperatures, but they should be about **90-110PSIG** and **260-360PSIG** respectively for a typical start-up.
3. Monitoring the refrigeration gauges while the unit runs. Record the following after 10 minutes of runtime:
 1. Suction pressure
 2. Discharge pressure
 3. Duct Return temperature (poke a small hole in the flex collar and insert probe in airstream)
 4. Duct Supply temperature (poke a small hole in the flex collar and insert probe in airstream)
 5. Duct Delta T (should be between **22-32°F, 12-18°C**)
 6. Outdoor Loop In (Supply In) temperature
 7. Outdoor Loop Out (Supply Out) temperature
 8. Outdoor Delta T (should be between **5-8°F, 3-4°C**)
 9. Outdoor flow (if available)
 10. Compressor L1(C) current (black wire, place meter between electrical box and compressor)
4. Adjust the thermostat setpoint to the desired room temperature and let the unit run through a cycle. Record the setpoint, suction pressure, and discharge pressure when the unit shuts off.
5. For units with a desuperheater, turn the power off to the unit. Connect the brown wire with the blue insulated terminal to the compressor contactor as shown in the electrical box diagram. Turn the DHW Switch in the unit post on. Turn the power to the unit on.
6. Remove the electrical cover from the plenum heater. Place a current clamp meter around one of the supply wires. Turn on the power to the plenum heater. Adjust the thermostat setpoint to **85°F (29°C)**. Verify that the current draw increase as each stage is activated. (10kW has 2 stages, 15kW has 3 stages and 20kW has 4 stages).
7. Verify the DHW IN and DHW OUT temperatures (if applicable) by hand (**caution: pipes get hot**). If the DHW OUT line does not become hotter than the DHW IN line the circulator is air locked. Bleed the air from the system and check the temperature differential again to ensure there is flow from the circulator.

Cooling Mode:

1. Set the thermostat to cooling mode and adjust the setpoint to activate Stage 1 and Stage 2.
2. Monitoring the refrigeration gauges while the unit runs. Record the following after 10 minutes of runtime:
 1. Suction pressure
 2. Discharge pressure
 3. Duct Return temperature
 4. Duct Supply Out temperature
 5. Duct Delta T
 6. Outdoor Loop In (Supply In) temperature
 7. Outdoor Loop Out (Supply Out) temperature
 8. Outdoor Delta T
3. Adjust the thermostat setpoint to the desired room temperature if possible, otherwise set it just low enough to allow the unit to run (i.e. 1°F (0.5°C) less than room temperature) and let the unit run through a cycle. Record the thermostat setpoint, suction pressure and discharge pressure when the unit shuts off.

Final Inspection:

1. Turn the power off to the unit (and plenum heater if installed) and remove all test equipment.
2. Install the electrical box cover and the access panel on the heat pump. Install the service port caps securely to prevent refrigerant loss. Install the electrical cover on the plenum heater if applicable.
3. Do a final check for leaks in the ground water / ground loop system and ensure the area is clean.
4. Turn the power on to the unit and the plenum heater if installed. Set the thermostat to the final settings.

Startup Record:

1. The installer shall sign and date the Startup Record and have the homeowner sign as well. The installer shall leave the Startup Record with the homeowner, retain a copy for filing and send a copy to Maritime Geothermal Ltd. for warranty registration.

Startup Record: RS-Series Two-Stage R410a

Installation Site		Startup Date	Installer	
City			Company	
Province			Model	
Country			Serial #	
Homeowner Name		Homeowner Phone #		

Check boxes unless asked to record data. Circle data units.

PRE-START INSPECTION

Ductwork	Ductwork is completed, dampers/ diverters are adjusted										
	Registers are open and clear of objects										
	Air filter and end cap are installed										
	Condensate Drain is connected, properly vented and free of debris										
	Plenum heater is securely fastened (if applicable)										
Ground Loop System	All shut-off valve are open (full flow available)										
	Loop is full and purged of air										
	Antifreeze type										
	Antifreeze concentration		% Volume	% Weight							
	Loop static pressure		psi	kPa							
Ground Water System	Water Valve installed in return line										
	Flow control installed in return line										
Domestic Hot Water	All shut-off valves are open										
	Lines are full and purged										
	Desuperheater pump wire is disconnected										
Electrical	High voltage connections are correct and securely fastened										
	Circuit breaker (or fuse) size and wire gauge for Heat Pump						A		Ga.		
	Circuit breaker (or fuse) size, wire gauge, and Plenum Heater size						A		Ga.		kW
	Low voltage connections are correct and securely fastened										






STARTUP DATA

Preparation	Voltage across L1 and L2, L1 and L3, L2 and L3					VAC
Heating Mode (10 minutes)	Suction Pressure / Discharge Pressure				psi	kPa
	Duct Return, Duct Supply, and Delta T		In		Out	°F °C
	Outdoor In (Supply In), Outdoor Out (Supply Out), and Delta T		In		Out	°F °C
	Outdoor Flow		lgpm	gpm	L/s	
	Compressor L1 (black wire) current		A			
	Domestic Hot Water functioning					
	Thermostat setpoint, suction and discharge pressures at cycle end		°F	°C		psi
Cooling Mode (10 minutes)	Suction Pressure / Discharge Pressure				psig	kPa
	Duct Return, Indoor Out, and Delta T		In		Out	°F °C
	Outdoor In (Supply In), Outdoor Out (Supply Out), and Delta T		In		Out	°F °C
	Thermostat setpoint, suction and discharge pressures at cycle end		°F	°C		psi

Date:		Installer Signature:		Homeowner Signature:	
--------------	--	-----------------------------	--	-----------------------------	--

A total of three copies are required, one for the homeowner, one for the installer and on to be sent to Maritime Geothermal Ltd.

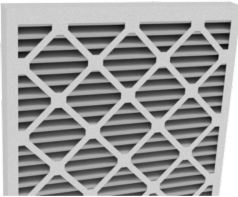Routine Maintenance

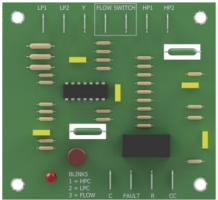MAINTENANCE SCHEDULE			
Item		Interval	Procedure
Air Filter		6 months	Inspect for dirt. Replace if necessary.
Compressor Contactor		1 year	Inspect for pitted or burned points. Replace if necessary.
Air Handler Condensate Drain		1 year	Inspect for clogs. Clean if necessary.
Control Board		When heat pump problem is suspected	Check status light for faults. Rectify problem if alarms found. See Troubleshooting chapter.
Coaxial Heat Exchanger		When experiencing performance degradation that is not explained by a refrigeration circuit problem or low ground loop flow rate	Disconnect the outdoor loop and flush heat exchanger with a calcium removing solution. Generally not required for closed loop or cold water open loop systems; whenever system performance is reduced for warm water open loop systems (unusual).

Troubleshooting Guide

The following steps are for troubleshooting the geothermal heat pump. If the problem is with the domestic hot water or the plenum heater, proceed to those sections at the end of the troubleshooting guide. Repair procedures and reference refrigeration circuit diagrams can be found at the end of the troubleshooting guide.

STEP 1: Verify that the display is present on the thermostat. If it is not, proceed to POWER SUPPLY TROUBLESHOOTING, otherwise proceed to STEP 2.

STEP 2: Remove the door and electrical box cover and check to see if there is a fault code on the control board. If there is, record the fault code. Turn the power off, wait 10 seconds and turn the power back on. Set the thermostat to call for heating or cooling depending on the season.

STEP 3: If a 24VAC signal does not appear across Y1 and C of the terminal strip within 6 minutes, proceed to the THERMOSTAT TROUBLESHOOTING section, otherwise proceed to STEP 4.

STEP 4: If a fault code appears once a signal is present at Y1 and the compressor does not attempt to start, proceed to the FAULT CODE TROUBLESHOOTING section, otherwise proceed to STEP 5.

STEP 5: If no fault codes appear and the compressor does not attempt to start, attempts to start but cannot, starts hard, or starts but does not sound normal, proceed to the COMPRESSOR TROUBLESHOOTING section, otherwise proceed to STEP 6.

STEP 6: If the compressor starts and sounds normal, this means the compressor is OK and the problem lies elsewhere. Proceed to the OPERATION TROUBLESHOOTING section.

NOTE: To speed up the troubleshooting process, the TEST jumper on the safety board can be placed to the YES position to change the anti-short cycle timer to 5 seconds. **Be sure to set it back to NO when servicing is complete.** Be aware that if left in the TEST position, functionality may automatically revert back to standard operation after a short period of time; remove jumper, install in standard position, run unit, and replace jumper in TEST position to re-activate.

POWER SUPPLY TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
No power to the heat pump	Disconnect switch open (if installed)	Verify disconnect switch is in the ON position.	Determine why the disconnect switch was opened, if all is OK close the switch.
	Fuse blown / breaker tripped	At heat pump disconnect box, voltmeter shows 230VAC on the line side but not on the load side.	Reset breaker or replace fuse with proper size and type. (Time-delay type "D")
No display on thermostat.	Transformer breaker tripped	Breaker on transformer is sticking out.	Push breaker back in. If it trips again locate cause of short circuit.
	Faulty transformer	Transformer breaker is not tripped, 230VAC is present across L1 and L3 of the compressor contactor but 24VAC is not present across R _H and C of the terminal strip.	Replace transformer.
	Faulty wiring between heat pump and thermostat	24VAC is not present across C and R(R _H) of the thermostat.	Correct the wiring.
	Faulty Thermostat	24VAC is present across C and R (R _H) of the thermostat but thermostat has no display.	Replace thermostat.

THERMOSTAT TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
No Y1 signal to heat pump (after 6 minutes)	Incorrect thermostat setup	Thermostat does not indicate a call for heat. No 24VAC signal present across Y1 & C of the thermostat	Correct the setup.
	Faulty thermostat to heat pump wiring	24VAC signal present across Y1 & C of the thermostat but not present across Y1 & C of the terminal strip.	Correct or replace wiring
	Faulty thermostat	No 24VAC between Y1 & C of the thermostat when a call is indicated.	Replace thermostat.

FAULT CODE TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Fault Code 1 (High Pressure Control)	High operating refrigerant pressure	Using a refrigeration gauge set, verify that high pressure approaches or exceeds 565psi with compressor on.	See "High Discharge Pressure" in Heating Mode / Cooling Mode Troubleshooting section.
	Faulty High Pressure Control, failed open (very unlikely) * For this test there must be a signal present on Y, but compressor should not be running (disconnect compressor power plug)	Verify that there is 24VAC across HPS (right terminal) on the control board and C of the terminal strip, as well as HPS (left terminal) and C.	Replace high pressure control if voltage is present on one terminal but not the other.
	Faulty control board (very unlikely)	24VAC is present across HPS (right terminal) and C of the terminal strip, as well as HPS (left terminal) and C, but is not present across CC on the control board and C after 10 minutes.	Replace control board.
Fault Code 2 (Low Pressure Control)	Low operating refrigerant pressure	Using a refrigeration gauge set, verify that low pressure approaches or dips below 55psi (ground loop) or 75 psi (open loop) with compressor on.	See "Low Discharge Pressure" in Heating Mode / Cooling Mode Troubleshooting section.
	Faulty low pressure control, failed open (very unlikely) * For this test there must be a signal present on Y1, but compressor should not be running (disconnect compressor power plug)	Verify if there is 24VAC across LPS on the control board and C of the terminal strip, as well as HPS (left terminal) and C.	Replace high pressure control if voltage is present on one terminal but not the other.
	Faulty control board (very unlikely)	24VAC is present across LPS and C of the terminal strip, as well as HPS (left terminal) and C, but is not present across CC on the control board and C after 10 minutes.	Replace control board.
	Little or no refrigerant in unit	With compressor off, use a refrigeration gauge set to check refrigeration pressure of the unit for a very low value (less than 100 psi).	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.

COMPRESSOR TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Compressor will not start	Faulty control board	Measuring from C on the terminal strip, verify there is voltage at Y, HP1, HP2, LP1, LP2, and both flow pins but no voltage present at CC.	Replace control board.
	Faulty run capacitor (Single phase only)	Check value with capacitance meter. Should match label on capacitor. Compressor will hum while trying to start and then trip its overload.	Replace if faulty.
	Loose or faulty wiring	Check all compressor wiring, including inside compressor electrical box.	Fix any loose connections. Replace any damaged wires.
	Faulty compressor contactor	Voltage on line side with contactor held closed, but no voltage on one or both terminals on the load side. Points pitted or burned. Or, 24VAC across coil but contactor will not engage.	Replace contactor.
	Thermal overload on compressor tripped	Ohmmeter shows reading when placed across R and S terminals and infinity between C & R or C & S. A valid resistance reading is present again after the compressor has cooled down.	Proceed to Operation Troubleshooting (particularly <i>high suction pressure</i> and <i>high discharge pressure</i>) to determine the cause of the thermal overload trip.
	Burned out motor (open winding)	Remove wires from compressor. Ohmmeter shows infinite resistance between any two terminals. Note: Be sure compressor overload has had a chance to reset. If compressor is hot this may take several hours.	Replace the compressor.
	Burned out motor (shorted windings)	Remove wires from compressor. Resistance between any two terminals is below the specified value.	Replace the compressor.
	Motor shorted to ground	Remove wires from compressor. Check for infinite resistance between each terminal and ground.	If any terminal to ground is not infinite replace the compressor.
	Seized compressor due to locked or damaged mechanism	Compressor attempts to start but trips its internal overload after a few seconds. (Run capacitor already verified)	Attempt to “rock” compressor free. If normal operation cannot be established, replace compressor.
Compressor starts hard	Start capacitor faulty (Single phase only)	Check with capacitance meter. Check for black residue around blowout hole on top of capacitor.	Replace if faulty. Remove black residue in electrical box if any.
	Potential Relay faulty (Single phase only)	Replace with new one and verify compressor starts properly.	Replace if faulty.
	Compressor is “tight” due to damaged mechanism	Compressor attempts to start but trips its internal overload after a few seconds. Run capacitor has been verified already.	Attempt to “rock” compressor free. If normal operation cannot be established, replace compressor.
Compressor Stage 2 will not activate	Faulty Stage 2 module	Verify if 24VAC is present across Y2 and C of the terminal strip.	Replace module if signal is present. Check wiring if signal is not present.

OPERATION TROUBLESHOOTING - **HEATING MODE**

Fault	Possible Cause	Verification	Recommended Action
High Discharge Pressure	Low airflow	See Fan Troubleshooting section	Correct the problem.
	TXV in compressor unit adjusted too far closed	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be high if TXV is closed too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV in compressor unit stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Filter-dryer plugged	Feel each end of the filter-dryer; they should be the same temperature. If there is a temperature difference then it is plugged. Also causes low suction pressure.	Replace filter-dryer.
	Unit is overcharged (Only possible if unit has been field serviced and incorrectly charged)	High subcooling, low delta T across air coil.	Remove 1/2lb of refrigerant at a time and verify that the discharge pressure reduces. Or remove charge and weigh back in the amount listed on nameplate.
Low Suction Pressure	Low or no outdoor loop liquid flow	Delta T across the Outdoor Loop ports should be 5-7°F (3-4°C), or compare pressure drop to the tables for the unit.	Determine the cause of the flow restriction and correct it. Verify pumps are working and sized correctly for ground loop systems. Verify well pump and water valve is working for ground water systems.
	Entering liquid temperature too cold	Measure the entering liquid temperature to see if it is less than ~25°F.	Increase the size of the ground loop.
	Dirty or fouled coaxial heat exchanger (more likely for open loop, unlikely for ground loop)	Disconnect the water lines and check the inside of the pipes for scale deposits.	Backflush the coaxial exchanger with a calcium-removing cleaning solution.
	Return air too cold	Measure return air temperature. Should be above 60°F (15°C).	Restrict air flow temporarily until room comes up to temperature.
	TXV in compressor unit stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure. TXV may be frosting up.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Low refrigerant charge	Entering liquid temperature, flow and entering air temperature are good but suction is low. Check static refrigeration pressure of the unit for a very low value. Weigh refrigerant out and compare to charge listed on nameplate.	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.
High Suction Pressure (may appear to not be pumping)	Faulty compressor, not pumping	Pressures change only slightly from static values when compressor is started.	Replace compressor.

OPERATION TROUBLESHOOTING - HEATING MODE			
Fault	Possible Cause	Verification	Recommended Action
High Suction Pressure (may appear to not be pumping)	Leaking reversing valve (can cause compressor to overheat and trip internal overload)	Reversing valve is the same temperature on both ends of body, common suction line is warm, compressor is running hot, low compressor discharge pressure.	Switch back and forth into cooling mode to try to free up valve. If it can't be freed, replace reversing valve.
	TXV in compressor unit adjusted too far open	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be low if TXV is open too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV in compressor unit stuck open	Adjusting the TXV does not affect the superheat or the suction pressure. Low super heat and discharge pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
Compressor frosting up	See Low Suction Pressure in this section		
TXV in compressor unit frosting up	TXV in compressor unit stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure.	Attempt to adjust the TXV all the way out and all the way in a few times to loosen it. Replace TXV if this does not work.
Random high pressure trip (does not occur while on site)	Faulty compressor contactor	Points pitted or burned. Contactor sometimes sticks causing the compressor to run without the fan, tripping the high pressure control.	Replace contactor.
	Intermittent fan	See Fan Troubleshooting section.	Correct the problem.

OPERATION TROUBLESHOOTING - COOLING MODE			
Fault	Possible Cause	Verification	Recommended Action
Heating instead of cooling	Thermostat not set up properly	Verify that there is 24VAC across O/B/W1 and C of the terminal strip when calling for cooling.	Correct thermostat setup. Change to a different thermostat.
	Faulty reversing valve solenoid coil	Verify solenoid by removing it from the shaft while the unit is running. There should be a loud "whoosh" sound when it is removed.	Replace solenoid if faulty.
	Faulty reversing valve	A click can be heard when the coil is energized but the unit continues to heat instead of cool.	Replace reversing valve.
High Discharge pressure	Low or no outdoor liquid flow	Delta T across the Outdoor Loop ports should be between 8-12°F (4-7°C), or compare pressure drop to the tables for the unit.	Determine the cause of the flow restriction and correct it. Verify pumps are working for ground loop systems. Verify well pump and water valve is working for ground water systems.
	Entering liquid temperature too warm	Most likely caused by undersized ground loop.	Verify the ground loop sizing. Increase the size of the ground loop if undersized.
	Dirty or fouled coaxial heat exchanger (more likely for open loop, unlikely for ground loop)	Disconnect the water lines and check the inside of the pipes for scale deposits.	Backflush the coaxial exchanger with a calcium-removing cleaning solution.

OPERATION TROUBLESHOOTING - COOLING MODE

Fault	Possible Cause	Verification	Recommended Action
High Discharge pressure	Unit is overcharged (Only possible if unit has been field serviced and incorrectly charged)	High subcooling, low delta T across water coil.	Remove 1/2lb of refrigerant at a time and verify that the discharge pressure reduces. Or remove charge and weigh back in the amount listed on nameplate.
High Suction Pressure (may appear to not be pumping)	TXV in air handler adjusted too far open	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be low if TXV is open too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV in air handler stuck open	Adjusting the TXV does not affect the superheat or the suction pressure. Low super heat and discharge pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Leaking reversing valve (can cause compressor to overheat and trip internal overload)	Reversing valve is the same temperature on both ends of body, common suction line is warm, compressor is running hot, low compressor discharge pressure.	Switch back and forth into cooling mode to try to free up valve. If it can't be freed, replace reversing valve.
	Faulty compressor, not pumping	Pressures change only slightly from static values when compressor is started.	Replace compressor.
Low Suction Pressure	Low airflow	See Fan Troubleshooting section. Note: low airflow will cause the air coil to ice up once the suction drops below 90PSIG .	Correct the problem.
	TXV in air handler stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure. TXV may be frosting up.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Low or no refrigerant charge	Entering air temperature and airflow are good but suction is low. Check static refrigeration pressure of the unit for a very low value. Weigh refrigerant out and compare to charge listed on nameplate.	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.
Compressor frosting up	See Low Suction Pressure in this section		
TXV in air handler frosting up	TXV in air handler stuck almost closed or partially blocked by foreign object.	Adjusting the TXV does not affect the superheat or the suction pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
Random Low Pressure trip (does not occur while there)	Faulty compressor contactor	Points pitted or burned. Contactor sometimes sticks causing the compressor to run without the fan, tripping the low pressure control.	Replace contactor.
	Intermittent fan	See Fan Troubleshooting section.	Correct the problem.

FAN/BLOWER TROUBLESHOOTING

Fault	Possible Cause	Verification	Recommended Action
Low Airflow	Dirty air filter	Inspect.	Replace.
	Dirty air coil	Inspect.	Clean.
	Poor Ductwork	Measure delta T between supply and return ducts at the unit, it in heating mode, it should not be above 30°F(17°C).	The ECM fan will provide proper airflow up to 0.5 inH2o for 1/2HP motors and 0.7 inH2o for 1HP motors. The ductwork is poorly designed or greatly undersized if the fan motor cannot provide the required airflow.
	Airflow selected on tap board is too low	Check selection on tap board.	Select a higher setting.
	Air flow reduction is enabled	AR1 and AR2 are connected with a dry contact or jumper.	Air flow reduction may not be feasible with poor ductwork, and/or lower Air Flow selections. Increase settings until unit operates properly.
Fan operating on wrong stage speed (may be hard to detect)	Wiring between compressor unit and air handler is not correct	Verify wiring.	Correct wiring.
	Fan Control Signal Harness is loose	Verify that the connector is properly inserted into the fan motor. Gently tug on each wire to verify it is properly inserted into the connector.	Repair any loose connections.
	Faulty Control Signal Harness or faulty motor head Ensure signal is present on terminal strip	Measure 24VAC between White (pin 3) and the following at the fan control signal harness (insert probes in connector where wire is inserted, do not unplug the connector): Recirculation = grey (pin 15) Stage 1 = yellow (pin 6) Stage 2 = yellow/black (pin14) Stage 3 = violet (pin 2)	If proper signal isn't present, replace Fan Control Signal Harness. If proper signal is present, replace fan motor head.
Fan not operating or operating intermittently	Wiring between compressor unit and air handler is not correct	Verify wiring.	Correct wiring.
	Fan Control Signal Harness and/or Fan Power Harness is loose	Verify that the connector is properly inserted into the fan motor. Gently tug on each wire to verify it is properly inserted into the connector.	Repair any loose connections.
	Faulty Control Signal Harness or faulty motor head Ensure signal is present on terminal strip	Measure 24VAC between White (pin 3) and the following at the fan control signal harness (insert probes in connector where wire is inserted, do not unplug the connector): Recirculation = grey (pin 15) Stage 1 = yellow (pin 6) Stage 2 = yellow/black (pin14) Stage 3 = violet (pin 2)	If proper signal isn't present, replace Fan Control Signal Harness. If proper signal is present, replace fan motor head.
	Faulty Fan Power Harness or faulty motor	Insert the tips of the voltmeter probes into the back of the connector at the fan to measure the voltage across the red and black wires. Value should be 230VAC.	Replace Power Harness if 230VAC is not present, replace motor if 230VAC is present

PLENUM HEATER TROUBLE SHOOTING

Fault	Possible Cause	Verification	Recommended Action
No 230VAC across plenum heater L1 and L2	Disconnect switch open (if installed)	Verify disconnect switch is in the ON position.	Determine why the disconnect switch was opened, if all is OK close the switch.
	Fuse blown / breaker tripped	At plenum heater disconnect box (if installed), voltmeter shows voltage on the line side but not on the load side. Check if breaker is tripped.	Reset breaker or replace fuse at plenum heater disconnect box. Replace fuse with proper size and type. (Time-delay type "D")
	Same "Line" to L1 and L2	Measuring L1 to ground and L2 to ground both yield 115VAC, but L1 to L2 yields 0VAC.	Correct wiring.
No W2 signal at heat pump terminal strip	No call for auxiliary or emergency heat from thermostat	Verify that the thermostat is indicating that auxiliary or emergency heat should be on.	Set thermostat to engage auxiliary or emergency heat. (Note that some thermostats require a jumper between auxiliary and emergency. Check the tstat manual.)
	Faulty thermostat	Thermostat doesn't indicate a call for auxiliary or emergency when it should. Or indicates auxiliary or emergency but no 24VAC signal present across C and the auxiliary and/or emergency pin at the thermostat.	Replace thermostat.
	Faulty thermostat wiring	24VAC signal is present across C and the auxiliary and/or emergency pin at the thermostat but no 24VAC signal is present across W2 and C at the heat pump terminal strip.	Correct wiring.
No 24VAC signal from C to ground at the plenum heater control board	Plenum heater transformer is burned out	Voltmeter does not show 24VAC across transformer secondary .	Replace transformer.
	Plenum heater control board is faulty	Transformer tested OK in previous step.	Replace control board.
No 24VAC signal from 1 to ground at the plenum heater control board (when a plenum heater demand is present)	Faulty wiring	24VAC present across C and ground at the plenum heater, but not across ground of the plenum heater and C _P of the heat pump terminal strip	Correct the wire which should run from heat pump C _P to plenum heater C.
		If above tested OK, 24VAC is present across ground of plenum heater and 1 of the heat pump terminal strip, but not across ground of plenum heater and 1 of the plenum heater.	Correct the wire which should run from heat pump terminal "1" to plenum heater terminal "1".
	Faulty plenum heater relay in heat pump	24VAC is present across pin 1 and pin 3 of the relay, 24VAC is present from heat pump terminal strip I to plenum heater ground, but not from heat pump terminal strip 1 to plenum heater ground.	Replace relay.

PLENUM HEATER TROUBLE SHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Plenum heater thermal overload is tripped	Fan not operating	See Fan/Blower Troubleshooting section	Correct problem. Reset thermal overload.
	Plenum heater is not positioned so that majority of airflow passes over elements (if installed in ductwork outside air handler)	Plenum heater meant for internal installation is installed in a larger duct outside air handler, or is positioned after duct elbow	Reposition plenum heater, or obtain a plenum heater model with a wider element cage (contact Maritime Geothermal).
	Faulty overload	Reset thermal overload	Replace if faulty.

DOMESTIC HOT WATER (DESUPERHEATER) TROUBLE SHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Insufficient hot water (tank problem)	Thermostat on hot water tank set too low; should be set at 120°F to 140°F	Visually inspect the setting.	Adjust the setting.
	Breaker tripped, or fuse blown in electrical supply to hot water tank	Check both line and load sides of fuses. If switch is open determine why (possible shorted element).	Correct problem, and replace blown fuse or reset breaker.
	Reset button tripped on hot water tank	Check voltage at elements with multimeter.	Push reset button.
Insufficient hot water (heat pump problem)	DHW switch is turned off	Inspect switch, located on heat pump cabinet post.	Turn switch on.
	Circulator pump seized or motor failed	Use an amprobe to measure current draw.	Replace if faulty.
	Blockage or restriction in the water line or hot water heat exchanger	Check water flow and power to pump. Check water lines for obstructions.	Remove obstruction in water lines. Acid treat the domestic hot water coil.
	Faulty DHW cutout (failed open)	Check contact operation. Should close at 120°F and open at 140°F.	Replace DHW cutout if faulty.
	Heat pump not running enough hours to make sufficient hot water	Note the amount of time the heat pump runs in any given hour.	Temporarily turn up the tank thermostats until colder weather creates longer run cycles.
Water is too hot.	Faulty DHW cutout (failed closed)	Check contact operation. Should close at 120°F and open at 140°F.	Replace DHW cutout if faulty.
	Thermostat on hot water tank set too high; should be set at 120°F to 140°F	Visually inspect the setting.	Adjust the setting.

Repair Procedures

Pumpdown Procedure

1. Connect the refrigerant recovery unit to the compressor unit's internal service ports via a refrigeration charging manifold and to a recovery tank as per the instructions in the recovery unit manual. Plan to dispose of refrigerant if there was a compressor burnout.
2. All refrigerant to water heat exchangers (brazed plates) **must either have full flow or be completely drained** of fluid before recovery begins. Failure to do so can freeze and rupture the heat exchanger, voiding its warranty.
3. Ensure all hose connections are properly purged of air. Start the refrigerant recovery as per the instructions in the recovery unit manual.
4. Allow the recovery unit suction pressure to reach a vacuum. Once achieved, close the charging manifold valves. Shut down, purge and disconnect the recovery unit as per the instructions in its manual. Ensure the recovery tank valve is closed before disconnecting the hose to it.
5. Connect a nitrogen tank to the charging manifold and add nitrogen to the heat pump until a positive gauge pressure of 5-10 psig is reached. This prevents air from being sucked into the unit by the vacuum when the hoses are disconnected.

The heat pump is now ready for repairs.

General Repair Procedure

1. Perform repairs to system.
 - Always ensure nitrogen is flowing through the system at the lowest flow rate that can be felt at the discharge during any brazing procedures to prevent soot buildup inside the pipes.
 - It is recommended to replace the liquid line filter-dryer any time the refrigeration system has been exposed to the atmosphere.
 - Place a wet rag around any valves being installed, as almost all valve types have non-metallic seats or seals that will be damaged by excessive heat, and aim the torch flame away from the valve body. Solder only one joint at a time and cool joints down in between.
2. Pressure test the system with nitrogen. It is recommended to check for leaks using leak detection spray, Spray Nine, or soapy water. Check at 10, 25, 50 and 100 psig. Allow the system to sit at 100 psig for at least an hour, then re-check.

Vacuuming & Charging Procedure

After completion of repairs and nitrogen pressure testing, the refrigeration circuit is ready for vacuuming.

1. Release the nitrogen pressure and connect the vacuum pump to the charging manifold. Start the vacuum pump and open the charging manifold valves. Vacuum until the vacuum gauge remains at less than 500 microns for at least 1 minute with the vacuum pump valve closed.
2. Close the charging manifold valves then shut off and disconnect the vacuum pump. Place a refrigerant tank with the proper refrigerant on a scale and connect it to the charging manifold. Purge the hose to the tank.
3. Weigh in the appropriate amount **and type** of refrigerant through the low pressure (suction) service port. Refer to the nameplate label on the unit for the proper refrigerant type and charge amount.
4. If the unit will not accept the entire charge, the remainder can be added through the low pressure service port after the unit has been restarted.

Compressor Replacement Procedure

1. Pump down the system as per the Pumpdown Procedure above. **If there was a compressor burn out (motor failure), the refrigerant cannot be reused and must be disposed of according to local codes.**
2. Disconnect piping.
3. Replace the compressor. Replace the liquid line filter-dryer. Always ensure nitrogen is flowing through the system at the lowest flow rate that can be felt at the discharge during any brazing procedures to prevent soot buildup inside the pipes.
4. Vacuum the unit as per above procedure.
5. If there was a compressor burnout:
 - a) Charge the unit with **new** refrigerant and operate it for continuously for 2 hours. Pump down the unit and replace the filter-dryer. Vacuum the unit as per above procedure.
 - b) Charge the unit (refrigerant can be re-used) and operate it for 2-3 days. Perform an acid test. If it fails, pump down the unit and replace the filter-dryer.
 - c) Charge the unit (refrigerant can be re-used) and operate it for 2 weeks. Perform and acid test. If it fails, pump down the unit and replace the filter-dryer.
5. Charge the unit a final time. Unit should now be clean and repeated future burn-outs can be avoided.

Model Specific Information

Table 22 - Shipping Information: RS Compressor Unit

MODEL	WEIGHT lb. (kg)	DIMENSIONS in (cm)		
		L	W	H
RS-45	287 (130)	34 (86)	34 (86)	35 (89)
RS-55	325 (148)	34 (86)	34 (86)	35 (89)
RS-65	347 (158)	34 (86)	34 (86)	35 (89)
RS-75	380 (173)	34 (86)	34 (86)	35 (89)
RS-80	405 (184)	34 (86)	34 (86)	35 (89)

Table 23 - Shipping Information: Vertical Air Handlers

MODEL	WEIGHT lb. (kg)	DIMENSIONS in (cm)		
		L	W	H
AHV-45	195 (89)	38 (97)	32 (81)	48 (122)
AHV-55	210 (95)	38 (97)	32 (81)	48 (122)
AHV-65	230 (105)	38 (97)	32 (81)	48 (122)
AHV-75/80	245 (111)	38 (97)	32 (81)	48 (122)

Table 24 - Shipping Information: Horiz. Air Handlers

MODEL	WEIGHT lb. (kg)	DIMENSIONS in (cm)		
		L	W	H
AHH-45	199 (90)	50 (127)	38 (97)	30 (76)
AHH-55	215 (98)	50 (127)	38 (97)	30 (76)
AHH-65	233 (106)	50 (127)	38 (97)	30 (76)
AHH-75/80	250 (114)	50 (127)	38 (97)	30 (76)

Table 25 - Refrigerant Charge

MODEL	lb	kg	Refrigerant	Oil Type
RS-45	7.5	3.4	R410a	POE
RS-55	8.0	3.6	R410a	POE
RS-65	10.0	4.5	R410a	POE
RS-75	11.0	5.0	R410a	POE
RS-80	11.5	5.3	R410a	POE

- Oil capacity is marked on the compressor label.

- **Refrigerant charge is subject to revision;** actual charge is indicated on the unit nameplate.

Table 26 - RS Compressor Unit Sound Levels

MODEL	1 ft distance (dBA)	3 ft distance (dBA)
RS-45	57.2	56.0
RS-55	56.4	54.9
RS-65	55.7	53.0
RS-75	55.7	53.0
RS-80	55.7	53.0

* With all doors installed.

Table 27 - Operating Temperature Limits

Loop	Mode	Parameter	°F	°C	Note
OUTDOOR (ground loop)	Heating (water/open loop)	Minimum ELT	41	5	
	Heating (antifreeze/ground loop)	Minimum ELT	23	-5	Adequate antifreeze concentration required.
	Heating	Maximum ELT	80	27	Reduce flow above this temperature.
	Cooling	Minimum ELT	41	5	Flow reduction may be required.
	Cooling	Maximum ELT	110	43	
INDOOR (air duct)	Heating	Minimum EAT	60	16	Reduce air flow if necessary during heating startup.
	Heating	Maximum EAT	100	38	
	Cooling	Minimum EAT	50	10	
	Cooling	Maximum EAT	100	38	Reduce air flow if necessary during cooling startup.

* Values in this table are for rated liquid and airflow values.

Standard Capacity Ratings

Standards C13256-1 / ISO13256-1 / ARI 13256-1

Table 28 - Standard Capacity Ratings - Ground Loop Heating*										60Hz	
EAT 68°F (20°C)		* 15% Methanol by Weight Ground Loop Fluid						STAGE 1 - ELT 41°F (5°C) STAGE 2 - ELT 32°F (0°C)			
Model	Nominal Size	Liquid Flow		Mode	Airflow		Input Energy	Capacity		COP _H	
	tons	gpm	L/s		cfm	L/s		Watts	Btu/hr		kW
RS-45	3	10.0	0.63	Stage 1	1030	486	1,535	22,000	6.4	4.3	
				Stage 2	1200	566	2,155	27,200	8.0	3.6	
RS-55	4	12.0	0.76	Stage 1	1240	585	2,045	29,100	8.5	4.2	
				Stage 2	1500	708	2,700	35,600	10.4	3.8	
RS-65	5	14.0	0.88	Stage 1	1540	727	2,565	35,900	10.5	4.0	
				Stage 2	1900	897	3,390	44,000	12.9	3.7	
RS-75	6	16.0	1.01	Stage 1	1660	783	3,435	45,100	13.2	3.9	
				Stage 2	2100	991	4,355	53,200	15.6	3.6	
RS-80	6	17.0	1.07	Stage 1	2400	1133	4,940	63,000	18.5	3.5	

Table 29 - Standard Capacity Ratings - Ground Water Heating										60Hz
EAT 68°F (20°C)					ELT 50°F (10°C)					
Model	Nominal Size	Liquid Flow		Mode	Airflow		Input Energy	Capacity		COP _H
	tons	gpm	L/s		cfm	L/s	Watts	Btu/hr	kW	W/W
RS-45	3	10.0	0.63	Stage 1	1030	486	1,625	25,500	7.5	4.5
				Stage 2	1200	566	2,375	35,700	10.5	4.3
RS-55	4	12.0	0.76	Stage 1	1240	585	2,075	34,500	10.1	4.8
				Stage 2	1500	708	2,960	47,200	13.8	4.6
RS-65	5	14.0	0.88	Stage 1	1540	727	2,670	42,800	12.5	4.6
				Stage 2	1900	897	3,740	58,700	17.2	4.5
RS-75	6	16.0	1.01	Stage 1	1660	783	3,540	52,000	15.2	4.3
				Stage 2	2100	991	4,780	68,500	20.1	4.2
RS-80	6	17.0	1.07	Stage 1	2400	1133	5,315	77,500	22.7	4.1

Table 30 - Standard Capacity Ratings - Ground Loop Cooling*										60Hz	
EAT 80.6°F (27°C), RH=46% * 15% Methanol by Weight Ground Loop Fluid								STAGE 1 - ELT 68°F (20°C) STAGE 2 - ELT 77°F (25°C)			
Model	Size	Liquid Flow		Mode	Airflow		Input Energy	Capacity		COP _c	EER
	tons	gpm	L/s		cfm	L/s	Watts	Btu/hr	kW	W/W	Btu/W
RS-45	3	10.0	0.63	Stage 1	1030	486	1,130	26,800	7.9	7.0	23.7
				Stage 2	1200	566	2,155	35,100	10.3	4.8	16.3
RS-55	4	12.0	0.76	Stage 1	1240	585	1,470	35,800	10.5	7.2	24.5
				Stage 2	1500	708	2,640	45,400	13.3	5.1	17.3
RS-65	5	14.0	0.88	Stage 1	1540	727	1,910	45,500	13.3	6.6	22.6
				Stage 2	1900	897	3,445	57,600	16.9	4.9	16.8
RS-75	6	16.0	1.01	Stage 1	1660	783	2,620	52,700	15.4	6.2	21.0
				Stage 2	2100	991	4,300	66,400	19.5	4.6	15.7
RS-80	6	17.0	1.07	Stage 1	2400	1133	4,950	81,500	23.9	4.5	15.4

Table 31 - Standard Capacity Ratings - Ground Water Cooling											60Hz
EAT 80.6°F (27°C), RH=46%										ELT 59°F (15°C)	
Model	Size	Liquid Flow		Mode	Airflow		Input Energy	Capacity		COP _c	EER
	tons	gpm	L/s		cfm	L/s	Watts	Btu/hr	kW	W/W	Btu/W
RS-45	3	10.0	0.63	Stage 1	1030	486	1,080	29,500	8.6	8.0	27.3
				Stage 2	1200	566	1,805	38,500	11.3	6.3	21.3
RS-55	4	12.0	0.76	Stage 1	1240	585	1,315	37,300	10.9	8.4	28.5
				Stage 2	1500	708	2,245	50,200	14.7	6.6	22.5
RS-65	5	14.0	0.88	Stage 1	1540	727	1,705	47,200	13.8	8.0	27.1
				Stage 2	1900	897	2,865	62,600	18.3	6.3	21.5
RS-75	6	16.0	1.01	Stage 1	1660	783	2,305	54,300	15.9	7.2	24.4
				Stage 2	2100	991	3,710	69,800	20.5	5.7	19.4
RS-80	6	17.0	1.07	Stage 1	2400	1133	4,130	86,500	25.4	5.8	19.6

Pressure Drop Data

Table 32: Loop Pressure Drop Data

			Water 104°F		Water 50°F		15% Methanol 32°F		35% prop. glycol 32°F	
	gpm	L/s	psi	kPa	psi	kPa	psi	kPa	psi	kPa
RS-45	4	0.25	0.8	5.5	0.9	6.2	1.0	6.9	1.3	9.0
	5	0.32	1.1	7.6	1.2	8.3	1.4	9.6	1.8	13
	6	0.38	1.6	11	1.7	12	2.0	14	2.6	18
	7	0.44	1.9	13	2.1	14	2.5	17	3.3	23
	8	0.50	2.6	18	2.8	19	3.0	21	4.0	27
	9	0.57	3.2	22	3.5	24	3.8	26	5.0	34
	10	0.63	3.8	26	4.0	28	4.7	32	6.2	43
	11	0.69	4.3	30	4.6	32	5.5	38	7.2	50
	12	0.76	5.2	36	5.5	38	6.6	45	8.7	60
	13	0.82	5.9	41	6.2	43	7.4	51	9.7	67
	14	0.88	6.7	46	7.0	48	8.6	59	11.3	78
	15	0.95	8.0	55	8.2	57	9.5	65	12.5	86
RS-55	6	0.38	1.1	7.6	1.2	8.3	1.3	9.0	1.7	12
	7	0.44	1.5	10	1.6	11	1.6	11	2.1	14
	8	0.50	1.8	12	1.9	13	2.1	14	2.8	19
	9	0.57	2.2	15	2.4	17	2.4	17	3.2	22
	10	0.63	2.7	19	2.9	20	3.1	21	4.1	28
	11	0.69	2.8	19	3.1	21	3.6	25	4.7	33
	12	0.76	3.4	23	3.7	26	4.4	30	5.8	40
	13	0.82	4	28	4.3	30	5	34	6.6	45
	14	0.88	4.7	32	5	34	5.7	39	7.5	52
	15	0.95	5.6	39	5.8	40	6.4	44	8.4	58
	16	1.01	6.1	42	6.3	43	7.1	49	9.3	64

Table 32: Loop Pressure Drop Data
(cont'd)

			Water 104°F		Water 50°F		15% Methanol 32°F		35% prop. glycol 32°F	
	gpm	L/s	psi	kPa	psi	kPa	psi	kPa	psi	kPa
RS-65	6	0.38	1.1	7.6	1.2	8.3	1.3	9.0	1.7	12
	7	0.44	1.4	10	1.5	10	1.8	12	2.4	16
	8	0.50	1.8	12	1.9	13	2.2	15	2.9	20
	9	0.57	2.1	14	2.3	16	2.7	19	3.6	24
	10	0.63	2.4	17	2.6	18	3.3	23	4.3	30
	11	0.69	2.9	20	3.2	22	4	28	5.3	36
	12	0.76	3.6	25	3.9	27	4.6	32	6.0	42
	13	0.82	4.1	28	4.4	30	5.2	36	6.8	47
	14	0.88	4.7	32	5	34	5.8	40	7.6	53
	15	0.95	5.5	38	5.7	39	6.5	45	8.5	59
	16	1.01	6.3	43	6.5	45	7.3	50	9.6	66
RS-75	6	0.38	0.6	4.1	0.7	4.8	0.9	6.2	1.2	8.2
	7	0.44	0.8	5.5	0.9	6.2	1.0	6.9	1.3	9.0
	8	0.50	1.2	8.3	1.3	9.0	1.3	9.0	1.7	12
	9	0.57	1.5	10	1.6	11	1.6	11	2.1	14
	10	0.63	1.8	12	1.9	13	2.1	14	2.8	19
	11	0.69	2.1	14	2.3	16	2.4	17	3.2	22
	12	0.76	2.4	17	2.6	18	2.9	20	3.8	26
	13	0.82	2.8	19	3.0	21	3.3	23	4.3	30
	14	0.88	2.9	20	3.2	22	3.7	26	4.9	33
	15	0.95	3.2	22	3.5	24	4.1	28	5.4	37
	16	1.01	3.8	26	4.0	28	4.7	32	6.2	43
	17	1.07	4.2	29	4.4	30	5.2	36	6.8	47
RS-80	9	0.57	1.2	8.3	1.3	9.0	1.4	10	1.8	13
	10	0.63	1.5	10	1.6	11	1.7	12	2.2	15
	11	0.69	1.8	12	1.9	13	2.2	15	2.9	20
	12	0.76	2.2	15	2.4	17	2.6	18	3.4	24
	13	0.82	2.5	17	2.7	19	3.1	21	4.1	28
	14	0.88	2.9	20	3.1	21	3.5	24	4.6	32
	15	0.95	3.1	21	3.3	23	3.8	26	5.0	34
	16	1.01	3.3	23	3.6	25	4.1	28	5.4	37
	17	1.07	3.7	26	4.1	28	4.6	32	6.0	42
	18	1.14	4.2	29	4.5	31	4.9	34	6.4	44

Performance Tables

RS-45-HACW-P-1T R410a, 60 Hz, ZPS30K5E-PFV

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Cond. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
	26	15	10	22	4.1	19,393	8.4	179	2,128	68	96	1,200	84	22.7	26,396	3.63
	32	20	10	28	4.4	21,005	8.8	179	2,211		99	1,200	86	24.3	28,290	3.75
	38	25	10	33	4.8	22,718	9.1	179	2,295		102	1,200	89	26.0	30,291	3.87
	44	30	10	39	5.3	25,249	9.5	179	2,404		105	1,200	92	28.5	33,196	4.05
	49	35	10	43	5.6	28,175	9.8	179	2,479		107	1,200	94	31.3	36,401	4.30
	55	40	10	49	6.1	30,329	10.2	179	2,572		110	1,200	96	33.4	38,873	4.43
	61	45	10	55	6.5	32,592	10.6	179	2,669		113	1,200	100	35.6	41,467	4.55
	67	50	10	60	7.0	34,965	11.1	179	2,770		116	1,200	103	38.0	44,185	4.67

OUTDOOR LOOP (15% Methanol)							ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
COOLING	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Evap. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Latent (Btu/hr)	Sensible (Btu/hr)	Cooling (Btu/hr)	EER
	51	70	10	61	9.5	47,375	6.0	171	1,642	80.6	44	1,200	57	23.2	13,299	28,417	41,716	25.4
	56	75	10	66	9.5	47,222	6.4	171	1,766		44	1,200	58	22.9	13,115	28,024	41,140	23.3
	61	80	10	70	9.4	47,190	6.9	171	1,892		45	1,200	58	22.6	12,968	27,709	40,677	21.5
	66	85	10	75	9.4	46,908	7.4	171	2,036		46	1,200	58	22.2	12,721	27,182	39,904	19.6
	72	90	10	82	9.8	46,530	7.9	171	2,192		46	1,200	59	21.9	12,344	26,670	39,014	17.8
	77	95	10	87	9.8	46,441	8.4	171	2,332		47	1,200	59	21.6	12,165	26,283	38,447	16.5
	82	100	10	92	9.7	46,200	9.0	171	2,478		48	1,200	59	21.2	11,931	25,777	37,707	15.2
	87	105	10	97	9.7	45,950	9.6	171	2,632		48	1,200	60	20.7	11,685	25,246	36,931	14.0

METRIC

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Cond. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Heating (W)	COP _H
	-3.3	-9.4	0.63	-5.6	2.3	5,682	8.4	179	2,128	20	35.6	566	28.7	12.6	7,734	3.63
	0.0	-6.7	0.63	-2.5	2.5	6,154	8.8	179	2,211		37.2	566	30.2	13.5	8,289	3.75
	3.3	-3.9	0.63	0.7	2.7	6,656	9.1	179	2,295		38.9	566	31.7	14.5	8,875	3.87
	6.7	-1.1	0.63	3.7	3.0	7,398	9.5	179	2,404		40.6	566	33.1	15.8	9,726	4.05
	9.4	1.7	0.63	6.3	3.1	8,255	9.8	179	2,479		41.7	566	34.6	17.4	10,665	4.30
	12.8	4.4	0.63	9.4	3.4	8,886	10.2	179	2,572		43.3	566	35.8	18.6	11,390	4.43
	16.1	7.2	0.63	12.5	3.6	9,549	10.6	179	2,669		45.0	566	37.6	19.8	12,150	4.55
	19.4	10.0	0.63	15.6	3.9	10,245	11.1	179	2,770		46.7	566	39.4	21.1	12,946	4.67

	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
COOLING	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Evap. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Latent (W)	Sensible (W)	Cooling (W)	COP _c
	10.6	21.1	0.63	15.8	5.3	13,881	6.0	171	1,642	27	6.6	566	14.1	12.9	3,897	8,326	12,223	7.44
	13.3	23.9	0.63	18.6	5.3	13,836	6.4	171	1,766		6.8	566	14.3	12.7	3,843	8,211	12,054	6.82
	16.1	26.7	0.63	21.4	5.2	13,826	6.9	171	1,892		7.2	566	14.4	12.6	3,800	8,119	11,918	6.30
	18.9	29.4	0.63	24.1	5.2	13,744	7.4	171	2,036		7.6	566	14.7	12.3	3,727	7,964	11,692	5.74
	22.2	32.2	0.63	27.7	5.4	13,633	7.9	171	2,192		7.9	566	14.8	12.2	3,617	7,814	11,431	5.22
	25.0	35.0	0.63	30.4	5.4	13,607	8.4	171	2,332		8.3	566	15.0	12.0	3,564	7,701	11,265	4.83
	27.8	37.8	0.63	33.2	5.4	13,537	9.0	171	2,478		8.6	566	15.2	11.8	3,496	7,552	11,048	4.46
	30.6	40.6	0.63	35.9	5.4	13,463	9.6	171	2,632		8.9	566	15.5	11.5	3,424	7,397	10,821	4.11

Performance Tables

RS-55-HACW-P-1T R410a, 60 Hz, ZPS40K5E-PFV

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Cond. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
	27	15	12	22	4.7	26,809	11.8	185	2,718	68	98	1,500	92	23.6	35,782	3.86
	33	20	12	28	5.2	29,763	12.1	185	2,784		100	1,500	94	25.7	38,963	4.10
	39	25	12	33	5.8	32,940	12.5	185	2,850		102	1,500	96	28.0	42,364	4.36
	45	30	12	39	6.3	36,095	12.8	185	2,942		104	1,500	98	30.3	45,834	4.56
	50	35	12	43	6.6	39,435	13.1	185	3,033		106	1,500	100	32.0	49,511	4.78
	56	40	12	49	7.2	43,264	13.4	185	3,102		108	1,500	103	34.7	53,577	5.06
	62	45	12	54	7.9	47,338	13.8	185	3,174		110	1,500	106	37.5	57,895	5.34
	68	50	12	59	8.6	51,663	14.1	185	3,247		112	1,500	108	40.4	62,471	5.64

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Evap. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Latent (Btu/hr)	Sensible (Btu/hr)	Cooling (Btu/hr)	EER
	51	70	12	61	10.1	60,504	8.5	192	2,151	80.6	44	1,500	58	22.3	16,911	36,135	53,046	24.7
	56	75	12	66	10.0	60,047	9.1	192	2,297		44	1,500	59	21.9	16,606	35,484	52,090	22.7
	61	80	12	71	9.9	59,555	9.7	192	2,444		44	1,500	59	21.5	16,289	34,806	51,095	20.9
	66	85	12	76	9.8	58,920	10.3	192	2,530		44	1,500	60	21.1	15,993	34,173	50,166	19.8
	71	90	12	81	10.2	58,230	11.0	192	2,614		45	1,500	60	20.4	16,727	32,470	49,197	18.8
	76	95	12	86	10.1	57,809	11.6	192	2,764		45	1,500	61	20.0	16,409	31,853	48,262	17.5
	81	100	12	91	10.0	57,166	12.3	192	2,920		45	1,500	61	19.5	16,009	31,077	47,087	16.1
	86	105	12	96	9.9	56,499	13.0	192	3,083		45	1,500	62	19.0	15,594	30,270	45,864	14.9

METRIC

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Cond. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Heating (W)	COP _H
	-2.8	-9.4	0.76	-5.4	2.6	7,855	11.8	185	2,718	20	36.7	708	33.1	13.1	10,484	3.86
	0.6	-6.7	0.76	-2.3	2.9	8,721	12.1	185	2,784		37.8	708	34.3	14.3	11,416	4.10
	3.9	-3.9	0.76	0.7	3.2	9,651	12.5	185	2,850		38.9	708	35.5	15.5	12,413	4.36
	7.2	-1.1	0.76	3.7	3.5	10,576	12.8	185	2,942		40.0	708	36.8	16.8	13,429	4.56
	10.0	1.7	0.76	6.3	3.7	11,554	13.1	185	3,033		41.1	708	37.8	17.8	14,507	4.78
	13.3	4.4	0.76	9.3	4.0	12,676	13.4	185	3,102		42.2	708	39.3	19.3	15,698	5.06
	16.7	7.2	0.76	12.3	4.4	13,870	13.8	185	3,174		43.3	708	40.8	20.8	16,963	5.34
	20.0	10.0	0.76	15.2	4.8	15,137	14.1	185	3,247		44.4	708	42.5	22.5	18,304	5.64

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Evap. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Latent (W)	Sensible (W)	Cooling (W)	COP _c
	10.6	21.1	0.76	16.2	5.6	17,727	8.5	192	2,151	27	6.4	708	14.6	12.4	4,955	10,587	15,542	7.23
	13.3	23.9	0.76	18.9	5.6	17,593	9.1	192	2,297		6.6	708	14.8	12.2	4,866	10,397	15,262	6.64
	16.1	26.7	0.76	21.6	5.5	17,449	9.7	192	2,444		6.7	708	15.1	11.9	4,773	10,198	14,971	6.12
	18.9	29.4	0.76	24.3	5.5	17,263	10.3	192	2,530		6.8	708	15.3	11.7	4,686	10,013	14,699	5.81
	21.7	32.2	0.76	27.3	5.7	17,061	11.0	192	2,614		7.0	708	15.7	11.3	4,901	9,514	14,415	5.51
	24.4	35.0	0.76	30.1	5.6	16,938	11.6	192	2,764		7.2	708	15.9	11.1	4,808	9,333	14,141	5.12
	27.2	37.8	0.76	32.8	5.6	16,749	12.3	192	2,920		7.3	708	16.1	10.9	4,691	9,106	13,796	4.72
	30.0	40.6	0.76	35.5	5.5	16,554	13.0	192	3,083		7.4	708	16.4	10.6	4,569	8,869	13,438	4.36

Performance Tables

RS-65-HACW-P-1T R410a, 60 Hz, ZPS51K5E-PFV

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Cond. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
	26	15	14	21	4.8	31,644	14.9	300	3,573	68	97	1,900	91	22.6	43,391	3.56
	32	20	14	27	5.2	34,798	15.3	300	3,667		99	1,900	92	24.4	46,866	3.74
	38	25	14	32	5.7	37,954	15.9	300	3,806		102	1,900	94	26.3	50,495	3.89
	44	30	14	38	6.4	42,566	16.3	300	3,903		104	1,900	97	28.9	55,440	4.16
	49	35	14	42	6.8	47,314	16.9	300	4,045		107	1,900	99	31.0	60,717	4.40
	55	40	14	48	7.4	51,599	17.4	300	4,144		109	1,900	101	33.4	65,344	4.62
	61	45	14	53	8.0	56,159	17.8	300	4,247		111	1,900	104	35.9	70,253	4.85
	67	50	14	58	8.7	61,001	18.3	300	4,353		113	1,900	107	38.6	75,456	5.08

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Evap. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Latent (Btu/hr)	Sensible (Btu/hr)	Cooling (Btu/hr)	EER
	49	70	14	60	11.1	77,969	10.8	325	2,663	80.6	45	1,900	56	24.6	19,665	49,095	68,760	25.8
	54	75	14	65	11.1	77,594	11.6	325	2,864		45	1,900	56	24.2	19,362	48,337	67,698	23.6
	59	80	14	70	11.0	77,174	12.4	325	3,067		45	1,900	57	23.8	19,043	47,542	66,585	21.7
	64	85	14	75	10.8	75,547	13.2	325	3,186		46	1,900	58	23.1	18,462	46,091	64,553	20.3
	70	90	14	81	11.1	73,856	14.0	325	3,307		46	1,900	58	22.6	18,682	43,799	62,481	18.9
	75	95	14	86	11.0	73,315	14.8	325	3,513		46	1,900	59	22.1	18,309	42,926	61,235	17.4
	80	100	14	91	10.9	72,743	15.7	325	3,728		47	1,900	59	21.7	17,919	42,012	59,931	16.1
	85	105	14	96	10.8	72,145	16.6	325	3,952		47	1,900	59	21.2	17,512	41,056	58,567	14.8

METRIC

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Cond. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Heating (W)	COP _H
	-3.3	-9.4	0.88	-6.0	2.6	9,272	14.9	300	3,573	20	36.1	900	32.6	12.6	12,713	3.56
	0.0	-6.7	0.88	-2.9	2.9	10,196	15.3	300	3,667		37.2	900	33.6	13.6	13,732	3.74
	3.3	-3.9	0.88	0.2	3.2	11,120	15.9	300	3,806		38.9	900	34.6	14.6	14,795	3.89
	6.7	-1.1	0.88	3.1	3.6	12,472	16.3	300	3,903		40.0	900	36.1	16.1	16,244	4.16
	9.4	1.7	0.88	5.7	3.8	13,863	16.9	300	4,045		41.7	900	37.2	17.2	17,790	4.40
	12.8	4.4	0.88	8.7	4.1	15,118	17.4	300	4,144		42.8	900	38.5	18.5	19,146	4.62
	16.1	7.2	0.88	11.7	4.5	16,455	17.8	300	4,247		43.9	900	39.9	19.9	20,584	4.85
	19.4	10.0	0.88	14.6	4.8	17,873	18.3	300	4,353		45.0	900	41.4	21.4	22,108	5.08

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Evap. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Latent (W)	Sensible (W)	Cooling (W)	COP _c
	9.4	21.1	0.88	15.6	6.2	22,845	10.8	325	2,663	27	7.1	900	13.3	13.7	5,762	14,385	20,147	7.56
	12.2	23.9	0.88	18.4	6.2	22,735	11.6	325	2,864		7.3	900	13.5	13.5	5,673	14,163	19,835	6.93
	15.0	26.7	0.88	21.1	6.1	22,612	12.4	325	3,067		7.4	900	13.8	13.2	5,580	13,930	19,509	6.36
	17.8	29.4	0.88	23.8	6.0	22,135	13.2	325	3,186		7.6	900	14.2	12.8	5,409	13,504	18,914	5.94
	21.1	32.2	0.88	27.3	6.2	21,640	14.0	325	3,307		7.8	900	14.4	12.6	5,474	12,833	18,307	5.54
	23.9	35.0	0.88	30.0	6.1	21,481	14.8	325	3,513		7.9	900	14.7	12.3	5,365	12,577	17,942	5.11
	26.7	37.8	0.88	32.7	6.1	21,314	15.7	325	3,728		8.1	900	15.0	12.0	5,250	12,309	17,560	4.71
	29.4	40.6	0.88	35.5	6.0	21,138	16.6	325	3,952		8.3	900	15.2	11.8	5,131	12,029	17,160	4.34

Performance Tables

RS-75-HACW-P-1T R410a, 60 Hz, ZPS60K5E-PFV

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Cond. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
	28	15	16	23	5.1	38,593	17.5	410	4,094	68	97	2,100	93	24.6	52,075	3.73
	34	20	16	28	5.6	42,497	17.9	410	4,186		99	2,100	95	26.5	56,292	3.94
	40	25	16	34	6.1	46,404	18.5	410	4,320		102	2,100	97	28.6	60,659	4.11
	46	30	16	39	6.7	50,856	19.0	410	4,466		104	2,100	99	30.9	65,609	4.30
	51	35	16	44	6.9	55,258	19.7	410	4,643		107	2,100	101	32.7	70,689	4.46
	57	40	16	50	7.5	60,316	20.1	410	4,743		109	2,100	103	35.2	76,088	4.70
	63	45	16	55	8.2	65,697	20.6	410	4,845		111	2,100	106	37.8	81,818	4.95
	69	50	16	60	8.9	71,411	21.1	410	4,951		113	2,100	109	40.6	87,893	5.20

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Evap. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Latent (Btu/hr)	Sensible (Btu/hr)	Cooling (Btu/hr)	EER
	52	70	16	63	10.9	86,865	13.1	450	3,412	80.6	44	2,100	59	21.2	24,039	51,083	75,123	22.0
	57	75	16	68	10.8	86,123	13.9	450	3,619		44	2,100	60	20.7	23,576	50,099	73,675	20.4
	62	80	16	73	10.7	85,342	14.7	450	3,828		44	2,100	60	20.3	23,097	49,082	72,179	18.9
	67	85	16	78	10.6	84,654	15.6	450	3,941		44	2,100	61	20.0	22,755	48,353	71,108	18.0
	73	90	16	84	11.0	83,917	16.5	450	4,050		44	2,100	60	20.3	21,843	48,167	70,010	17.3
	78	95	16	89	10.9	82,973	17.4	450	4,263		45	2,100	61	19.8	21,321	47,017	68,338	16.0
	83	100	16	94	10.8	82,003	18.3	450	4,485		45	2,100	61	19.3	20,782	45,828	66,610	14.9
	88	105	16	99	10.7	81,008	19.3	450	4,717		45	2,100	62	18.8	20,225	44,599	64,824	13.7

METRIC

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Cond. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Heating (W)	COP _H
	-2.2	-9.4	1.0	-5.0	2.8	11,308	17.5	410	4,094	20	36.1	990	33.6	13.6	15,258	3.73
	1.1	-6.7	1.0	-2.0	3.1	12,452	17.9	410	4,186		37.2	990	34.7	14.7	16,493	3.94
	4.4	-3.9	1.0	1.1	3.4	13,596	18.5	410	4,320		38.9	990	35.9	15.9	17,773	4.11
	7.8	-1.1	1.0	4.1	3.7	14,901	19.0	410	4,466		40.0	990	37.2	17.2	19,223	4.30
	10.6	1.7	1.0	6.7	3.8	16,191	19.7	410	4,643		41.7	990	38.2	18.2	20,712	4.46
	13.9	4.4	1.0	9.7	4.2	17,672	20.1	410	4,743		42.8	990	39.5	19.5	22,294	4.70
	17.2	7.2	1.0	12.7	4.6	19,249	20.6	410	4,845		43.9	990	41.0	21.0	23,973	4.95
	20.6	10.0	1.0	15.6	5.0	20,923	21.1	410	4,951		45.0	990	42.6	22.6	25,752	5.20

COOLING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Evap. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Latent (W)	Sensible (W)	Cooling (W)	COP _c
	11.1	21.1	1.0	17.1	6.0	25,451	13.1	450	3,412	27	6.7	990	15.2	11.8	7,043	14,967	22,011	6.45
	13.9	23.9	1.0	19.9	6.0	25,234	13.9	450	3,619		6.7	990	15.5	11.5	6,908	14,679	21,586	5.96
	16.7	26.7	1.0	22.6	5.9	25,005	14.7	450	3,828		6.8	990	15.7	11.3	6,767	14,381	21,148	5.52
	19.4	29.4	1.0	25.3	5.9	24,803	15.6	450	3,941		6.8	990	15.9	11.1	6,667	14,167	20,834	5.29
	22.8	32.2	1.0	28.9	6.1	24,587	16.5	450	4,050		6.9	990	15.7	11.3	6,400	14,113	20,513	5.06
	25.6	35.0	1.0	31.6	6.1	24,311	17.4	450	4,263		6.9	990	16.0	11.0	6,247	13,776	20,023	4.70
	28.3	37.8	1.0	34.3	6.0	24,027	18.3	450	4,485		7.0	990	16.3	10.7	6,089	13,427	19,517	4.35
	31.1	40.6	1.0	37.0	5.9	23,735	19.3	450	4,717		7.1	990	16.6	10.4	5,926	13,067	18,993	4.03

Performance Tables

RS-80-HACW-P-1S R410a, 60 Hz, ZP72KCE-PFV

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Cond. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
	25	15	17	20	4.9	40,600	22.2	410	5,173	68	99	2,300	93	25.2	57,900	3.28
	30	19	17	25	5.3	44,000	22.5	410	5,246		100	2,300	95	26.8	61,600	3.44
	35	24	17	29	5.7	47,500	22.8	410	5,316		102	2,300	96	28.4	65,300	3.60
	40	28	17	34	6.1	51,200	23.1	410	5,393		104	2,300	98	30.1	69,200	3.76
	45	33	17	38	6.6	54,900	23.4	410	5,465		106	2,300	100	31.8	73,200	3.93
	50	37	17	43	7.1	59,000	23.7	410	5,540		107	2,300	102	33.7	77,500	4.10
	55	42	17	47	7.6	63,200	24.0	410	5,618		109	2,300	104	35.6	81,900	4.27
	60	46	17	52	8.1	67,500	24.4	410	5,702		111	2,300	106	37.6	86,500	4.45

OUTDOOR LOOP (15% Methanol)							ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
COOLING	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°F)	Evap. Temp.	Airflow (cfm)	LAT (°F)	Delta T (°F)	Latent (Btu/hr)	Sensible (Btu/hr)	Cooling (Btu/hr)	EER
	55	79	17	67	12.2	101,200	17.5	308	4,209	80.6	46	2,300	54	26.7	26,300	61,300	87,600	20.8
	60	84	17	72	12.1	100,600	18.7	308	4,452		46	2,300	54	26.2	25,900	60,300	86,200	19.4
	65	90	17	77	12.0	100,000	20.0	308	4,695		46	2,300	55	25.8	25,400	59,400	84,800	18.1
	70	95	17	82	11.9	99,500	21.2	308	4,942		47	2,300	55	25.4	25,000	58,400	83,400	16.9
	75	100	17	87	11.9	98,900	22.4	308	5,199		47	2,300	56	25.0	24,600	57,400	82,000	15.8
	80	106	17	92	11.8	98,600	23.7	308	5,470		48	2,300	56	24.6	24,200	56,500	80,700	14.8
	85	111	17	97	11.8	98,000	25.0	308	5,757		48	2,300	57	24.1	23,700	55,500	79,200	13.8
	90	116	17	102	11.7	97,500	26.5	308	6,068		48	2,300	57	23.6	23,300	54,300	77,600	12.8

METRIC

HEATING	OUTDOOR LOOP (15% Methanol)						ELECTRICAL			INDOOR LOOP (Air)						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (kW)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Cond. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Heating (kW)	COP _H
	-3.9	-9.6	1.1	-6.6	2.7	11.90	22.2	410	5,173	20	37.0	1,085	34.0	14.0	17.00	3.28
	-1.1	-7.1	1.1	-4.0	2.9	12.90	22.5	410	5,246		37.9	1,085	34.9	14.9	18.10	3.44
	1.7	-4.6	1.1	-1.5	3.2	13.90	22.8	410	5,316		38.9	1,085	35.8	15.8	19.10	3.60
	4.4	-2.1	1.1	1.0	3.4	15.00	23.1	410	5,393		39.9	1,085	36.7	16.7	20.30	3.76
	7.2	0.3	1.1	3.5	3.7	16.10	23.4	410	5,465		40.8	1,085	37.7	17.7	21.50	3.93
	10.0	2.8	1.1	6.1	3.9	17.30	23.7	410	5,540		41.8	1,085	38.7	18.7	22.70	4.10
	12.8	5.3	1.1	8.6	4.2	18.50	24.0	410	5,618		42.7	1,085	39.8	19.8	24.00	4.27
	15.6	7.8	1.1	11.1	4.5	19.80	24.4	410	5,702		43.7	1,085	40.9	20.9	25.40	4.45

OUTDOOR LOOP (15% Methanol)							ELECTRICAL			INDOOR LOOP (Air @ 46% RH)								
COOLING	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (kW)	Compressor Current (A)	Fan (W)	Input Power (W)	EAT (°C)	Evap. Temp.	Airflow (L/s)	LAT (°C)	Delta T (°C)	Latent (W)	Sensible (kW)	Cooling (kW)	COP _c
	12.8	26.1	1.1	19.6	6.8	29.66	17.5	308	4,209	27	7.5	1,085	12.2	14.8	7.71	18.00	25.70	6.10
	15.6	29.1	1.1	22.3	6.7	29.48	18.7	308	4,452		7.7	1,085	12.4	14.6	7.59	17.70	25.30	5.69
	18.3	32.0	1.1	25.0	6.7	29.31	20.0	308	4,695		7.9	1,085	12.7	14.3	7.44	17.40	24.90	5.30
	21.1	34.9	1.1	27.7	6.6	29.20	21.2	308	4,942		8.2	1,085	12.9	14.1	7.33	17.10	24.40	4.95
	23.9	37.9	1.1	30.5	6.6	29.00	22.4	308	5,199		8.4	1,085	13.1	13.9	7.21	16.80	24.00	4.63
	26.7	40.8	1.1	33.3	6.6	28.90	23.7	308	5,470		8.7	1,085	13.3	13.7	7.09	16.60	23.70	4.34
	29.4	43.8	1.1	36.0	6.6	28.70	25.0	308	5,757		8.9	1,085	13.6	13.4	6.95	16.30	23.20	4.04
	32.2	46.7	1.1	38.7	6.5	28.60	26.5	308	6,068		9.1	1,085	13.9	13.1	6.83	15.90	22.70	3.75

Airflow Data

Table 33: MED Airflow (nominal)												
Model	STAGE 2				STAGE 1				FAN ONLY (Recirculation)			
	Full		AR1-AR2 reduction		Full		AR1-AR2 reduction		Full		AR1-AR2 reduction	
	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s
45	1200	566	1020	481	1030	486	876	413	672	317	571	270
55	1500	708	1275	602	1240	585	1054	497	840	396	714	337
65	1900	897	1615	762	1540	727	1309	618	1064	502	904	427
75	2100	991	1785	842	1660	783	1411	666	1176	555	1000	472
80	2300	1085	1955	922	N/A	N/A	N/A	N/A	1288	608	1095	517

Table 34: LOW Airflow (-6%)												
Model	STAGE 2				STAGE 1				FAN ONLY (Recirculation)			
	Full		AR1-AR2 reduction		Full		AR1-AR2 reduction		Full		AR1-AR2 reduction	
	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s
45	1128	532	959	453	968	457	823	388	632	298	537	253
55	1410	665	1199	566	1166	550	991	468	790	373	671	317
65	1786	843	1518	716	1448	683	1230	581	1000	472	850	401
75	1974	932	1678	792	1560	736	1326	626	1105	522	940	443
80	2162	1020	1838	867	N/A	N/A	N/A	N/A	1211	572	1029	486

Table 35: HIGH Airflow (+6%)												
Model	STAGE 2				STAGE 1				FAN ONLY (Recirculation)			
	Full		AR1-AR2 reduction		Full		AR1-AR2 reduction		Full		AR1-AR2 reduction	
	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s
45	1272	600	1081	510	1092	515	928	438	712	336	605	286
55	1590	750	1352	638	1314	620	1117	527	890	420	757	357
65	2014	951	1712	808	1632	770	1388	655	1128	532	959	452
75	2226	1051	1892	893	1760	830	1496	706	1400	661	1190	562
80	2438	1150	2072	977	N/A	N/A	N/A	N/A	1365	644	1161	548

Table 36: MAX Airflow (+12%)												
Model	STAGE 2				STAGE 1				FAN ONLY (Recirculation)			
	Full		AR1-AR2 reduction		Full		AR1-AR2 reduction		Full		AR1-AR2 reduction	
	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s	cfm	L/s
45	1344	634	1142	539	1154	544	981	463	753	355	640	302
55	1680	793	1428	674	1389	655	1180	557	941	444	800	377
65	2128	1004	1809	854	1725	814	1466	692	1192	562	1013	478
75	2352	1110	1999	944	1859	877	1580	746	1317	622	1120	528
80	2500	1180	2190	1033	N/A	N/A	N/A	N/A	1443	681	1226	579

Maximum external static pressure (all model sizes): 0.50 inH₂O

Electrical Specifications: RS Compressor Unit

TABLE 37	Elec. Code	Power Supply			Compressor		Out- door Circ.	FLA	MCA	Max. Fuse/ Breaker	Min. Wire Size
		V-ø-Hz	MIN	MAX	RLA	LRA	Max A	Amps	Amps	Amps	ga
RS-45	1	208/230-1-60	187	253	14.1	84	4.0	18.9	22.4	40	#8-2*
	2	208-3-60	187	229	9.6	74	4.0	14.4	16.8	30	#10-3*
	4	460-3-60	414	506	5.1	37	-	5.9	7.2	15	#14-3
	5	575-3-60	518	632	3.2	26	-	3.7	4.5	15	#14-3
	6	220-1-50	187	253	12.4	67	4.0	17.2	20.3	30	#10-2
	7	380-3-50	342	418	4.9	37	4.0	9.7	10.9	15	#14-4
RS-55	1	208/230-1-60	187	253	20.4	122	5.0	26.2	31.3	50	#8-2*
	2	208-3-60	187	229	14.0	83	5.0	19.8	23.3	40	#8-3*
	4	460-3-60	414	506	6.4	41	-	7.2	8.8	15	#14-3
	5	575-3-60	518	632	4.6	33	-	5.1	6.3	15	#14-3
	6	220-1-50	187	253	15.5	100	5.0	21.3	25.2	40	#8-2
	7	380-3-50	342	418	6.1	43	5.0	11.9	13.4	20	#12-4
RS-65	1	208/230-1-60	187	253	22.8	147	5.0	28.6	34.3	60	#6-2*
	2	208-3-60	187	229	16.5	110	5.0	22.3	26.4	40	#8-3*
	4	460-3-60	414	506	7.2	52	-	8.0	9.8	15	#14-3
	5	575-3-60	518	632	5.7	44	-	6.2	7.6	15	#14-3
	6	220-1-50	187	253	21.5	126	5.0	27.3	32.7	50	#8-2
	7	380-3-50	342	418	6.9	52	5.0	12.7	14.4	20	#12-4
RS-75	1	208/230-1-60	187	253	27.6	190	5.0	33.4	40.3	60	#6-2*
	2	208-3-60	187	229	18.6	149	5.0	24.4	29.1	40	#8-3*
	4	460-3-60	414	506	9.0	61	-	9.8	12.1	20	#12-3
	5	575-3-60	518	632	7.1	56	-	7.6	9.4	15	#14-3
	6	220-1-50	187	253	29.5	176	5.0	35.3	42.7	60	#6-2
	7	380-3-50	342	418	7.7	59	5.0	13.5	15.4	20	#12-4
RS-80	1	208/230-1-60	187	253	32.1	148	5.0	37.9	45.9	50	#8-2*
	2	208-3-60	187	229	22.4	149	5.0	28.2	33.8	60	#6-3*
	4	460-3-60	414	506	10.6	75	-	11.4	14.1	20	#12-3
	5	575-3-60	518	632	7.7	54	-	8.2	10.1	15	#14-3
	7	380-3-50	342	418	10.6	74	5.0	16.4	19.1	30	#10-4

* additional conductor required if connecting 115VAC circulators to the unit


Electrical Specifications: AHH/AHV Air Handler

TABLE 38	Elec. Code	Power Supply			Fan	FLA	MCA	Max. Fuse/ Breaker	Min. Wire Size
		V-ø-Hz	MIN	MAX	RLA	Amps	Amps	Amps	ga
AHH-45 AHV-45	1	208/230-1-60	187	253	3.5	4.3	5.2	15	#14-2
	3	265/277-1-60	226	304	3.5	4.3	5.2	15	#14-2
	6	220-1-50	187	253	3.5	4.3	5.2	15	#14-2
AHH-55 AHV-55	1	208/230-1-60	187	253	4.0	4.8	5.8	15	#14-2
	3	265/277-1-60	226	304	4.0	4.8	5.8	15	#14-2
	6	220-1-50	187	253	4.0	4.8	5.8	15	#14-2
AHH-65 AHV-65	1	208/230-1-60	187	253	5.5	6.3	7.7	15	#14-2
	3	265/277-1-60	226	304	5.5	6.3	7.7	15	#14-2
	6	220-1-50	187	253	5.5	6.3	7.7	15	#14-2
AHH-75 AHV-75	1	208/230-1-60	187	253	6.5	7.3	8.9	15	#14-2
	3	265/277-1-60	226	304	6.5	7.3	8.9	15	#14-2
	6	220-1-50	187	253	6.5	7.3	8.9	15	#14-2
AHH-80 AHV-80	1	208/230-1-60	187	253	7.0	7.8	9.6	15	#14-2
	3	265/277-1-60	226	304	7.0	7.8	9.6	15	#14-2
	6	220-1-50	187	253	7.0	7.8	9.6	15	#14-2

Electrical Specifications: Plenum Heater

TABLE 39 - Plenum Heater Electrical Specifications															
Size (kW)	(230-1-60)					(208-1-60)					(220-1-50)				
	Actual (kW)	FLA (A)	MCA (A)	Breaker (A)	Wire Size	Actual (kW)	FLA (A)	MCA (A)	Breaker (A)	Wire Size	Actual (kW)	FLA (A)	MCA (A)	Breaker (A)	Wire Size
5	5	20.8	26.0	30	#10	3.8	18.1	22.6	30	#10	4.2	19.1	19.1	30	#10
7	7	29.2	36.5	40	#8	5.3	25.3	31.6	40	#8	5.9	26.7	26.7	40	#6
10	10	41.7	52.1	60	#6	7.5	36.1	45.1	50	#6	8.4	38.1	38.1	50	#6
15	15	62.5	78.1	80	#4	11.3	54.2	67.7	80	#4	12.6	57.2	57.2	80	#3
20	20	83.3	104.2	100	#3	15.0	72.2	90.3	100	#3	16.8	76.3	76.3	100	#3

Wiring Diagram: RS Compressor Unit

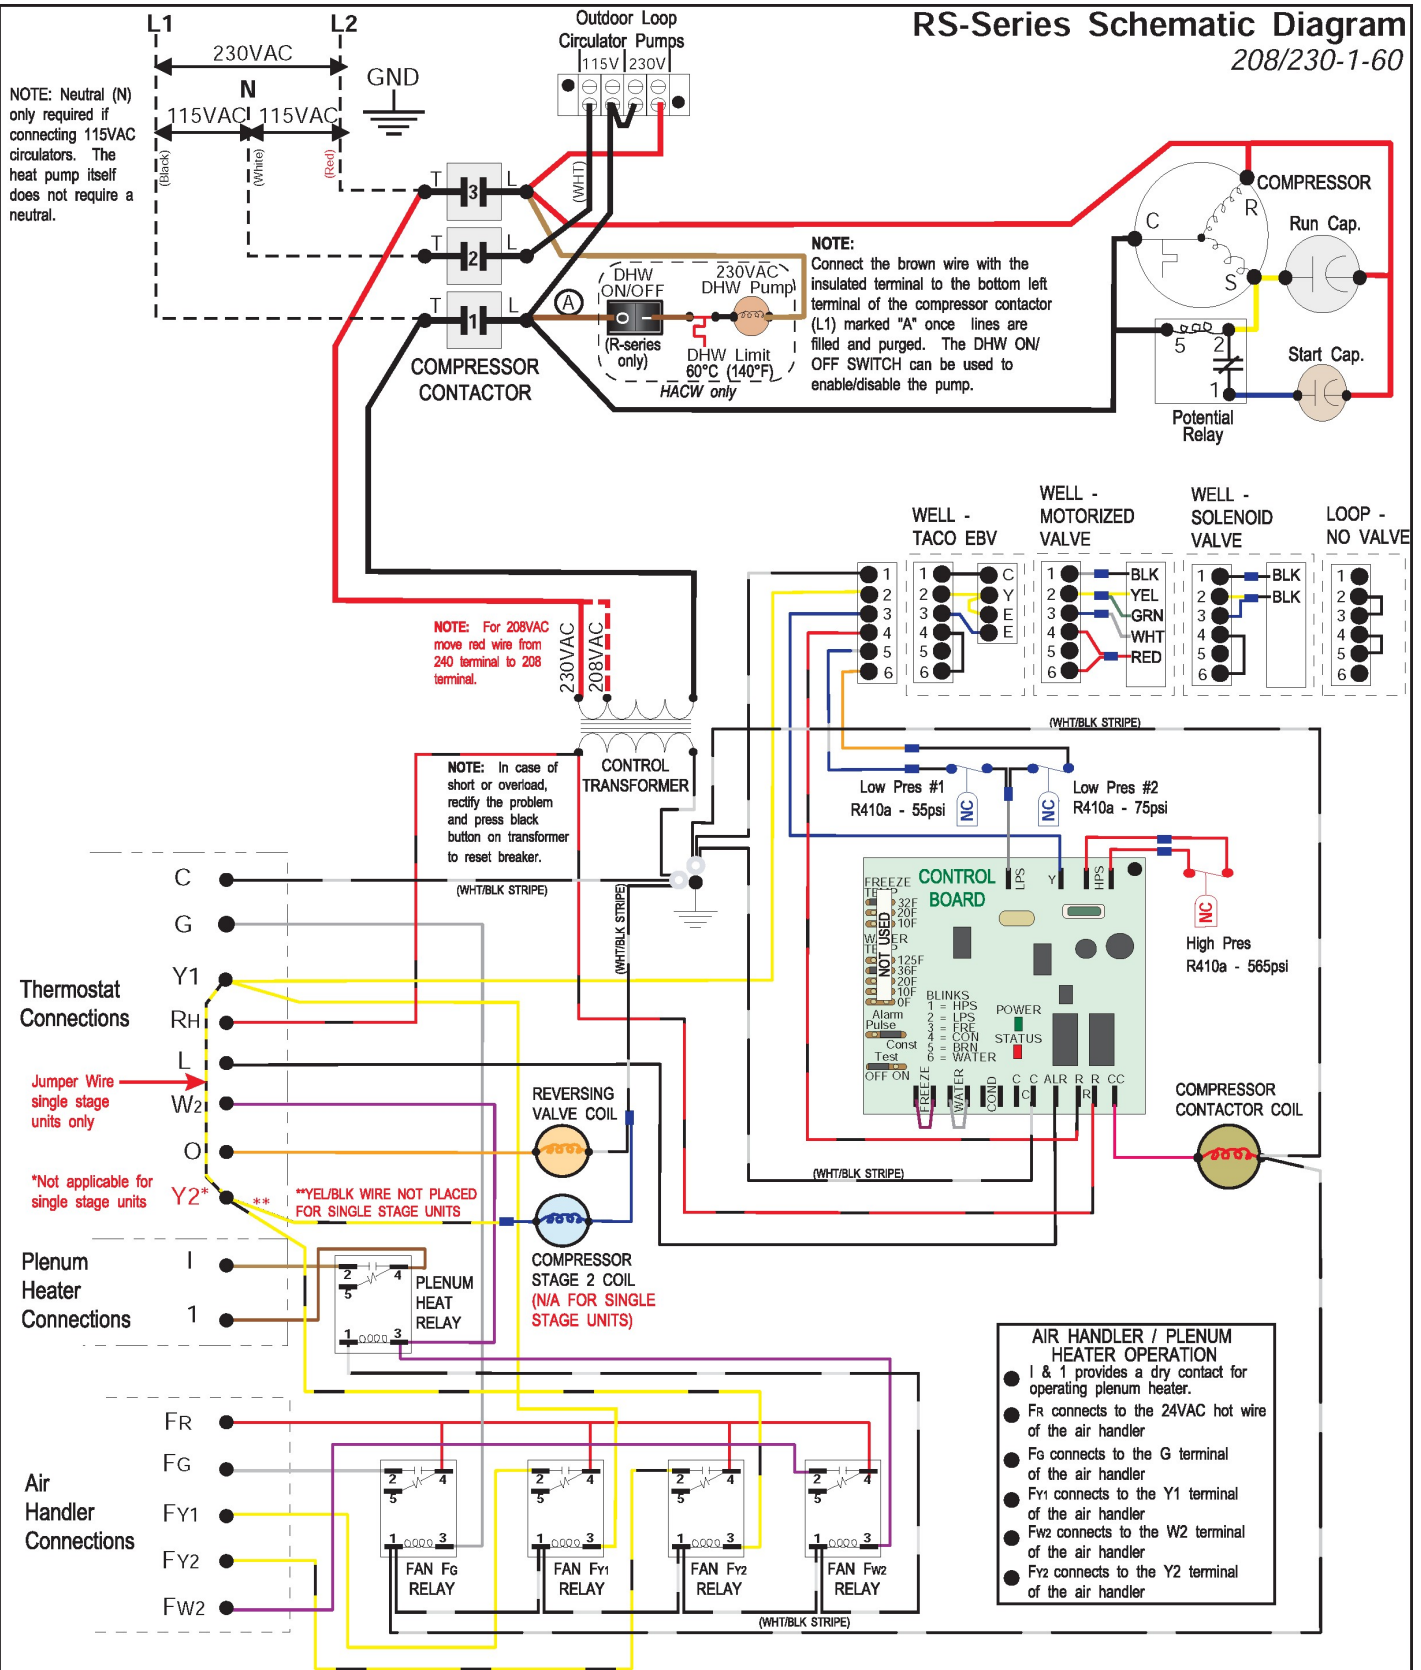

06	000305	D. RHEAULT	D. RHEAULT	06 SEP 22	Drawn By Chris Geddes	Date 25 FEB 10	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
05	000298	D. RHEAULT	D. RHEAULT	01 FEB 22	Checked By Chris Geddes	Date 25 FEB 10	
04	-	D. RHEAULT	D. RHEAULT	31 MAY 21	Approved By Chris Geddes (ENG)	Date 25 FEB 10	
03	000215	C. GEDDES	C. GEDDES	15 FEB 13	Approved By Chris Geddes (MF G)	Date	
02	000183	C. GEDDES	C. GEDDES	01 AUG 11	Approved By	Date	Drawing Name RS-**-HAC*-P-1** Schematic Diagram
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	
					Size A	Drawing Number 001235SCH	Drawing Rev 06
					Sheet 1 of 1		

Electrical Box Layout: RS Compressor Unit




RS-Series Electrical Box Diagram 208/230-1-60

Field
Wiring
24VAC


Thermostat
Connections

Plenum Heat
Connections

Air Handler
Connections

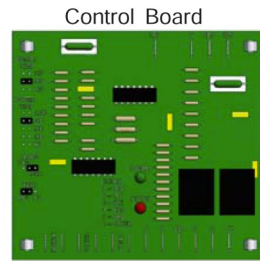

STATUS
1 = High Pressure
2 = Low Pressure
5 = Brownout

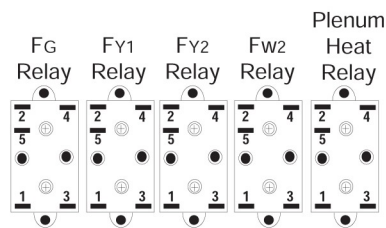

Low Voltage Wiring (24VAC)

Thermostat Wiring

Use an 18-8 (7 for 1 stage) conductor cable. Connect the eight Thermostat Connections in the electrical box to the corresponding letters on the thermostat.

C - 24VAC Common
G - Fan
Y1 - Stage 1 Heat/Cool (Compressor On/Off)
RH - 24VAC Hot
L - Trouble Indicator
W2 - Stage 3 Heat (Plenum Heater)
O - Cooling (Reversing Valve)
Y2 - Stage 2 Heat/Cool (N/A for 1 stage)

Air Handler / Plenum Heat Wiring

Use an 18-5 conductor cable to connect this unit to the Air Handler:

FR - Air Handler R (24VAC hot wire)
FG - Air Handler G (Circulation Fan Speed)
FY1 - Air Handler Y1 (Stage 1 Fan Speed)
FY2 - Air Handler Y2 (Stage 2 Fan Speed)
FW2 - Air Handler W2 (Backup Heat Fan Speed)

NOTE: Use only FR and FG for air handlers with single speed fan motors.

Use an 18-2 conductor cable to connect this unit to the Plenum Heater:

I-1 - Dry Contacts to operate the Plenum Heater

Outdoor Circulator Pumps

REFER TO LABEL IN UNIT FOR MAX AMPS

Connect 115VAC circulators to 115V
Connect 230VAC circulators to 230V
Connect "Gnd" to Gnd. Lug


208/230-115VAC CONNECTIONS

Wire	Colour	Contactor
Line 2	Red	L2
Neutral	White	N
Line 1	Black	L1

Connect "Gnd" to Gnd. Lug

NOTE: Neutral (N) only required if connecting 115VAC circulators. The heat pump itself does not require a neutral.

Field
Wiring
208VAC/
230VAC/
115VAC

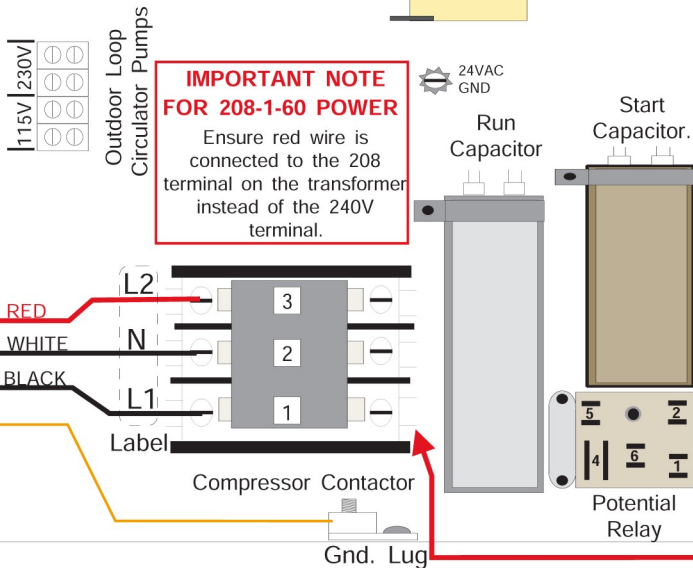

IMPORTANT NOTE FOR 208-1-60 POWER


Ensure red wire is connected to the 208 terminal on the transformer instead of the 240V terminal.

Domestic Hot Water Circulator Pump Instructions:


If heat pump is to be operated without the hot water circulator connected to the water tank and flooded with water, remove the brown wire with the insulated terminal located here. **This pump is water lubricated and must not be run dry.** Once connected the external ON/OFF switch may be used to temporarily turn the pump off.

05	000298	D. RHEAULT	D. RHEAULT	01 FEB 22	Drawn By Chris Geddes	Date 25 FEB 10	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Petitcodiac, NB E4Z 6H4</div>
04	-	D. RHEAULT	D. RHEAULT	31 MAY 21	Checked By Chris Geddes	Date 25 FEB 10	
03	000215	C. GEDDES	C. GEDDES	15 FEB 13	Approved By Chris Geddes (ENG)	Date 25 FEB 10	
02	000183	C. GEDDES	C. GEDDES	01 AUG 11	Approved By Chris Geddes (MFG)	Date	
01	Initial Release	C. GEDDES	C. GEDDES	25 FEB 10	Approved By	Date	
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	
<div>Drawing Name</div> <div>RS-**-HAC*-P-1** Electrical Box Diagram</div> <div><div>Size A</div><div>Drawing Number 001236ELB</div><div>Drawing Rev 05</div><div>Sheet 1 of 1</div></div>							


Wiring Diagram: AHH Horizontal Air Handler

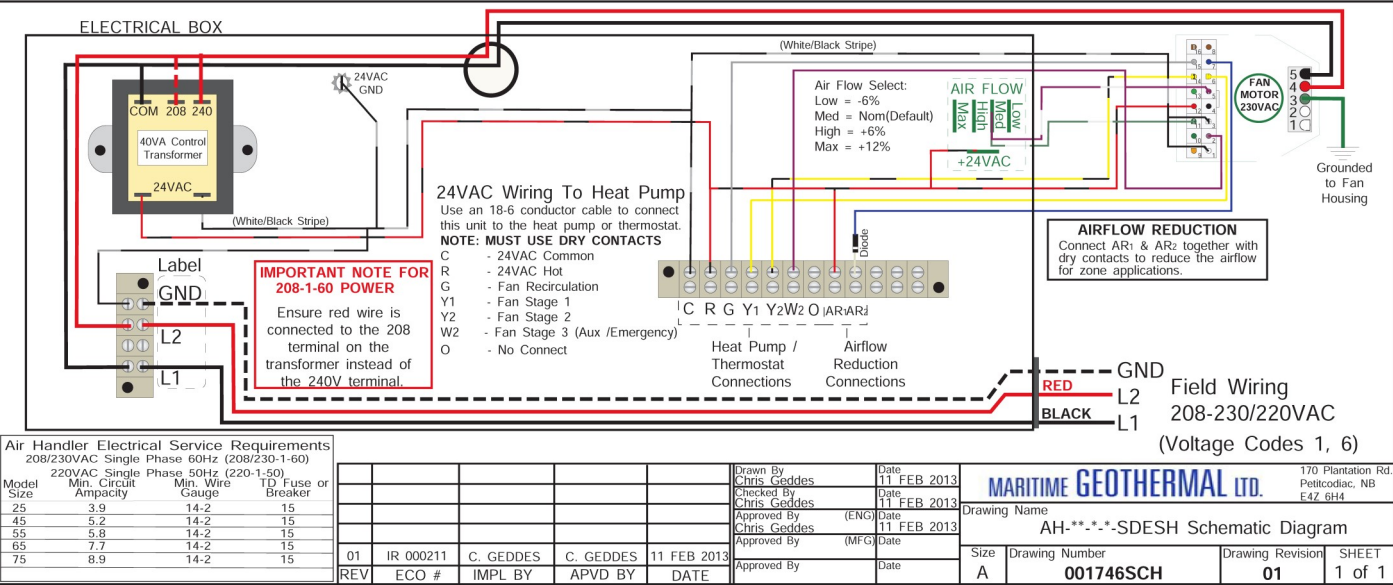

Wiring Diagram: AHV Vertical Air Handler

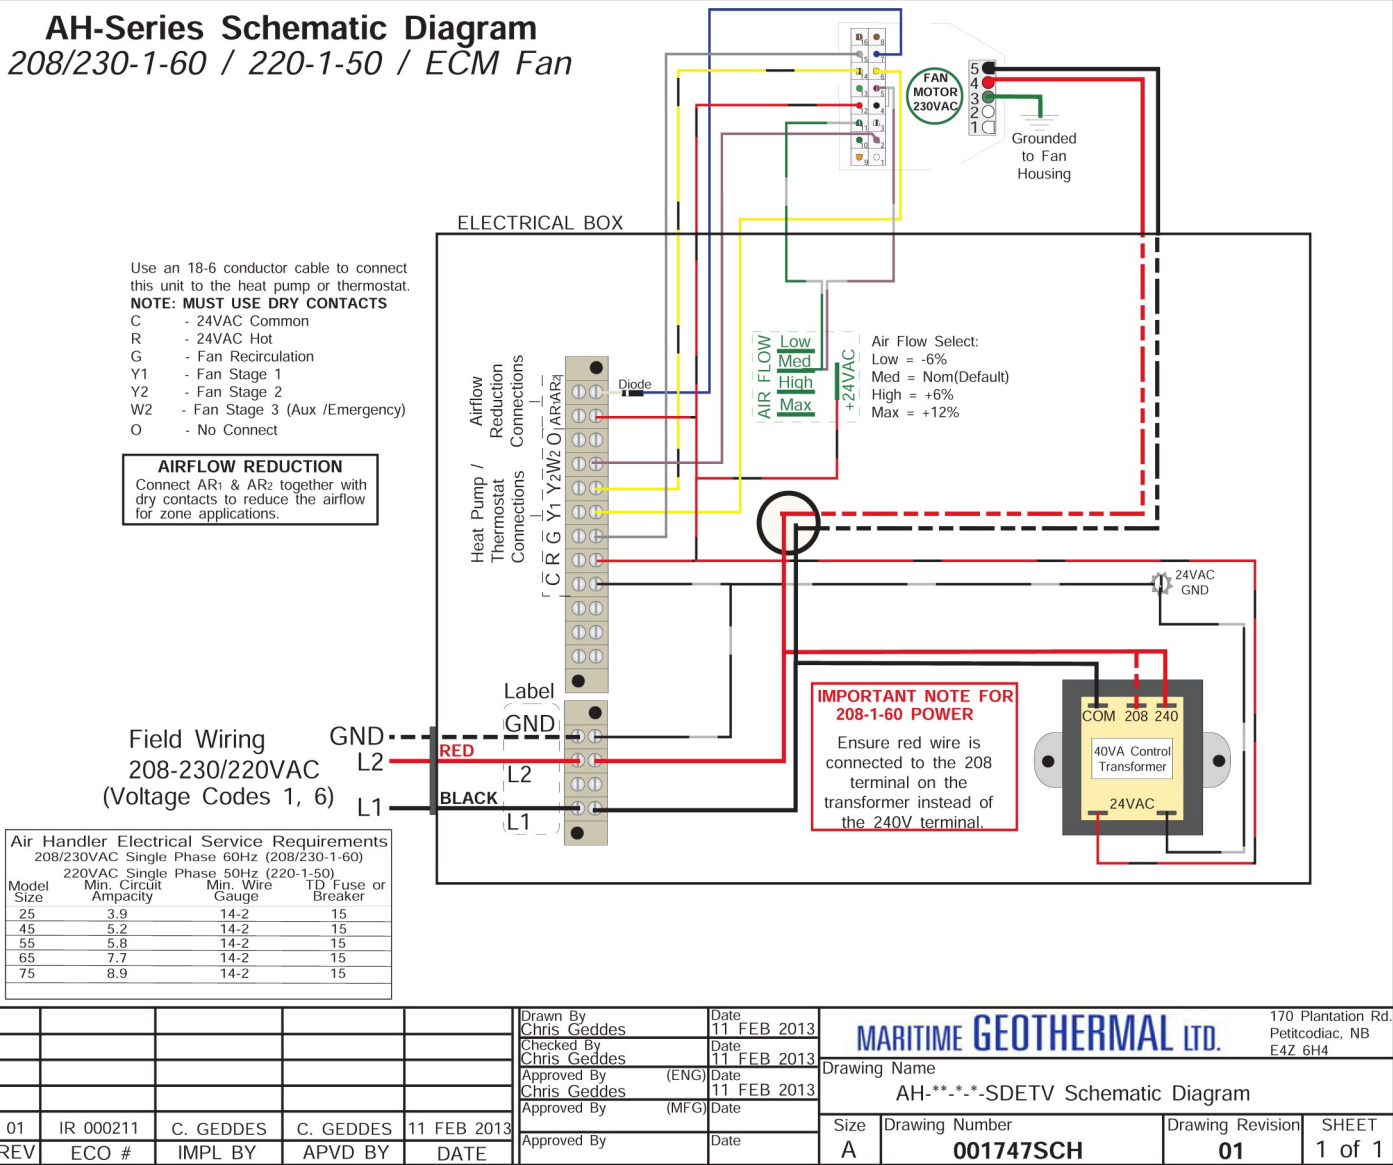


Modular RS-Series Refrigeration Circuit - Heating Mode

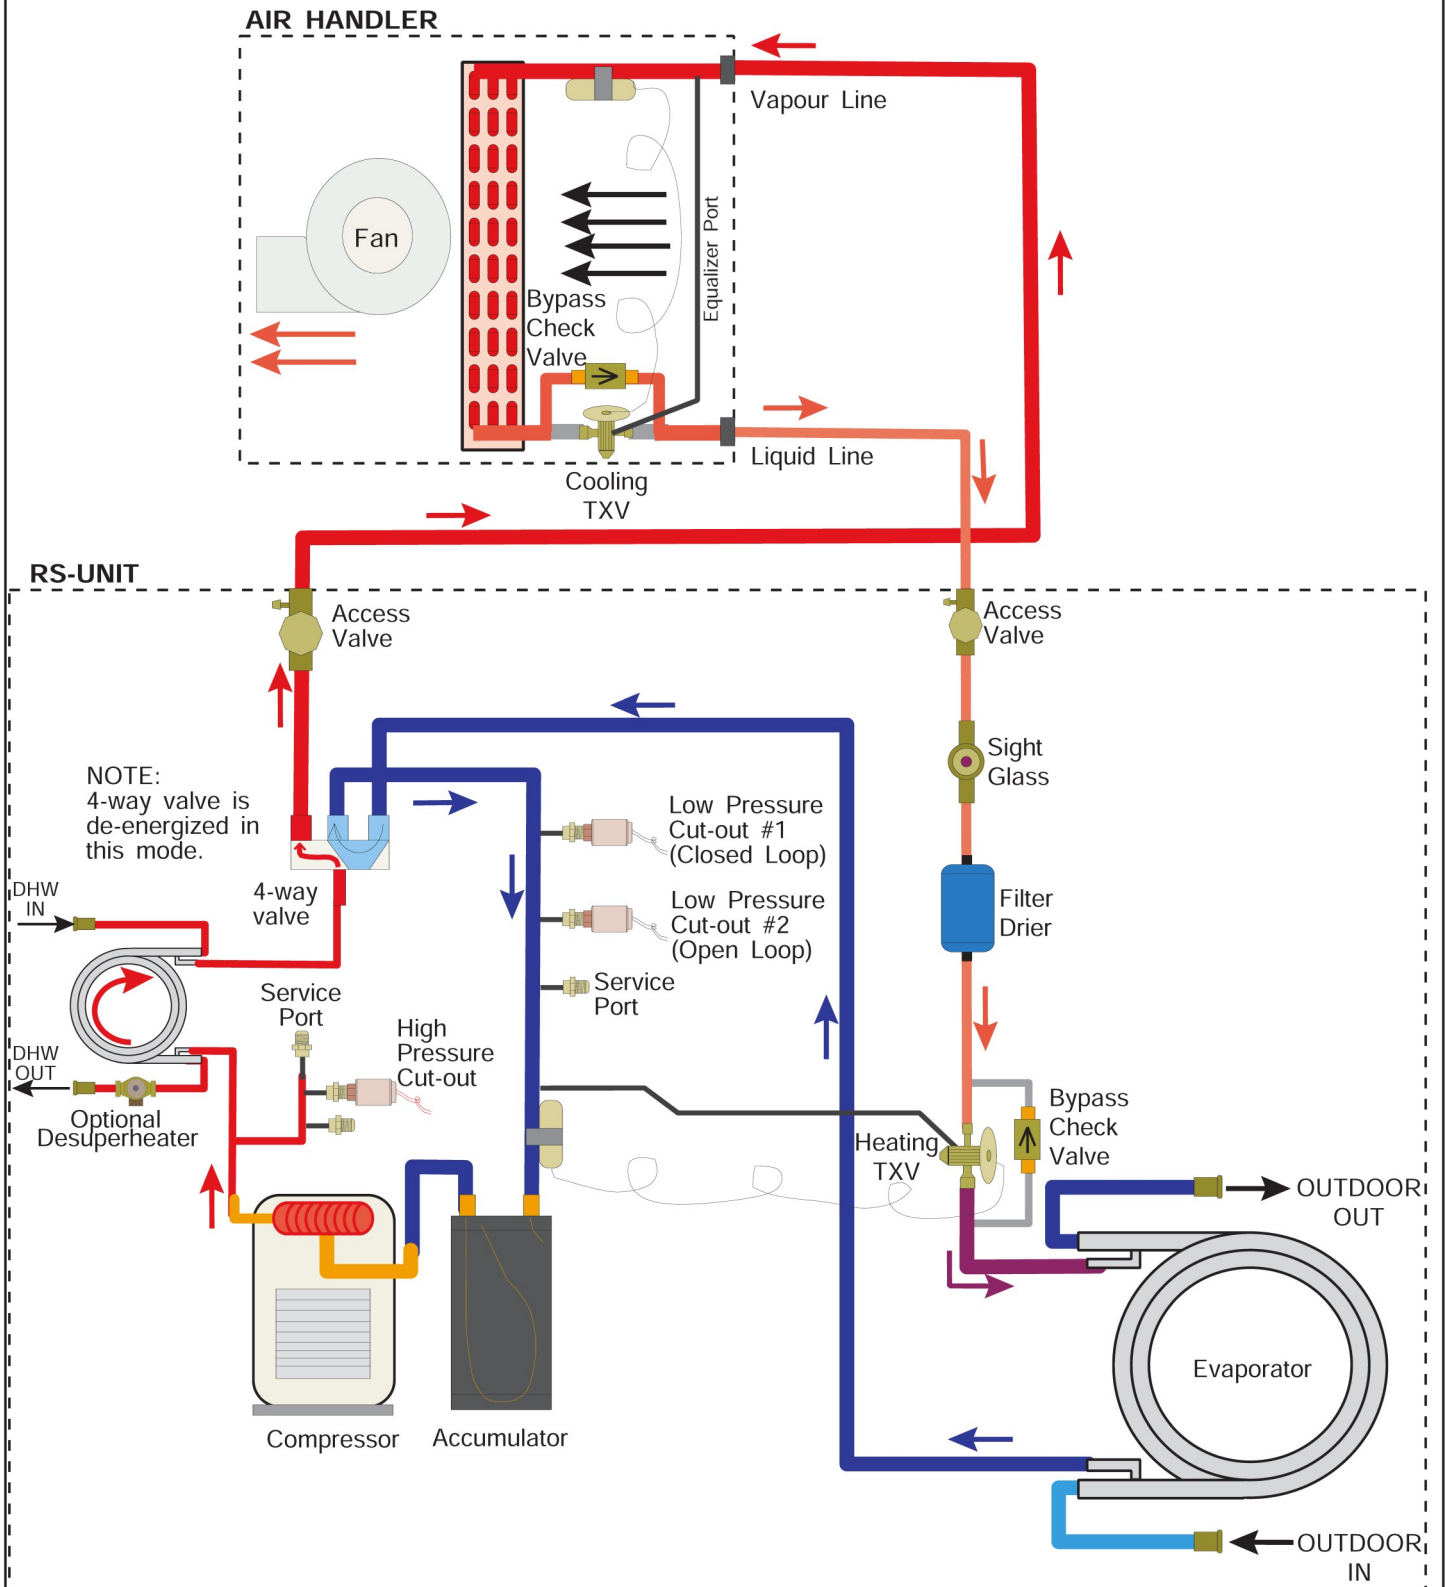

					Drawn By Chris Geddes	Date 25 FEB 10	<div>MARITIME GEOTHERMAL LTD.</div> <div>170 Plantation Rd. Petitcodiac, NB E4Z 6H4</div>			
					Checked By Chris Geddes	Date 25 FEB 10				
02	000215	C. GEDDES	C. GEDDES	15 DEC 2014	Approved By Chris Geddes	(ENG) Date 25 FEB 10	Drawing Name Modular RS-Series Refrigeration Circuit Diagram - Heating Mode			
01	Initial Release	C. GEDDES	C. GEDDES	25 FEB 10	Approved By	(MFG) Date				
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A	Drawing Number 001233RCD	Drawing Rev 02	SHEET 1 of 1


Modular RS-Series Refrigeration Circuit - Cooling Mode

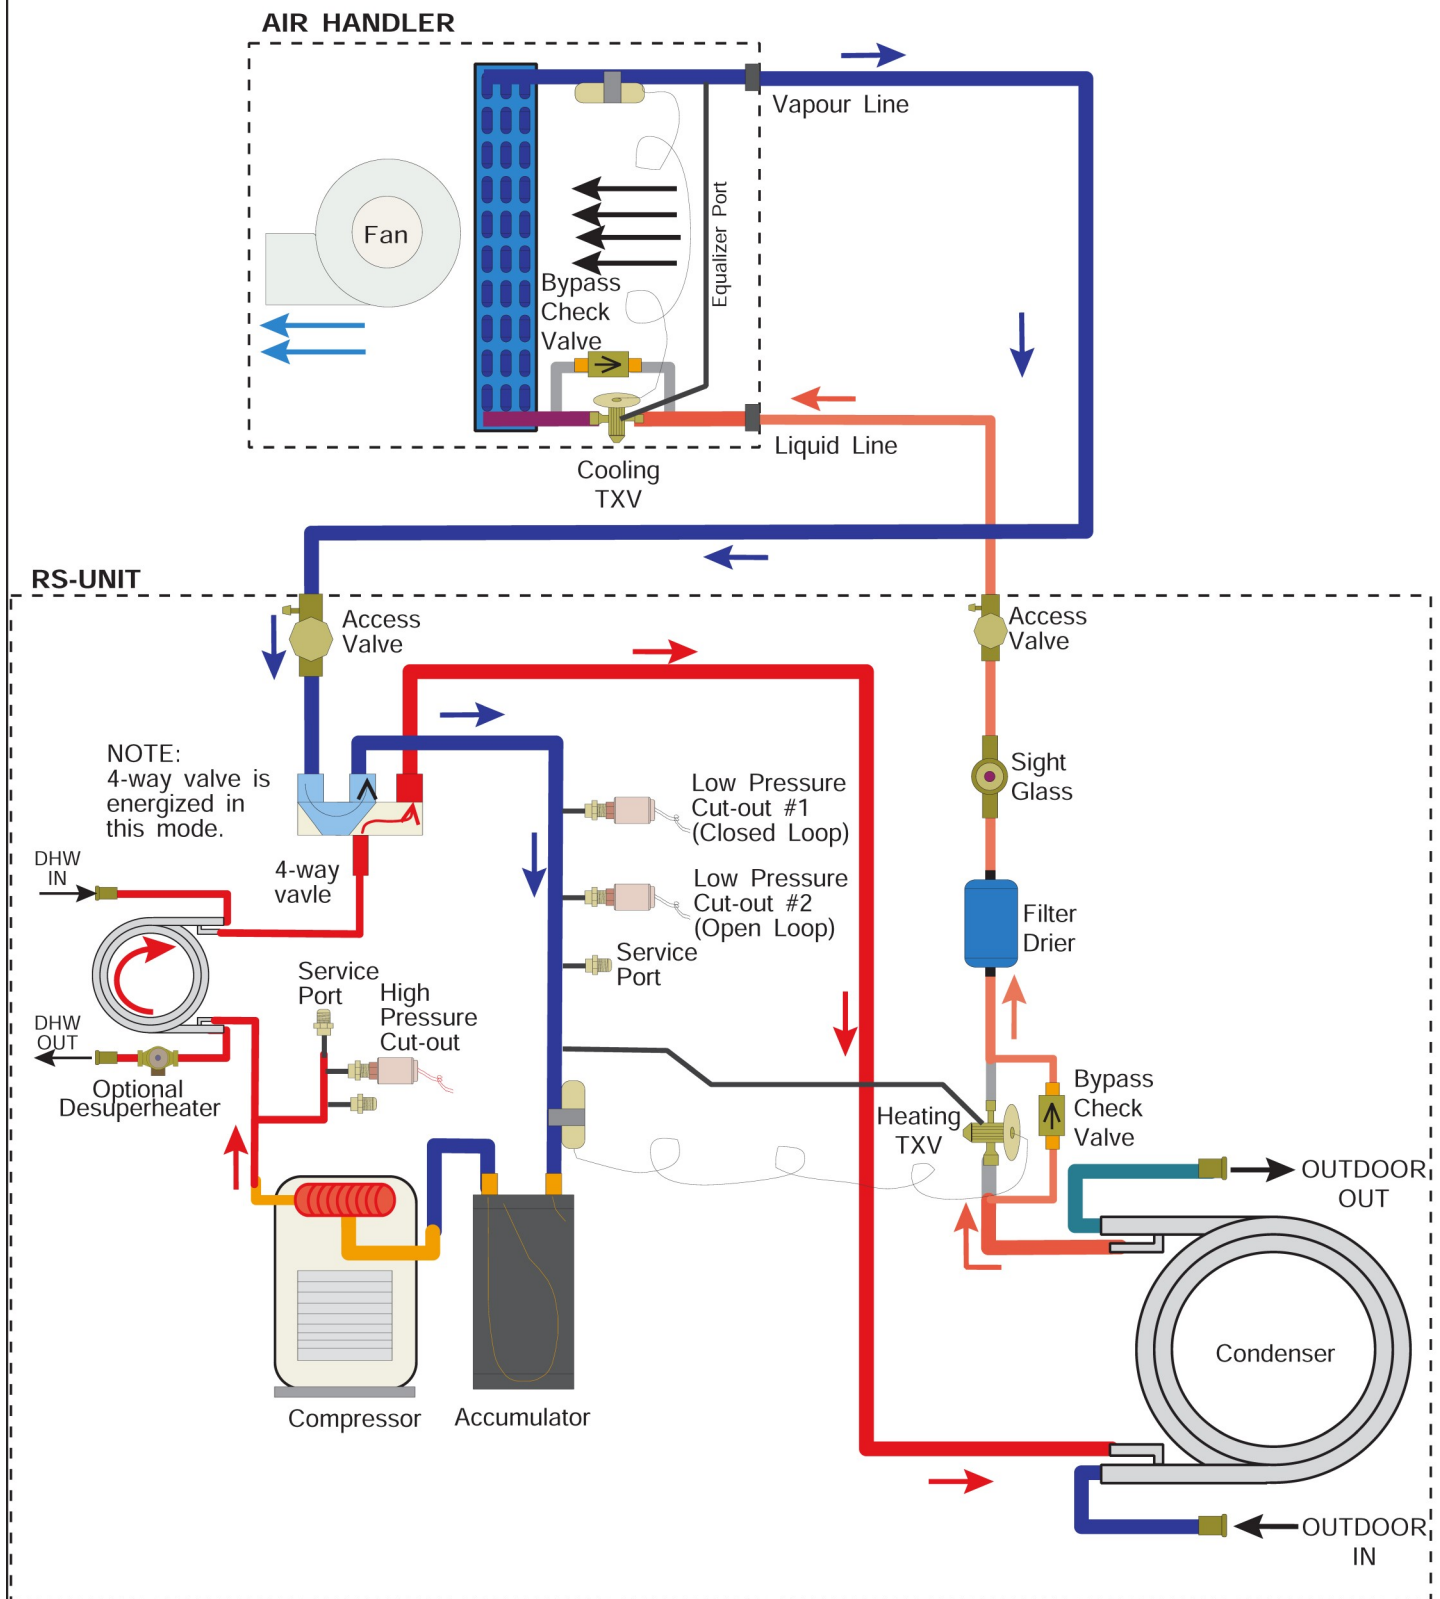


					Drawn By Chris Geddes	Date 26 FEB 10	MARITIME GEOTHERMAL LTD.			170 Plantation Rd Petitcodiac, NB E4Z 6H4			
					Checked By Chris Geddes	Date 26 FEB 10							
02	000215	C. GEDDES	C. GEDDES	15 DEC 2014	Approved By Chris Geddes	(ENG) Date 26 FEB 10	Drawing Name Modular RS-Series Refrigeration Circuit Diagram - Cooling Mode						
01	Initial Release	C. GEDDES	C. GEDDES	25 FEB 10	Approved By	(MFG) Date							
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A	Drawing Number 001234RCD	Drawing Rev 02	SHEET 1 of 1			

Dimensions: RS-45 Compressor Unit

All dimensions in inches.

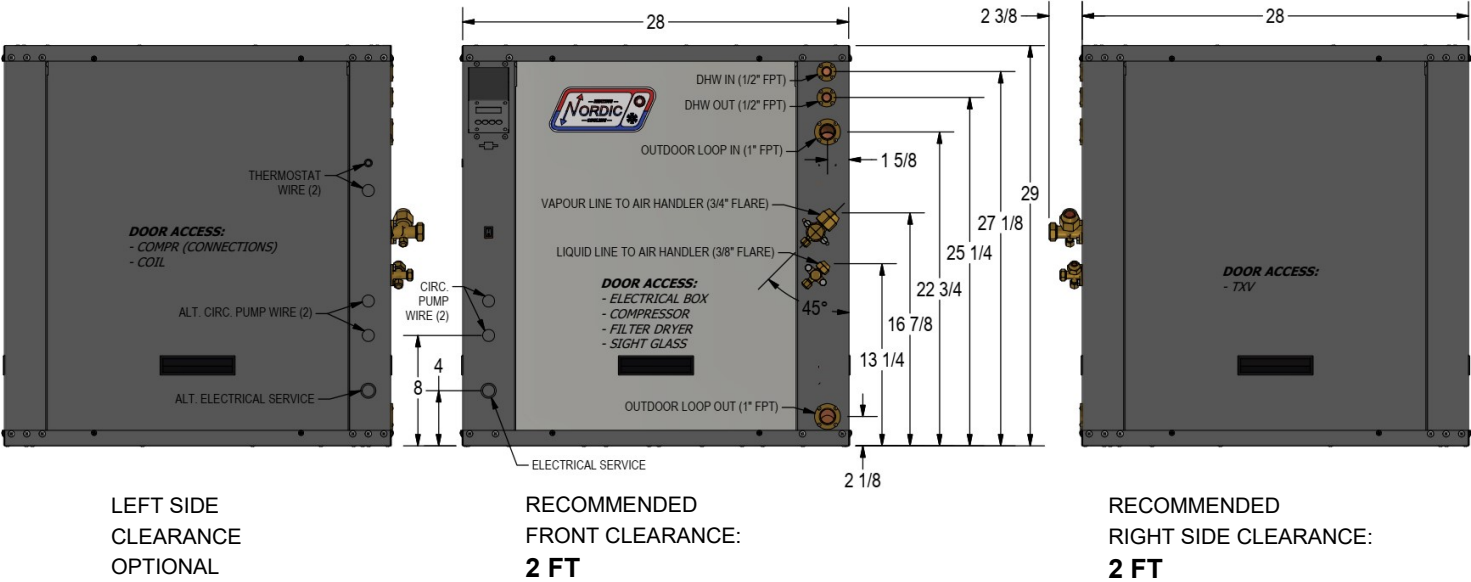


Dimensions: AHH-45 Horizontal Air Handler

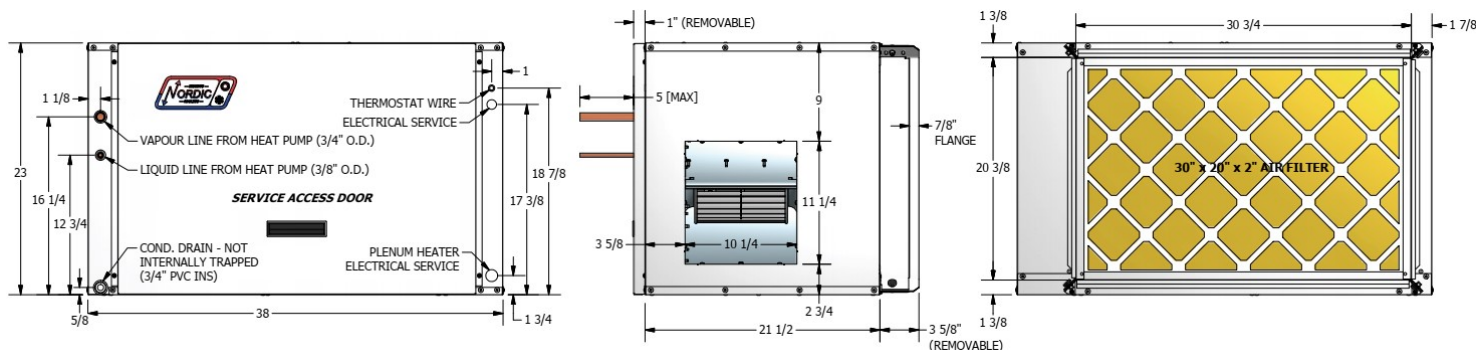

RECOMMENDED
FRONT CLEARANCE:
2 FT

Dimensions: AHV-45 Air Vertical Handler

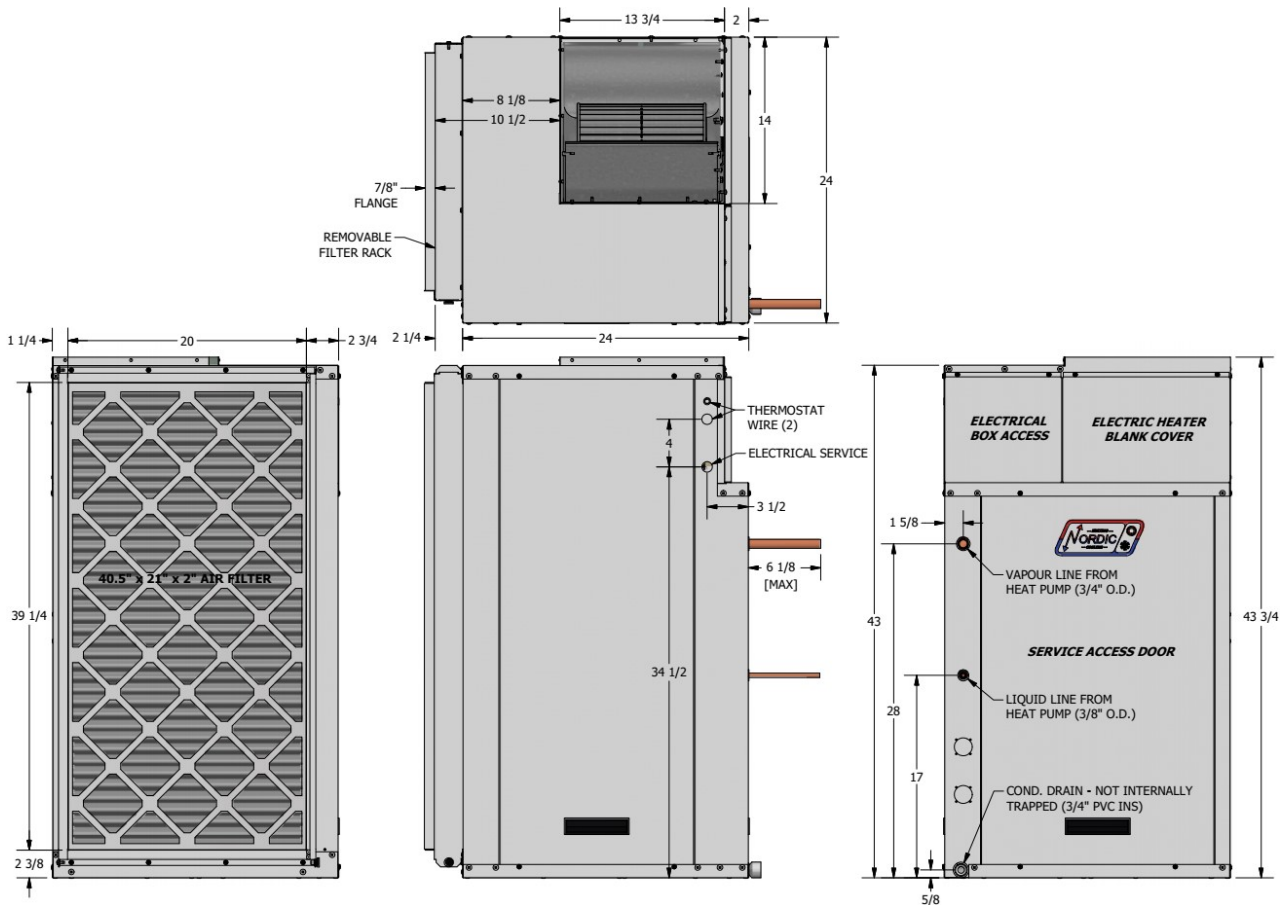


LEFT SIDE
CLEARANCE
OPTIONAL



RECOMMENDED
FRONT CLEARANCE:
2 FT

Dimensions: RS-55/65/75/80 Compressor Unit

All dimensions in inches.

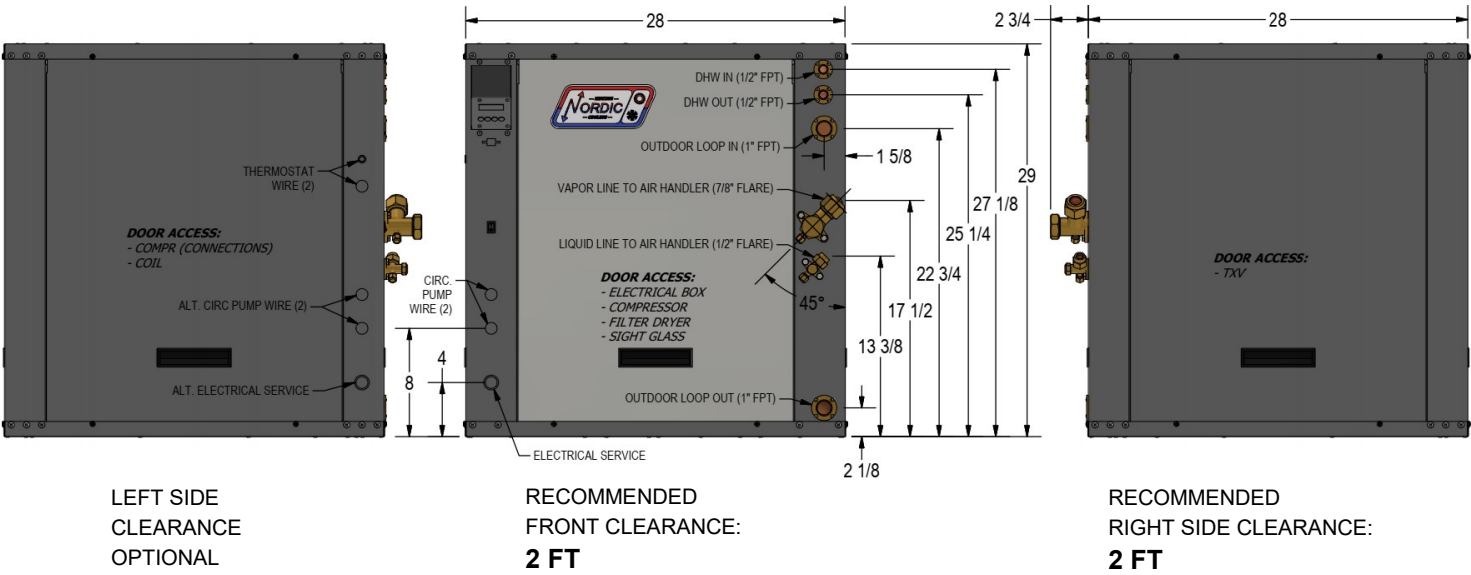

NO BACK CLEARANCE REQUIRED

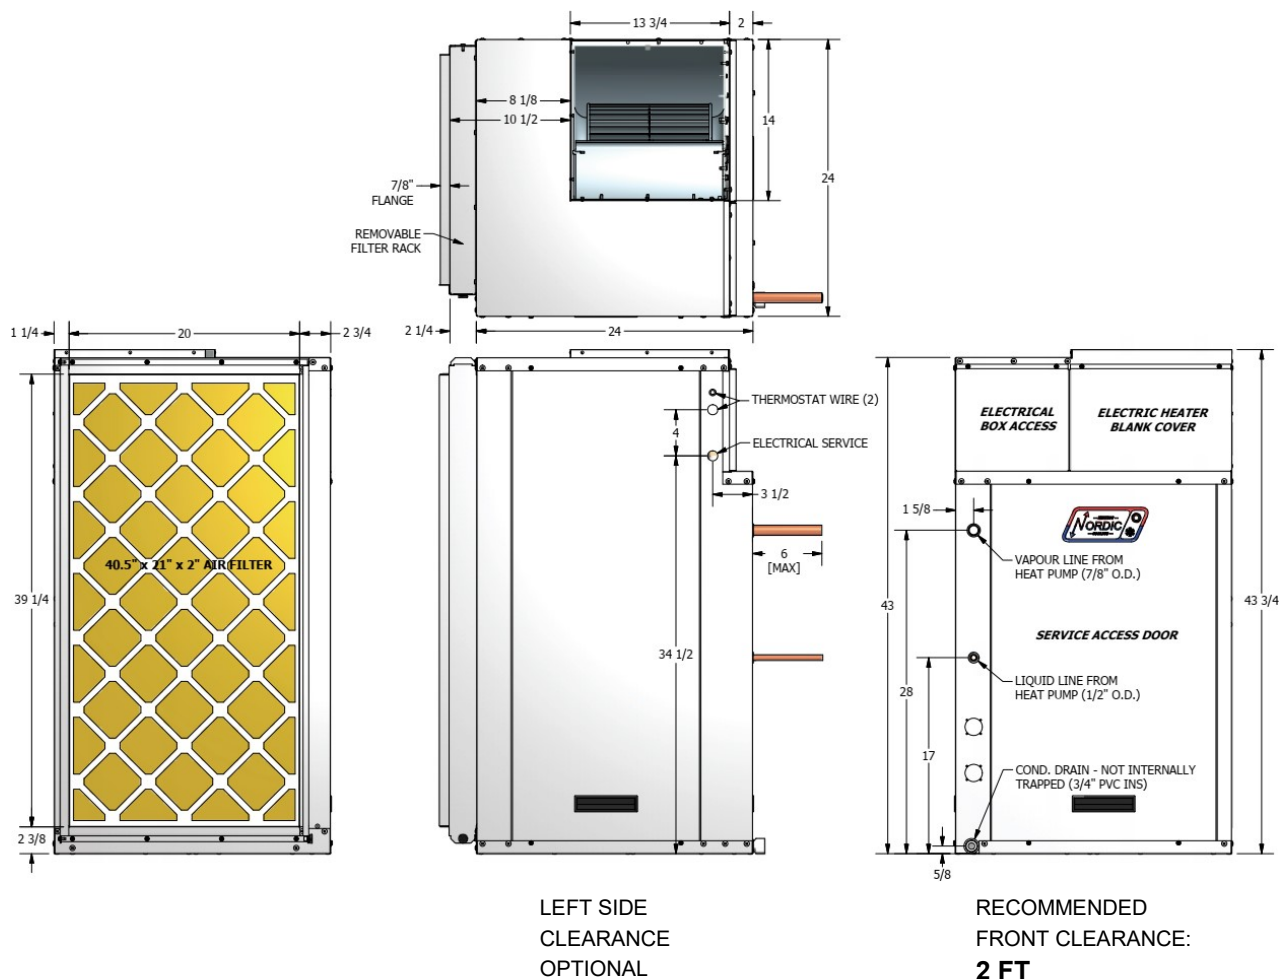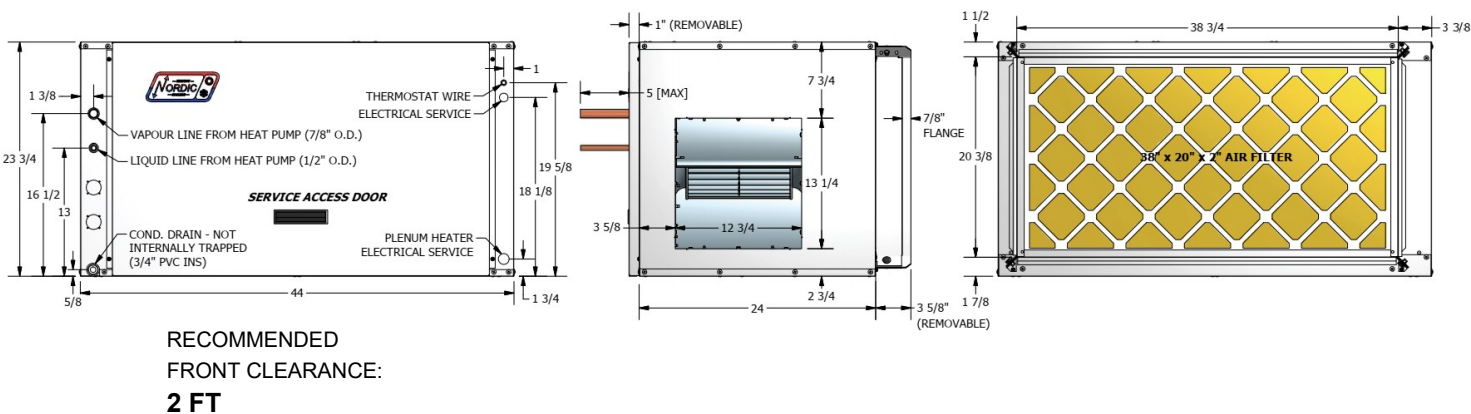

Warranty: RS-Series

RESIDENTIAL LIMITED EXPRESS WARRANTY

Unless a statement is specifically identified as a warranty, statements made by Maritime Geothermal Ltd. ("MG") or its representatives relating to MG's products, whether oral, written or contained in any sales literature, catalogue or agreement, are not express warranties and do not form a part of the basis of the bargain, but are merely MG's opinion or commendation of MG's products.

SET FORTH HERE IS THE ONLY EXPRESS WARRANTY THAT APPLIES TO MG'S PRODUCTS. MG MAKES NO WARRANTY AGAINST LATENT DEFECTS. MG MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.

LIMITED EXPRESS RESIDENTIAL WARRANTY - PARTS

MG warrants its Residential Class products, purchased and retained in the United States of America and Canada, to be free from defects in material and workmanship under normal use and maintenance as follows:

- (1) Air conditioning, heating and/or heat pump units built or sold by MG ("MG Units") for five (5) years from the Warranty Inception Date (as defined below).
- (2) Thermostats, auxiliary electric heaters and geothermal pumping modules built or sold by MG, when installed with MG Units, for five (5) years from the Warranty Inception Date (as defined below).
- (3) Sealed refrigerant circuit components of MG Units (which components only include the compressor, refrigerant to air/water heat exchangers, reversing valve body and refrigerant metering device) for ten (10) years from the Warranty Inception Date (as defined below).
- (4) Other accessories and parts built or sold by MG, when installed and purchased with MG Units, for five (5) years from the date of shipment from MG.
- (5) Other accessories, when purchased separately, for (1) year from the date of shipment from MG.

The "Warranty Inception Date" shall be the date of original unit installation, as per the date on the installation Startup Record; or six (6) months from date of unit shipment from MG, whichever comes first.

To make a claim under this warranty, parts must be returned to MG in Petitediac, New Brunswick, freight prepaid, no later than ninety (90) days after the date of the failure of the part. If MG determines the part to be defective and within MG's Limited Express Residential Warranty, MG shall, when such part has been either replaced or repaired, return such to a factory recognized distributor, dealer or service organization, freight prepaid. The warranty on any part repaired or replaced under warranty expires at the end of the original warranty period.

LIMITED EXPRESS RESIDENTIAL WARRANTY - LABOUR

This Limited Express Residential Labour Warranty shall cover the **labour** incurred by MG authorized service personnel in connection with the installation of a new or repaired warranty part that is covered by this Limited Express Residential Warranty only to the extent specifically set forth in the current **labour** allowance schedule "A" provided by MG's Warranty Department and only as follows:

- (1) MG Units for two (2) years from the Warranty Inception Date.
- (2) Thermostats, auxiliary electric heaters and geothermal pump modules built or sold by MG, when installed with MG Units, for two (2) years from the Warranty Inception Date.
- (3) Sealed refrigerant circuit components of MG Units (which components only include the compressor, refrigerant to air/water heat exchangers, reversing valve body and refrigerant metering device) for five (5) years from the Warranty Inception Date.

Labour costs are not covered by this Limited Express Residential Warranty to the extent they **exceed** the amount allowed under said allowance schedule, they are not specifically provided for in said allowance schedule, they are not the result of work performed by MG authorized service personnel, they are incurred in connection with a part not covered by this Limited Express Residential Warranty, or they are incurred more than the time periods set forth in this paragraph after the Warranty Inception Date.

This warranty does not cover and does not apply to:

- (1) Air filters, fuses, refrigerant, fluids, oil.
- (2) Products relocated after initial installation.
- (3) Any portion or component of any system that is not supplied by MG, regardless of the cause of the failure of such portion or component.
- (4) Products on which the unit identification tags or labels have been removed or defaced.
- (5) Products on which payment to MG, or to the owner's seller or installing contractor, is in default.
- (6) Products subjected to improper or inadequate installation, maintenance, repair, wiring or voltage conditions.
- (7) Products subjected to accident, misuse, negligence, abuse, fire, flood, lightning, unauthorized alteration, misapplication, contaminated or corrosive liquid or air supply, operation at abnormal air or liquid temperatures or flow rates, or opening of the refrigerant circuit by unqualified personnel.
- (8) Mold, fungus or bacteria damage
- (9) Corrosion or abrasion of the product.
- (10) Products supplied by others.
- (11) Products which have been operated in a manner contrary to MG's printed instructions.
- (12) Products which have insufficient performance as a result of improper system design or improper application, installation, or use of MG's products.
- (13) Electricity or fuel, or any increases or unrealized savings in same, for any reason whatsoever.

Except for the limited **labour** allowance coverage set forth above, MG is not responsible for:

- (1) The costs of fluids, refrigerant or system components **supplied by others**, or associated **labour** to repair or replace the same, which is incurred as a result of a defective part covered by MG's Limited Residential Warranty.
- (2) The costs of **labour**, refrigerant, materials or service incurred in diagnosis and removal of the defective part, or in obtaining and replacing the new or repaired part.
- (3) Transportation costs of the defective part from the installation site to MG, or of the return of that part if not covered by MG's Limited Express Residential Warranty.
- (4) The costs of normal maintenance.

This Limited Express Residential Warranty applies to MG Residential Class products manufactured on or after February 15, 2010. MG'S LIABILITY UNDER THE TERMS OF THIS LIMITED WARRANTY SHALL APPLY ONLY TO THE MG UNITS REGISTERED WITH MG THAT BEAR THE MODEL AND SERIAL NUMBERS STATED ON THE INSTALLATION START UP RECORD, AND MG SHALL NOT, IN ANY EVENT, BE LIABLE UNDER THE TERMS OF THIS LIMITED WARRANTY UNLESS THIS INSTALLATION START UP RECORD HAS BEEN ENDORSED BY OWNER & DEALER/INSTALLER AND RECEIVED BY MG LIMITED WITHIN 90 DAYS OF START UP.

Limitation: This Limited Express Residential Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined that other warranties exist, any such express warranty, including without limitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Residential Warranty.

LIMITATION OF REMEDIES

In the event of a breach of the Limited Express Residential Warranty, MG will only be obligated at MG's option to repair the failed part or unit, or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after written notice to MG's factory in Petitediac, New Brunswick of each defect, malfunction or other failure, and a reasonable number of attempts by MG to correct the defect, malfunction or other failure, and the remedy fails of its essential purpose, MG shall refund the purchase price paid to MG in exchange for the return of the sold good(s). Said refund shall be the maximum liability of MG. **THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER OR PURCHASER AGAINST MG FOR BREACH OF CONTRACT, FOR THE BREACH OF ANY WARRANTY OR FOR MG'S NEGLIGENCE OR IN STRICT LIABILITY.**

LIMITATION OF LIABILITY

MG shall have no liability for any damages if MG's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes, or work stoppages, fire, flood, accident, shortages of transportation, fuel, material, or labour, acts of God or any other reason beyond the sole control of MG. **MG EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR MG'S NEGLIGENCE OR AS STRICT LIABILITY.**

OBTAINING WARRANTY PERFORMANCE

Normally, the dealer or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any MG recognized distributor, dealer or service organization. If assistance is required in obtaining warranty performance, write or call Maritime Geothermal Ltd.

NOTE: Some states or Canadian provinces do not allow limitations on how long an implied warranty lasts, or the limitation or exclusions of consequential or incidental damages, so the foregoing exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and from Canadian province to Canadian province.