




Application, Installation, & Service Manual

W-Series Liquid to Water Heat Pumps

Single-Stage R410a
Model Sizes 12-18

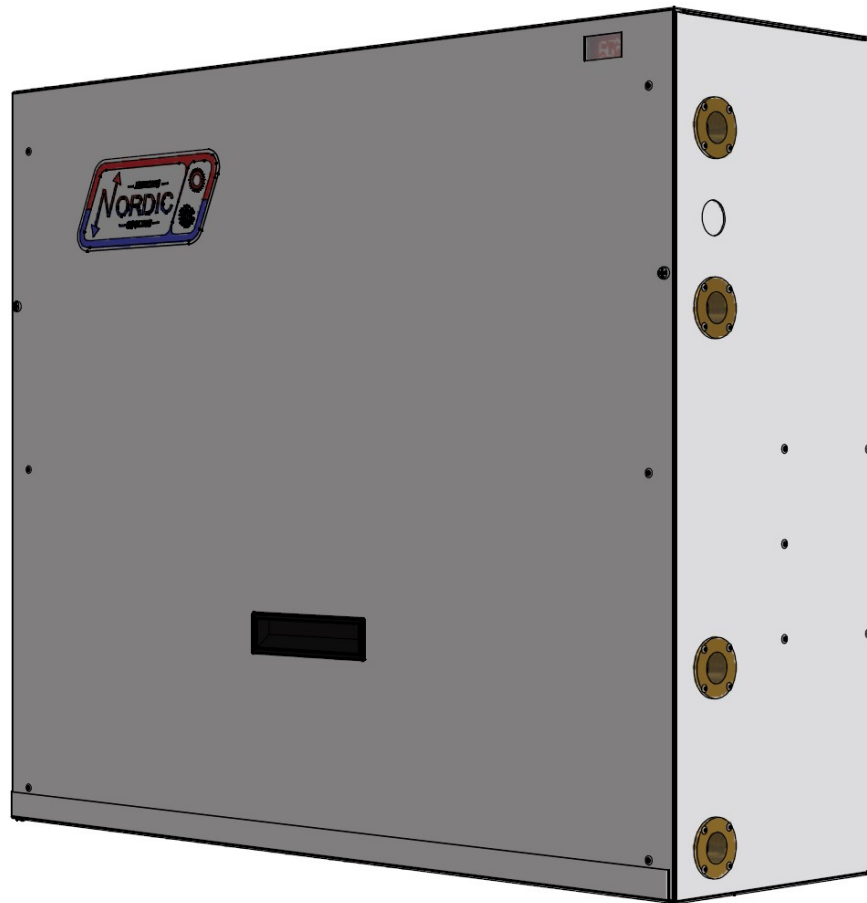

Maritime Geothermal Ltd.
P.O. Box 2555, 170 Plantation Road
Petitcodiac, NB E4Z 6H4
(506) 756-8135



info@nordicghp.com
www.nordicghp.com
002507MAN-02




SAFETY PRECAUTIONS



- WARNING:** Ensure all access panels are in place and properly secured before applying power to the unit. Failure to do so may cause electrical shock.
- WARNING:** Before performing service or maintenance on the heat pump system, ensure all power sources are DISCONNECTED. Electrical shock can cause serious personal injury or death.
- WARNING:** Heat pump systems contain refrigerant under high pressure and as such can be hazardous to work on. Only qualified service personnel should install, repair, or service the heat pump.
- CAUTION:** Safety glasses and work gloves should be worn at all times whenever a heat pump is serviced. A fire extinguisher and proper ventilation should be present whenever brazing is performed.
- CAUTION:** Venting refrigerant to atmosphere is illegal. A proper refrigerant recovery system must be employed whenever repairs require removal of refrigerant from the heat pump.

Model Nomenclature

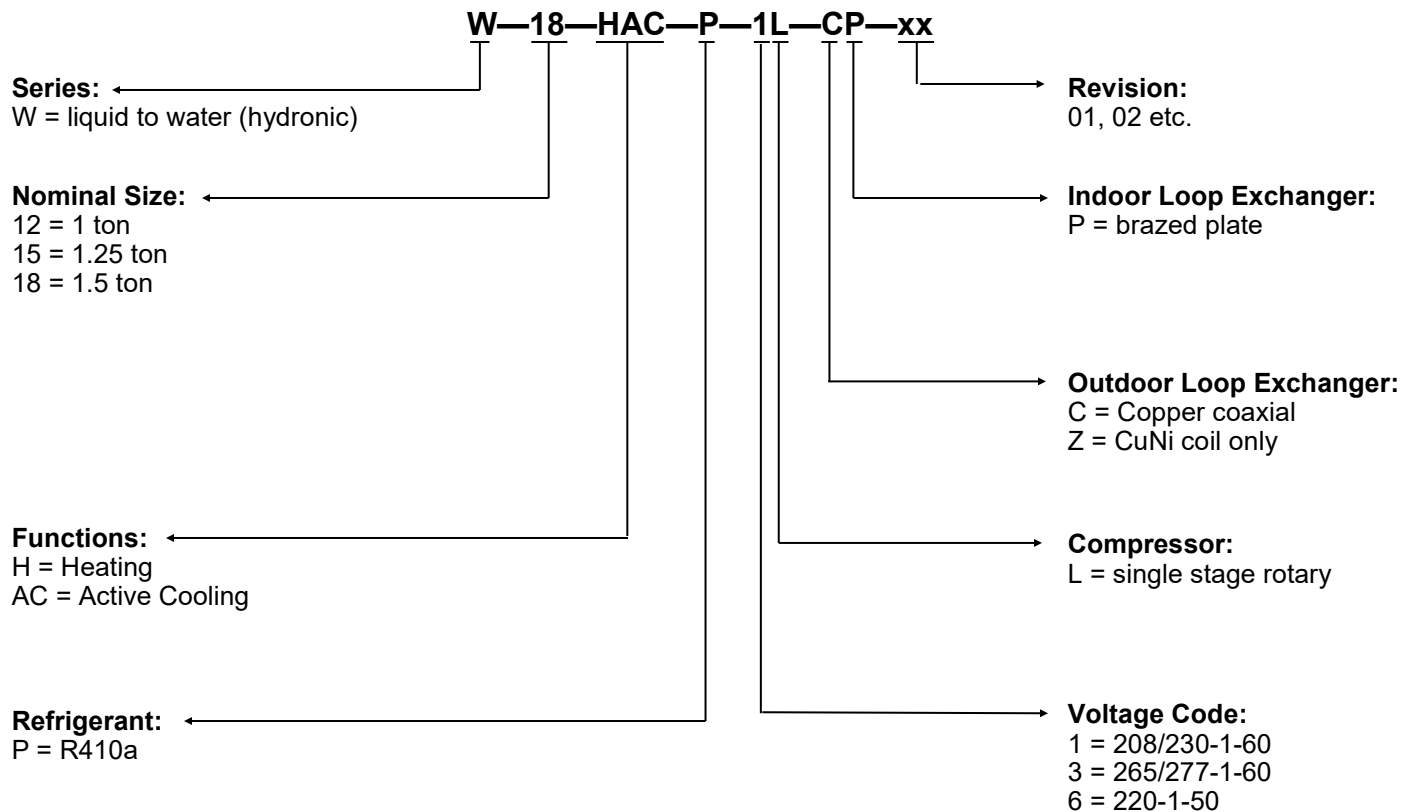

APPLICATION TABLE									
MODEL	FUNCTION	REFRIGERANT	VOLTAGE	COMPRESOR	OUTDOOR COIL	INDOOR COIL	REVISIONS		
W-12	HAC	P	1 3	L	C Z	P	02		
W-15	HAC	P	1 3	L	C Z	P	02		
W-18	HAC	P	1 3	L	C Z	P	02		
This manual applies only to the models and revisions listed in this table									

Maritime Geothermal Ltd. has a continuous improvement policy and reserves the right to modify specification data at any time without prior notice .

Table of Contents

Tables, Figures, & Documents	5	Startup Procedure	33
W-Series System Description	6	Pre-start Inspection	33
General Overview	6	Unit Startup	34
1. Heating Mode	6	Startup Record	35
2. Cooling Mode	6	Routine Maintenance	36
W-Series Sizing	7	Heat Exchanger Flushing Procedure - Open Loop	36
Heat Pump Sizing	7	Heat Exchanger Flushing Procedure - Closed Loop	36
Auxiliary Heat Sizing	7	Troubleshooting Guide	37
Installation Basics	8	Repair Procedures	43
Sample Bill of Materials - Ground Loop Installations	8	Pumpdown Procedure	43
Sample Bill of Materials - Open Loop Installations	8	General Repair Procedure	43
Unpacking the unit	8	Vacuuming & Charging Procedure	43
Unit Placement	8	Compressor Replacement Procedure	44
Wiring	9	Model Specific Information	45
Power Supply Connections	9	Refrigerant Charge	45
Indoor Loop Circulator Pump Wiring	9	Shipping Information	45
Outdoor Loop Pump Module Wiring (Ground Loop Only)	9	Operating Temperature Limits	45
Control Transformer	9	Required Indoor & Outdoor Loop Flow Rates	45
Open/Closed Loop Wiring	9	Electrical Specifications	45
Control Requirements	10	Pressure Drop Data	46
Manual Cooling Mode Switchover	10	Standard Capacity Ratings	47
Auxiliary Heat	10	Performance Tables: W-12	48
Internal Aquastat Operation	10	Performance Tables: W-15	49
Safety Controls	11	Performance Tables: W-18	50
002508CDG - Typ. Aux Heat & Circ. Wiring w/Int. Aquastat ..	12	Wiring Diagram (208/230-1-60)	51
002375QSS - AltSource Tanks: Getting Started	13	Wiring Diagram (265/277-1-60)	52
002067CDG - Typical Zone Wiring (Heating Only)	14	Refrigeration Circuit - Heating Mode	53
002509CDG - Typ. Control & Zone Wiring (Htg & Cooling) ..	15	Refrigeration Circuit - Cooling Mode	54
Piping	16	Dimensions	55
Indoor Loop	16	Warranty	56
Outdoor Loop	16		
002366PDG - Recommended Hydronic Buffer Tank Piping ..	17		
002367PDG - Auxiliary Boiler Piping	18		
002252PDG - 2-Tank System with a Reversing Heat Pump..	19		
002288PDG - 2-Tank Simultaneous Heating/Cooling.....	20		
000530PDG - Typical Zone Types.....	21		
Ground Loop Installations	22		
Circulator Pump Module	22		
Flushing & Purging	22		
Adding Antifreeze Solution	23		
Initial Pressurization	23		
Pipe Insulation	23		
000608INF - Typical Horiz. Ground Loop Configuration	24		
000609INF - Typical Vert. Ground Loop Configuration	25		
000906CDG - Circulator Pump Module Installation	26		
000629PDG - Pump Module Inst - 2 Units on 1 Loop	27		
Open Loop Installations	28		
Well Water Temperature	28		
Well Water Flow	28		
Well Water Quality	28		
Water Discharge Methods	28		
Water Valve	29		
Water Flow Control	29		
Submersible Pump Selection	30		
Submersible Pump Power Draw	30		
Plumbing the Heat Pump	30		
Pipe Insulation	30		
000907CDG - Typical Open Loop Installation	31		
000619INF - Ground Water Disposal Methods	32		

Tables, Figures, & Documents

Tables	Table 1 - Heat Pump Size vs. Heated Area for a Ground Loop System	7
	Table 2 - Heat Pump Size vs. Heated Area for an Open Loop System	7
	Table 3 - Auxiliary Heat Sizing	7
	Table 4 - Power Supply Connections	9
	Table 5a - Indoor Loop Circulator Connections	9
	Table 5b - Outdoor Loop Circulator Connections	9
	Table 6 - Control Signal Description	10
	Table 7 - Internal Aquastat Settings	10
	Table 8 - Typical Aquastat Setpoints	10
	Table 9 - Control Board Fault Codes	11
	Table 10 - Buffer Tank Size	16
	Table 11 - Antifreeze Percentages	23
	Table 12 - Volume of Fluid per 100ft. Of Pipe	23
	Table 13 - Required Flow	28
	Table 14 - Refrigerant Charge	45
	Table 15 - Shipping Information	45
	Table 16 - Operating Temperature Limits	45
	Table 17 - Required Indoor & Outdoor Loop Flow Rates	45
	Table 18 - Electrical Specifications	45
	Table 19 - Loop Pressure Drop Data	46
	Table 20 - Standard Capacity Ratings - Ground Loop Heating 60Hz	47
	Table 21 - Standard Capacity Ratings - Ground Loop Cooling 60Hz	47
	Table 22 - Standard Capacity Ratings - Ground Water Heating 60Hz	47
Table 23 - Standard Capacity Ratings - Ground Water Cooling 60Hz	47	
Figures	Figure 1 - Ground Loop Accessories & Tools	22
	Figure 2 - Open Loop Accessories & Tools	29
	Dimensions	55
Documents	002508CDG - Typical Auxiliary Heat & Circulator Wiring w/ Internal Aquastat.....	12
	002375QSS - AltSource Tanks: Getting Started	13
	002067CDG - Typical Zone Wiring (Heating Only)	14
	002509CDG - Typical Control & Zone Wiring (Heating & Cooling, Automatic Switchover).....	15
	002366PDG - Recommended Hydronic Buffer Tank Piping.....	17
	002367PDG - Auxiliary Boiler Piping.....	18
	002252PDG - Two Tank System Piping with a Reversing Heat Pump.....	19
	002288PDG - Two Tank Simultaneous Heating / Cooling.....	20
	000530PDG - Typical Zone Types for Hydronic Applications.....	21
	000608INF - Typical Horizontal Ground Loop Configuration	24
	000609INF - Typical Vertical Ground Loop Configuration	25
	000906CDG - Geo-Flo Circulator Pump Module Installation	26
	000629PDG - Circulator Pump Module Installation - Two Units on One Ground Loop.....	27
	000907CDG - Typical Ground Water (Open Loop) Installation	31
	000619INF - Ground Water Disposal Methods	32
	002380SCH - W-HAC Schematic Diagram 208/230-1-60 Rotary Reversing	51
	002383SCH - W-HAC Schematic Diagram 265/277-1-60 Rotary Reversing	52
	001488RCD - W-Series Refrigeration Circuit - Heating Mode	53
	001489RCD - W-Series Refrigeration Circuit - Cooling Mode	54

W-Series System Description

General Overview

The Nordic W-series, a geothermal standard for more than 30 years, is a package water source heat pump that can heat or chill water for hydronic applications like in-floor heating, low temperature radiators, or hydronic air handlers/fan coils.

Most or all water-to-water heat pumps on the market start at 2 tons in nominal size, making them too large for single zone, decentralized, or passive home applications. The model sizes described here are 1-1.5 tons in capacity, making them ideal for such applications.

Being a 'ground source', 'water source', 'geoexchange', or 'geothermal' heat pump, the W-series does require either a **closed ground loop** or **open loop water well** for a heat source/sink. There is no outdoor fan unit for ground source heat pumps.

The outdoor loop hydronic heat exchanger is a heavy duty coaxial copper / steel model with optional CuNi inner tube available. The indoor loop heat exchanger is a stainless steel brazed plate model, for compact size and high heating performance. Compressor is a single-stage rotary model. A single thermostatic expansion valve (TXV) regulates superheat. The cabinet is constructed from powder coated galvanized sheet metal, and is a slim style that can be wall mounted.

1. Heating Mode

In heating mode, the heat pump heats water in a buffer tank to a user-adjustable setpoint temperature, while extracting heat from the outdoor loop. A buffer tank is required, in order to maintain control over the water temperature and avoid mis-

matching between the heat pump's output and the heat load. A built-in aquastat determines when the buffer tank temperature has fallen below the user-adjustable setpoint and hydronic heating is required. An external backup heating device can be activated through dry contacts via a built-in 0-2 hour timer.

If a closed ground loop is used, the circulation pumps are powered and controlled by the heat pump; if open loop, a water valve is opened by the heat pump during heating operation and closed when the heat pump is idle.

Hydronic heating systems are easily zoned, and zones may be in-floor heating, hydronic air handlers, or other hydronic devices suitable for water temperatures less than 120°F (49°C). When a zone requires heat, its zone thermostat calls for a zone circulator pump or zone valve to activate, so that hot water from the buffer tank is sent to the zone requiring heat. Note that there is no direct connection between the zone thermostat and the heat pump, the functions of each being separated by the buffer tank.

2. Cooling Mode

In cooling mode, the heat pump cools water in the buffer tank. Heat is rejected to the outdoor loop.

Hydronic cooling is usually done through hydronic air handlers, which have condensate drains to remove water that is removed while dehumidifying the air. In less humid climates or when a separate dehumidifier is present, in-floor or radiant cooling is sometimes performed; such systems can't remove humidity from the air. In this case, care must be taken to ensure the cooling surface does not fall below the dew point temperature in order to prevent condensation on floor surfaces.

Installation example of a larger (W-25 to 80) Nordic water to water heat pump



W-Series Sizing

Heat Pump Sizing

The following table is a rough guideline as to the size of space each heat pump size can handle for **ground loop (closed loop)** installations.

TABLE 1 - Heat Pump Size vs. Heated Area for a Ground Loop System		
Model Size	ft ²	m ²
12	400	37
15	475	44
18	600	56

The following table is a rough guideline as to the size of home each heat pump size can handle for **ground water (open loop)** installations.

TABLE 2 - Heat Pump Size vs. Heated Area for an Open Loop System		
Model Size	ft ²	m ²
12	500	47
15	575	53
18	750	70

THE TABLES ABOVE ARE FOR INFORMATION ONLY. They should not be used to select a final unit size. They simply show on average what size unit is required for a typical space or home (main level and below grade basement) with R20 walls, R40 ceiling and average size and number of windows. The Heated Area is the area of the main level. The tables account for a basement the same size as the heated area.

IT IS HIGHLY RECOMMENDED THAT A PROPER HEAT LOSS/GAIN ANALYSIS BE PERFORMED BY A PROFESSIONAL WITH APPROVED CSA F-280 SOFTWARE BEFORE SELECTING THE SIZE OF UNIT REQUIRED FOR THE APPLICATION. For heating dominant climates, we recommend sizing the unit to 100% of the heating design load for maximum long term efficiency with minimal supplementary heat. The unit should be installed as per CSA standard 448.2-02. For ground loop applications, the ground loop should be designed using suitable software with a multi-year analysis.

The analysis will result in a heat load for the coldest day, which is influenced by, for example, the number of levels, the size of the windows, the orientation of the home, attached garage, bonus rooms, walk-in basement, and coldest outdoor temperature for the region.

A heat pump model size can be selected by comparing the calculated heat load to the standard capacity ratings, which are listed in the **Model Specific Information** section of this manual. For 100% heat pump sizing, choose a heat pump with a standard capacity rating that matches or just slightly exceeds the calculated heat load.

Closed ground loops are normally designed to reach a minimum temperature of just below freezing at the end of the heating season, in order to take advantage of the latent heat of groundwater (at least in northern climates). Hence, the Standard Capacity Ratings for Ground Loop Heating should apply in all northern climates.

The Standard Capacity Ratings for Ground Water (open loop) heat pumps assume a well water temperature of 50°F (10°C). If the groundwater is not close to this temperature, it will be

necessary to consult the more detailed performance tables later in the section for heat pump output at a different Entering Liquid Temperature (ELT).

In cooling dominant climates, the heat pump should be similarly sized using the Ground Loop Cooling or Ground Water Cooling Standard Capacity Ratings. **Even in northern heating dominant climates, it should be ensured that 100% of the cooling load will be covered when sizing the heat pump, since there is normally no auxiliary or backup cooling available.**

Auxiliary Heat Sizing

The easiest way to provide auxiliary or backup heat for new installations is by installing a buffer tank that has electric elements. Buffer tanks with elements that are certified for space heating use are available as accessories from Maritime Geothermal Ltd., or others may be used. For retrofits, often an existing heat device can be used for auxiliary heat. Note that if the geothermal heat pump is sized for 100% of the coldest day heat load, auxiliary heat is not strictly required (unlike with an air source heat pump).

For full backup, an option which is good for peace of mind (should the heat pump experience a problem) but can require significant electrical service capacity, an element size can be chosen that covers 100% of the coldest day heat load, according to the heat loss analysis mentioned in the last section. If a heat loss analysis is not available, the following table may be used as a guide.

TABLE 3 - Auxiliary Heat Sizing	
Model Size	Tank Element Size Recommended
12	3000 W
15	3500 W
18	5000 W

For heat pumps that are sized to cover less than 100% of the coldest day heat load, the elements can be sized to make up the coldest-day difference. The CSA installation standard allows geothermal heat pumps to be sized to as little as 75% of the coldest day heat load.

For retrofits, the existing heating device (e.g. an electric or gas boiler) may be used for auxiliary heat. It should be wired as described in the **Wiring** section, and piped in a parallel arrangement as per the diagram in the **Piping** section.

Installation Basics

Sample Bill of Materials - Ground Loop Installations

Although not exhaustive, following is a list of materials needed for a typical ground loop installation:

FROM MARITIME GEOTHERMAL

- W SERIES HEAT PUMP
- BUFFER TANK W/ELEMENTS __kW
- EXTERNAL AQUASTAT (ONLY FOR HEAT/COOL AUTO SWITCHOVER CONFIGURATIONS)
- P/T PORTS AND HOSE ADAPTERS (2)
- PUMP PACK
- PIPE ADAPTERS FOR PUMP PACK

OPTIONAL FROM MARITIME GEOTHERMAL

- ANTI-VIBRATION PAD
- SOUND JACKET
- AHW-65 AIR HANDLER(S)

GROUND LOOP

- 3/4" PE PIPE
- 1-1/4" PE PIPE
- PE PIPE FITTINGS
- 1" CLEAR HOSE (HEAT PUMP TO PUMP PACK)
- HOSE CLAMPS
- ANTIFREEZE: METHANOL OR PROP. GLYCOL

ZONES

- CIRCULATOR: HEAT PUMP TO TANK
- 3/4" PIPE & FITTINGS: HEAT PUMP TO TANK
- ZONES CIRCULATOR(S)
- ZONE TRANSFORMER & CIRC CONTACTOR
- ZONE VALVES (IF NOT INDIVIDUAL PUMPS)
- IN-FLOOR PIPING
- OTHER AIR HANDLERS, DUCTING
- ZONE THERMOSTATS
- RELAYS OR ZONE CONTR. (REVERSING SYSTEMS)
- ZONE SUPPLY & RETURN HEADERS
- PIPE & FITTINGS TO ZONES
- EXPANSION TANK

ELECTRICAL

- HEAT PUMP SERVICE WIRE
- BUFFER TANK ELEMENT SERVICE WIRE
- HEAT PUMP BREAKER
- BUFFER TANK ELEMENT BREAKER
- CONTACTOR & ELEC. BOX (IF NOT WITH TANK)
- THERMOSTAT WIRE 18-4
- THERMOSTAT WIRE 18-2
- FORK TERMINALS FOR TSTAT WIRE (6)
- 2" STYROFOAM INSUL. (IF PAD NOT PURCHASED)

Sample Bill of Materials - Open Loop Installations

Although not exhaustive, following is a list of materials needed for a typical open loop (groundwater) installation:

FROM MARITIME GEOTHERMAL

- W SERIES HEAT PUMP
- BUFFER TANK W/ELEMENTS __kW
- EXTERNAL AQUASTAT (ONLY FOR HEAT/COOL AUTO SWITCHOVER CONFIGURATIONS)
- P/T PORTS AND HOSE ADAPTERS (2)
- DOLE VALVE
- TACO OR SOLENOID VALVE

OPTIONAL FROM MARITIME GEOTHERMAL

- ANTI-VIBRATION PAD
- SOUND JACKET
- AHW-65 AIR HANDLER(S)

WATER SYSTEM

- 3/4" BLACK PLASTIC WATER PIPE
- 3/4" BARBED FITTINGS & HOSE CLAMPS
- SUBMERSIBLE PUMP (IF NOT EXISTING)
- PRESSURE TANK (IF NOT EXISTING)
- CYCLE STOP VALVE (OPTIONAL)

ZONES

- CIRCULATOR: HEAT PUMP TO TANK
- 3/4" PIPE & FITTINGS: HEAT PUMP TO TANK
- ZONES CIRCULATOR(S)
- ZONE TRANSFORMER & CIRC CONTACTOR
- ZONE VALVES (IF NOT INDIVIDUAL PUMPS)
- IN-FLOOR PIPING
- OTHER AIR HANDLERS, DUCTING
- ZONE THERMOSTATS
- RELAYS OR ZONE CONTR. (REVERSING SYSTEMS)
- ZONE SUPPLY & RETURN HEADERS
- PIPE & FITTINGS TO ZONES
- EXPANSION TANK

ELECTRICAL

- HEAT PUMP SERVICE WIRE
- BUFFER TANK ELEMENT SERVICE WIRE
- HEAT PUMP BREAKER
- BUFFER TANK ELEMENT BREAKER
- CONTACTOR & ELEC. BOX (IF NOT WITH TANK)
- THERMOSTAT WIRE 18-4
- THERMOSTAT WIRE 18-2
- FORK TERMINALS FOR TSTAT WIRE (6)
- 2" STYROFOAM INSUL. (IF PAD NOT PURCHASED)

Unpacking the Unit

When the heat pump arrives it should be unpacked to determine if any damage has occurred during shipment. Any visible damage should be noted on the carrier's freight bill and a suitable claim filed.

Unit Placement

The placement of a hydronic heat pump has negligible effects on the efficiency and operation of the system. The hydronic layout may make a particular location ideal for the unit.

The heat pump is designed to be wall-mounted. See the

Dimensions section toward the end of this document for mounting bolt pattern on wall. Four 5/16" lag bolts into solid wood or equivalent must be used to carry the significant weight of the heat pump and water in heat exchangers.

The heat pump cover should remain unobstructed for a distance of **two feet** to facilitate servicing and general maintenance.

If floor mounted, provision should be made to eliminate tipping hazard. Raising the indoor unit off the floor a few inches is generally a good practice since this will prevent rusting of the bottom panel of the unit and deaden vibrations. A piece of 2" Styrofoam can be placed under the unit.

Wiring

Power Supply Connections

Power supply for the heat pump from the breaker panel is supplied to the unit via a 0.875" knockout. There are also two 0.875" knockouts for electrical connections to the indoor circulator, ground loop circulator pump, and controls. There is one additional 1/2" opening with plastic grommet (grommet hole is 3/8") for connections to the controls.

A schematic diagram (SCH) can be found on the electrical box cover of the unit as well as in the [Model Specific Information](#) section of this manual. The **Electrical Specifications** table in the [Model Specific Information](#) section contains information about the wire and breaker size.



IMPORTANT NOTE: A properly qualified electrician should be retained for all connections to the heat pump and associated controls. The connections to the heat pump MUST CONFORM TO LOCAL CODES.

Line	Description	Voltages
L1	Line 1	All
L2	Line 2	All
N**	Neutral	230-1-60**
GND	Ground	All (connect to ground lug)

** N is required only if connecting 115VAC circulators to the unit. The heat pump itself does not require a neutral.

Indoor Loop Circulator Pump Wiring

The unit has provisions for connecting the indoor circulator pump (between the heat pump and buffer tank) so that it will be turned on **before** the compressor operates. *The indoor circulator must be connected in the following way to avoid flow switch safety trips.*

Connect the indoor circulator pump to the appropriate two terminals (115V & 115/230 or 230V & 115/230) of the terminal strip marked **Indoor Circulator Pumps**. Ground wires should be connected to the ground lug in the electrical box.

Signal	Description
115	Connection for 115V circulator
115/230	Connection for 115V or 230V circulator
230	Connection for 230V circulator
Use a 2-conductor 14ga cable.	
277	Connection for 265/277V circulator
277	(heat pump voltage code 3 only)
Use a 2-conductor 14ga cable.	

Outdoor Loop Pump Module Wiring (Ground Loop Only)

The heat pump has provisions for connecting the ground loop pump module so that the pumps will be turned on whenever the compressor operates.

Connect the outdoor circulator pump or module to the appropriate two terminals (115V & 115/230 or 230V & 115/230) of the terminal strip marked **Outdoor Circulator Pumps**. Ground wires should be connected to the ground lug in the electrical box.

Signal	Description
115V	Connection for 115V circulator
115/230	Connection for 115V or 230V circulator
230V	Connection for 230V circulator
Use a 2-conductor 14ga cable.	
277	Connection for 265/277V circulator
277	(heat pump voltage code 3 only)
Use a 2-conductor 14ga cable.	

Control Transformer

The low voltage controls are powered by a 40VA class II transformer. It has impedance protection, so if it is shorted out needs to be replaced.



IMPORTANT NOTE: For 208/230VAC-1-60 units, if connecting to 208VAC power supply move the red wire connected to the 240 terminal of the transformer to the 208 terminal of the transformer.

Open/Closed Loop Wiring

The heat pump is provided configured for closed loop operation. For open loop operation, it is **necessary** to remove the jumper plug from the wiring harness found behind the pipe post and plug in the water valve harness. This will select the proper low pressure control. See the "Water Valve" section in the Open Loop Installations chapter and [000907CDG](#) for details.



WARNING: Connecting an open loop water valve without a harness provided by Maritime Geothermal could lead to frozen and ruptured heat exchanger, voiding the warranty.

Control Requirements

Since an aquastat is built into the heat pump, no external controls are normally required. The aquastat comes with a probe with 96" (8 ft / 2.4 m) of wire, which should be extended through the knockout on the right side of the cabinet and placed in a dry well near the top of the buffer tank. If a dry well is not available, it may be possible to affix the probe to the tank inside the insulation.

The internal aquastat is capable of controlling both heating and cooling mode operation (operating both compressor and reversing valve), with a manual switchover required between heating and cooling modes.

Alternatively, an accessory external aquastat or other controller with dry contacts may be used, **but to control cooling mode only**. This would be necessary if the heat pump needs to switch into cooling mode automatically, when a zone controller or a network of room thermostats and relays demand a switchover. Two connections are required, as outlined in the below table. Note that, if used, the **OEXT** signal (which turns off the on-board heating aquastat) must be present during cooling season even when there is no cooling demand. This is to avoid repeated heating and cooling of the buffer tank on demand cycling, causing high electricity consumption.

Manual Cooling Mode Switchover

When using just the built-in aquastat, all that is required to switch to cooling mode is to lower the **F1** setpoint temperature, by following the procedure outlined below and also on the schematic (wiring) diagram on the electrical box cover.

Auxiliary Heat

The heat pump has built in dry contacts **D1-D2**, to activate auxiliary heat. This will most often be electric elements in the buffer tank. **D1-D2** contacts will close with an **adjustable delay after compressor starts**. Use the blue knob on the timer in the electrical box to adjust this delay from 0 to 2 hours.

Devices with their own 24vac transformer and a digital controller (for example, the AltSource tanks available from Maritime Geothermal Ltd. as an accessory) will be directly activated by the **D1-D2** dry contact. Be sure to set up the AltSource tank according to a following page, so that its temperature limiter remains effective. This is necessary because **D1-D2** defaults to ON when the heat pump is off or inoperative, so that backup heat remains in effect.

Devices without their own transformer can have their contactor activated with a 24vac signal through D1-D2, using the wiring on the following page. **Note that some external temperature limiter must remain in effect since D1-D2 defaults to ON when heat pump is OFF.**

Signal	Description
C	24VAC Common (Ground)
R	24VAC Hot
Y_C(EXT)	Cooling demand from optional external controller
O(EXT)	Cooling mode active, from optional external controller (turns off internal aquastat, must be active for all of cooling season)
D1	Dry contacts to activate auxiliary heat (Contacts closed during compressor operation, but with adjustable 0-2 hour delay)
D2	

Internal Aquastat Operation



In normal operating mode, the aquastat displays the current buffer tank temperature, and this display is visible from outside the unit with cover on. The value will vary slightly, and will reflect the water temperature wherever the probe is placed, ideally near the top of the buffer tank in a dry well.

To make adjustments, remove the cover of the unit.

- Press the **UP** arrow to check the water setpoint temperature.
- Press the **DOWN** arrow to check the temperature differential. (The heat pump will come on when the water temperature falls below the setpoint by the differential, and will heat the tank back up to the setpoint.)
- To change settings, press and hold the **S** button for 3 seconds. Use the arrow keys to select setting F1-F6 (see below table). Press **S** to display current value. To change that value, press and hold **S** while simultaneously pressing an arrow key. Press **⏻** to save the setting and return to normal display.

Note that when the ON/OFF switch is in the OFF position, or an external cooling controller is connected and active, the internal aquastat display will be inoperative and its display will turn off. Settings will be retained.

Setting	Description
F1	Setpoint temperature (degrees)
F2	Temperature differential (degrees)
F3	Compressor delay time (minutes)
F4	Temperature calibration value (degrees)
F5	°F / °C
F6	High temperature alarm ON/OFF (not used)

HEATING		°F	°C
Setpoint	108	42	
Differential	10	5	
Activation *	98	37	
COOLING		°F	°C
Setpoint	45	7	
Differential (same)	10	5	
Activation *	55	12	

Heating setpoint should not exceed **120°F (49°C)**; cooling setpoint should not be set below **43°F (6°C)**. Setpoints outside these limits will cause the heat pump operating pressures to approach the safety control settings, possibly causing nuisance shutdowns.

If only pipe-in-concrete floor zones are being heated, it is highly recommended to lower each of the heating setpoints by 10°F (6°C) for increased efficiency.

Safety Controls

The heat pump has 3 built in safety controls which are designed to protect the unit from situations which could damage it should the operation of the refrigeration circuit fall outside the allowable operating range.

1. High Pressure Control

The high pressure safety control monitors the compressor discharge pressure and will shut the compressor down if the condensing pressure becomes too high.

There are (3) main reasons this control would activate in response to the operating conditions of the unit while operating in heating mode:

1. Low or no indoor loop flow.
2. High indoor loop entering liquid temperature.
3. Dirty or fouled indoor loop heat exchanger.
4. High refrigerant charge after service, or mechanical malfunction (see [Troubleshooting](#) section).

2. Low Pressure Control

The low pressure control monitors the compressor suction pressure and will shut the compressor down if the refrigerant evaporating pressure becomes too low, risking the danger of freezing conditions in the evaporator.

There are (3) main reasons this control would activate in response to the operating conditions of the unit while operating in heating mode:

1. Low or no outdoor loop flow.
2. Low outdoor loop entering liquid temperature.
3. Dirty or fouled outdoor loop heat exchanger.
4. Low refrigerant charge due to leak, or mechanical malfunction (see [Troubleshooting](#) section).

3. Flow Switch (on WATER control board input)

In cooling mode only, the flow switch provides additional protection for the brazed plate heat exchanger in the indoor loop, which can be more easily damaged by freezing when a circulator pump fails than the coaxial outdoor loop heat exchanger. This is an important protection in cooling mode, when the indoor loop brazed plate is the evaporator.

The unit contains a control board that monitors the safety controls and operates the compressor accordingly. The above safety devices are connected to the control board as shown on the wiring diagram later in this manual.

The compressor will not be allowed to start if a 'fault' condition exists. A 'fault' occurs if either one of the pressure controls or the flow switch exhibits an open circuit. In addition, the board monitors the voltage of the 24vac transformer. A fault will occur if a low voltage condition (**electricity grid brownout**) is detected.

The control board has an on-board LED and an ALR pin with a 24VAC output. An external indicator or relay can be connected between the ALR pin on the board and C on the terminal strip if external signaling is desired.

Should a fault condition occur, the on-board LED will flash the code of the fault condition. The codes are shown in the table. The control board will lock out the compressor for five minutes when a fault occurs. The control board will then restart the compressor if the fault is no longer present. Should a second fault condition occur within a 60 minute period the control board will go into permanent lockout mode and energize the ALR pin. The LED will flash the fault code until the control board is reset by powering down the unit.

The board has a **TEST** jumper, which defeats the 5 minute anti-short cycle timer for test purposes. If left in the TEST position, it will time out and return to normal operation after a set time period. This is to prevent compressor short cycling and possible damage or shortened lifespan if the jumper is accidentally left in the TEST position.

There are also **FREEZE TEMP** and **WATER TEMP** jumper selectors with various temperatures listed. **These temperature selectors are not used and have no effect on heat pump operation.**

TABLE 9 - Control Board Fault Codes		
Fault	LED Flashes	Comment
High Pressure	1	
Low Pressure	2	
Brownout	5	
Flow Switch (on WATER board input)	6	Present on indoor loop only.




WARNING: If the control board enters permanent lockout mode there is a serious problem with the system and it must be rectified.

REPEATED RESETS OF A LOW PRESSURE OR FLOW SWITCH LOCKOUT COULD CAUSE A HEAT EXCHANGER TO FREEZE AND RUPTURE, DESTROYING THE HEAT PUMP AND VOIDING THE WARRANTY.

Typical Auxiliary Heat & Circulator Wiring w/ Internal Aquastat

HEAT PUMP ELECTRICAL BOX

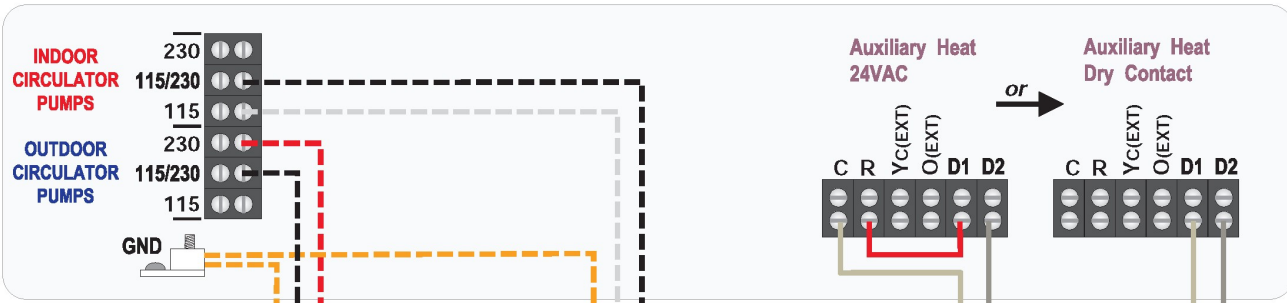

14-2 BX CABLE



OUTDOOR LOOP CIRCULATOR PUMP

NOTE: Verify the line voltage of the circulator(s) and connect to appropriate voltage connections of terminal strip.

14-2 BX CABLE




INDOOR LOOP CIRCULATOR PUMP

NOTE: Verify the line voltage of the circulator and connect to appropriate voltage connections of terminal strip.

18-2 CABLE

18-2 CABLE


NOTE: Verify the line voltage of the electric tank elements and that the appropriate wire size and breaker are used.

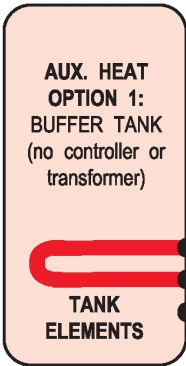


**AUX. HEAT OPTION 1:
BUFFER TANK
(no controller or transformer)**

TANK ELEMENTS

EXTERNAL ELECTRICAL BOX

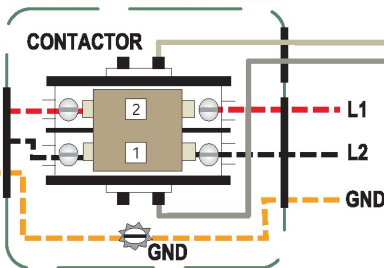

NOTE: Set tank controller or thermostat so that elements will come on only when a contact is made between E-E.

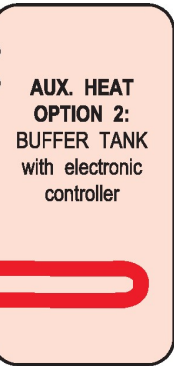

**AUX. HEAT OPTION 2:
BUFFER TANK
with electronic controller**

					Drawn By Dan Rheault	Date 24-Mar-2021	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
					Checked By Dan Rheault	Date 24-Mar-2021				
02	000317	Dan Rheault	Dan Rheault	4-Aug-2023	Approved By (ENG)	Date	Drawing Name Typical Auxiliary Heat & Circulator Wiring w/ Internal Aquastat			
01	Initial Release	Dan Rheault	Dan Rheault	24-Mar-2021	Approved By (MFG)	Date	Size A	Drawing Number 002508CDG	Drawing Rev 02	Sheet 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				



AltSource Tanks: Getting Started


A full product manual from Thermo2000 is included with the AltSource tank.

This sheet describes how to set the tank to work in conjunction with **NORDIC** heat pumps that are equipped with **D1-D2** terminals. (Some **W-series** models do not have **D1-D2** terminals; in this case the tank can instead be set up run under its own control with a setpoint lower than that of the heat pump.)


1. Put the tank in “Bi-Energy” rather than “Electric” mode, with switch on back of controller.

2. Set the tank to “joist heat” mode by holding the **wrench** button to display the °F/°C setting, press again to go to heating types, then toggle to second setting which is a picture of joists. Press wrench button three more times to exit.

(This doesn’t mean that joist heating is being done in the building, it just sets a high temperature limit that works well with R410a heat pumps.)

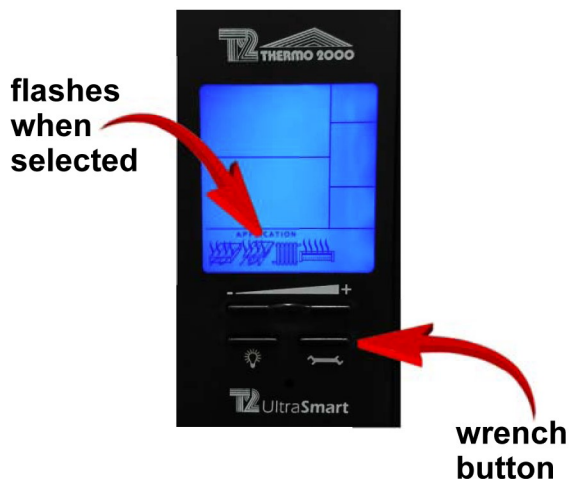

3. Connect tank terminals **R** and **W** with a wire jumper.

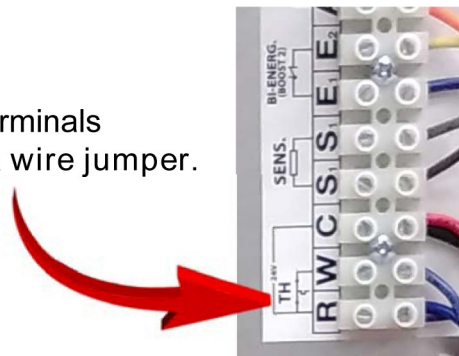


With **R** and **W** connected, a default temperature set-point of **125°F** corresponding to “joist heat” will appear. This is fine for a high limit.



4. Now the tank elements will only be activated by a connection between the **E-E** tank terminals, up to the 125°F maximum. This will be done by the **D1-D2** terminals in the heat pump, activating the elements only when **stage 3** or **AUX** heat is required.

See heat pump manual for further explanation.

Typical Zone and Auxiliary Wiring With GEN2 Setpoint Control (Heating Only)

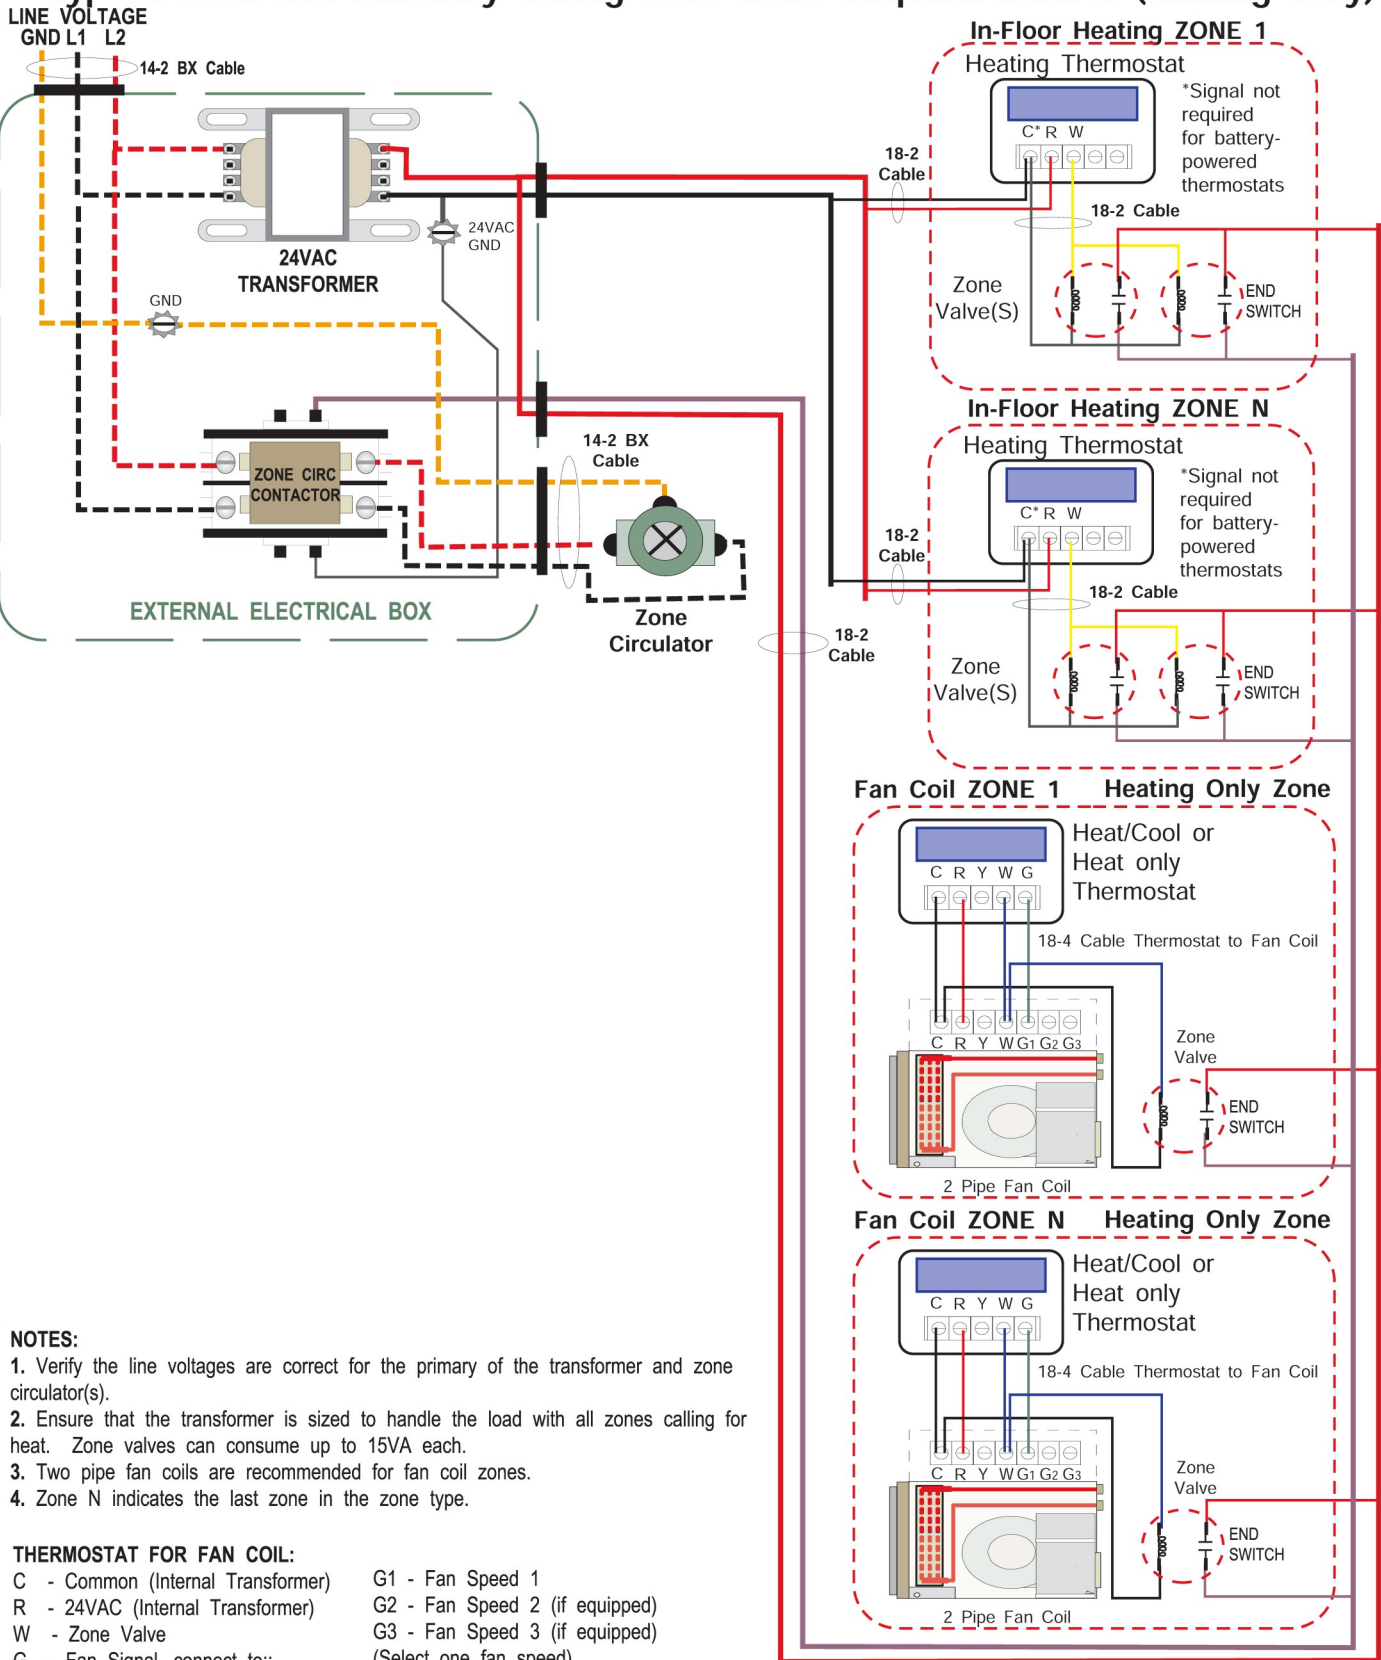

NOTES:

1. Verify the line voltages are correct for the primary of the transformer and zone circulator(s).
2. Ensure that the transformer is sized to handle the load with all zones calling for heat. Zone valves can consume up to 15VA each.
3. Two pipe fan coils are recommended for fan coil zones.
4. Zone N indicates the last zone in the zone type.

THERMOSTAT FOR FAN COIL:

- | | |
|-----------------------------------|--------------------------------|
| C - Common (Internal Transformer) | G1 - Fan Speed 1 |
| R - 24VAC (Internal Transformer) | G2 - Fan Speed 2 (if equipped) |
| W - Zone Valve | G3 - Fan Speed 3 (if equipped) |
| G - Fan Signal, connect to:: | (Select one fan speed) |

				Drawn By C. Geddes	Date 04-APR-2016	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4		
				Checked By C. Geddes	Date 04-APR-2016					
02	000253	D. RHEAULT	D. RHEAULT	Approved By C. Geddes	(ENG)	Date 04-APR-2016	Drawing Name Typical Zone and Auxiliary Wiring With GEN2 Setpoint Control (Heating Only)			
01	Initial Release	C. GEDDES	C. GEDDES	Approved By	(MFG)	Date	Size A	Drawing Number 002067CDG	Drawing Rev 02	Sheet 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Typical Control & Zone Wiring w/Internal Aquastat (Heating & Cooling, Automatic Switchover)

NOTES:


1. Verify the line voltages are correct for the primary of the transformer and zone circulator(s).
2. Ensure that the transformer is sized to handle the load with all zones calling for heat. Zone valves consume up to 15VA each.
3. Any fan coil that might call for heat when heat pump is in cooling mode must have its own BREAK HEAT RELAY installed, like that shown for the in-floor heating zone.

THERMOSTAT FOR FAN COIL:

C - Common (Internal Transformer) G1 - Fan Speed 1
 R - 24VAC (Internal Transformer) G2 - Fan Speed 2 (if equipped)
 W - Zone Valve G3 - Fan Speed 3 (if equipped)
 G - Fan Signal, connect to: (Select one fan speed)

IMPORTANT NOTE:

Zone thermostats must send an "O" signal continuously while set to cooling mode, to avoid repeated heating and cooling of buffer tank on cooling mode demand cycling.

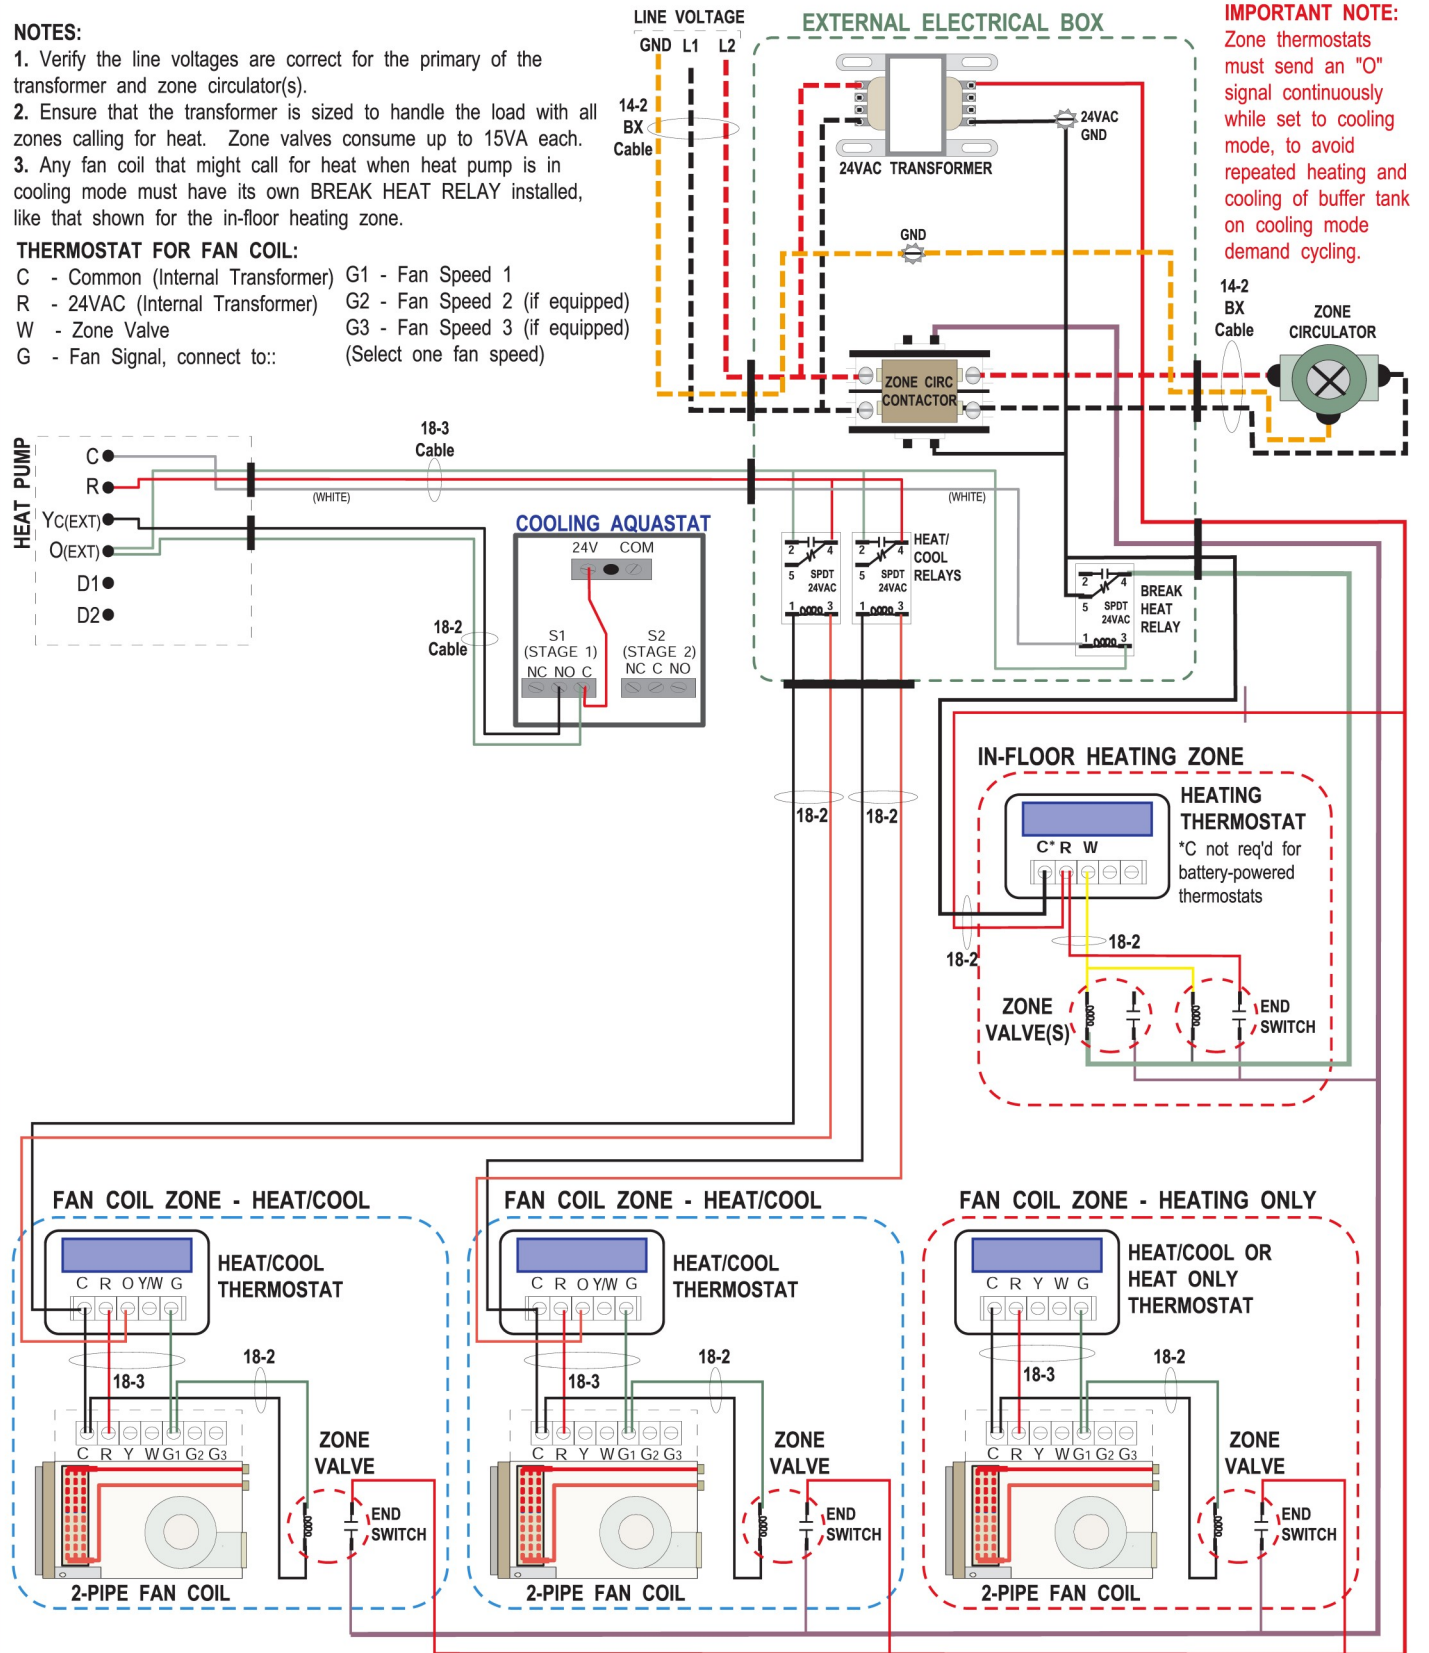

				Drawn By Dan Rheault	Date 24-Mar-2021	MARITIME GEOTHERMAL LTD.	170 Plantation Rd.
				Checked By Dan Rheault	Date 24-Mar-2021		Petitcodiac, NB E4Z 6H4
				Approved By (ENG)	Date	Drawing Name	Typical Control and Zone Wiring
				Approved By (MFG)	Date	w/Internal Aquastat (Heating & Cooling, Auto Switchover)	
01	Initial Release	D. RHEAULT	D. RHEAULT	24-Mar-2021	Size	Drawing Number	Drawing Rev
REV	ECO #	IMPL BY	APVD BY	DATE	A	002509CDG	01
							Sheet
							1 of 1

Piping

Indoor Loop

The connections for the Indoor Loop circuit are 3/4" brass female NPT. They are labelled as INDOOR IN and INDOOR OUT.

Use of a buffer tank is highly recommended, in order to maintain control over water temperature, and to avoid safety control tripping problems associated with mismatching of heat pump output and zone absorption. It is recommended that a buffer tank with electric elements be selected to provide auxiliary / backup heat.

Typical systems using 4 port and 2 port buffer tanks are shown in the following drawings. They show all of the recommended components as well as where they should be placed, whether using zone valves or zone pumps.

NOTE: It is recommended that the water lines between the heat pump and the buffer tank be copper or other high temperature piping.

NOTE: Care should be taken when routing the water lines to ensure that adequate access to the heat pump is maintained so as to not compromise serviceability.




The *minimum* buffer tank size should follow the rule of 8 US gallons per ton of heat pump capacity. The following table shows the minimum buffer tank size for each heat pump along with the recommended size. The recommended size will minimize the number of starts per hour and provide longer runtimes for improved efficiency.

TABLE 10 - Buffer Tank Size		
Heat Pump Size	Minimum Size gal (L)	Recommended Size gal (L)
12-15	10 (40)	30 (115)
18	12 (45)	30 (115)
If a tank size is not available, use the next size larger tank.		

Outdoor Loop

The connections for the Outdoor Loop circuit are 3/4" brass female NPT. They are labelled as OUTDOOR IN and OUTDOOR OUT.

See the following chapters for details on ground loop and open loop installations.

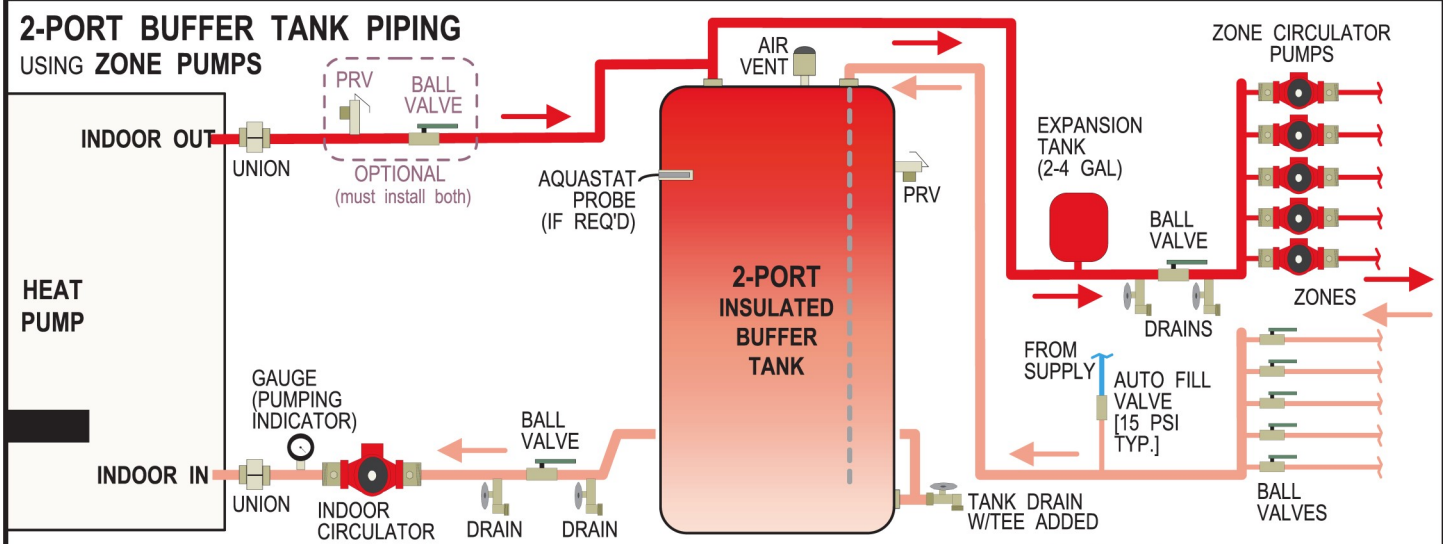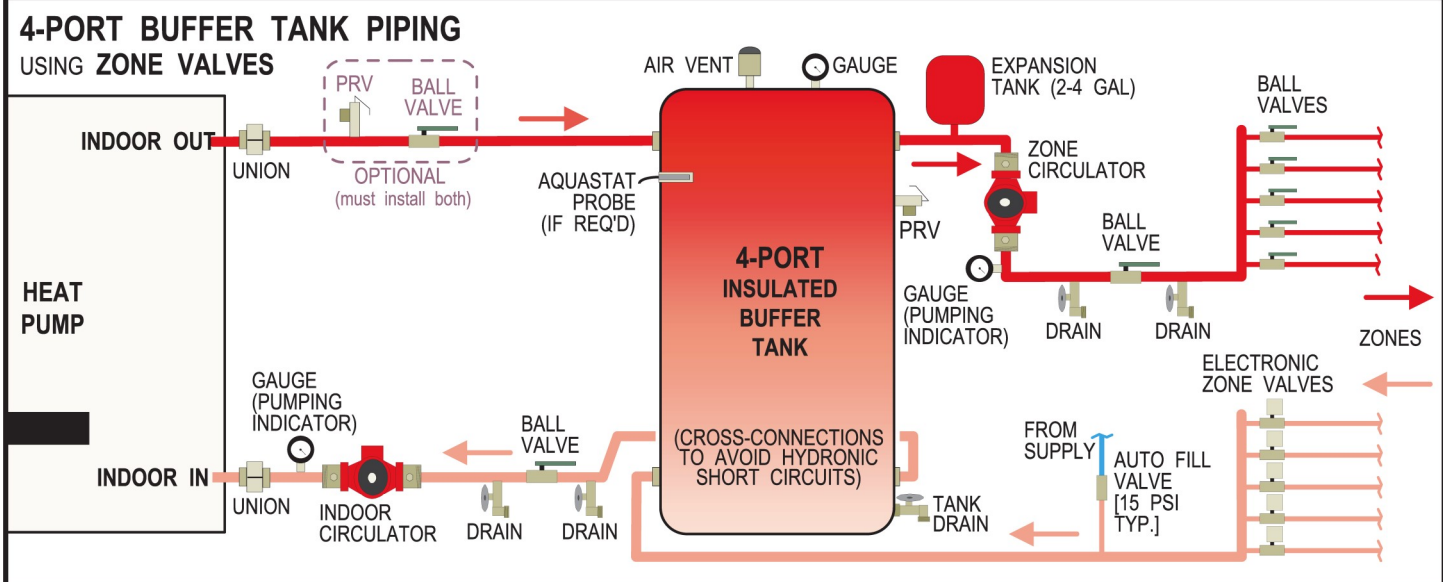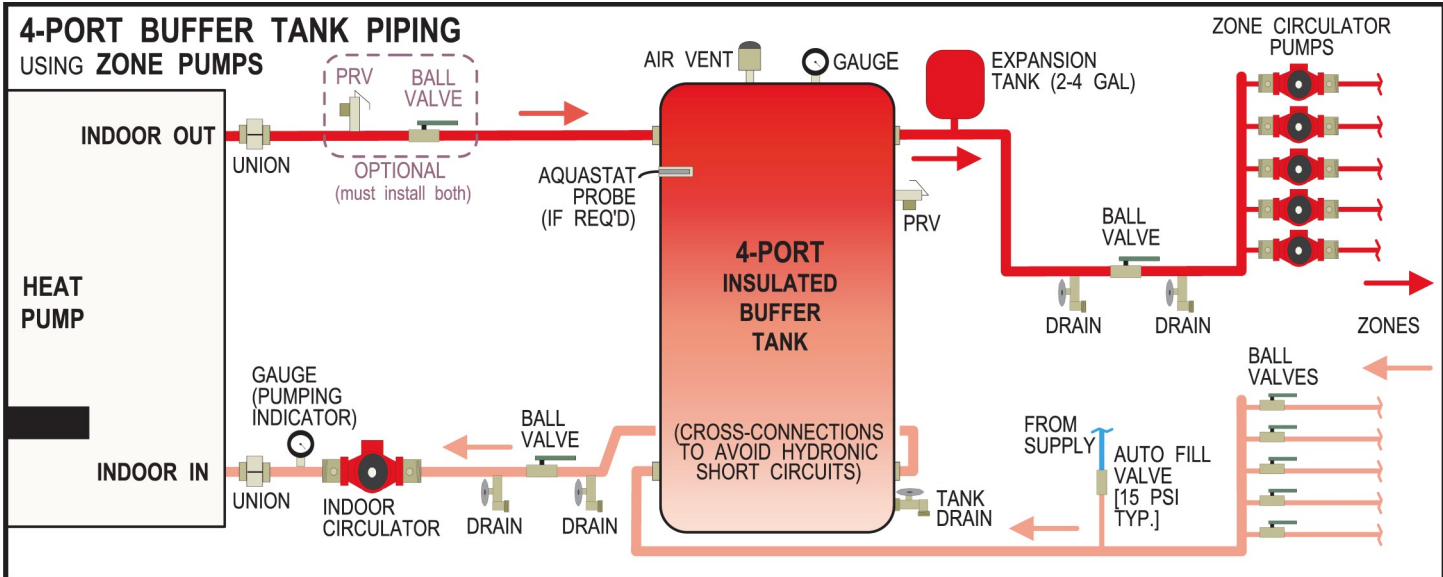


				Drawn By Dan Rheault	Date 14-Dec-2018	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
				Checked By Dan Rheault	Date 14-Dec-2018	
02	(add fill valve)	D. RHEAULT	D. RHEAULT	Approved By (ENG)	Date 1-Feb-2021	Drawing Name Recommended Hydronic Buffer Tank Piping
01	Initial Release	D. RHEAULT	D. RHEAULT	Approved By (MFG)	Date 14-Dec-2018	Size A
REV	ECO #	IMPL BY	APVD BY	DATE	DATE	Drawing Number 002366PDG
						REV 02
						SHEET 1 of 1

Auxiliary Boiler Piping

NOTE: CHECK VALVES SHOULD BE SPRING TYPE, OTHERWISE UNINTENDED FLOW MAY OCCUR. SIZE CIRCULATORS INCLUDING PRESSURE DROP THROUGH SPRING CHECK VALVES.

SYSTEM WITH 4-PORT TANK & ZONE PUMPS SHOWN; SEE DIAGRAM 002366PDG FOR SYSTEM USING 2-PORT TANK OR ZONE VALVES.

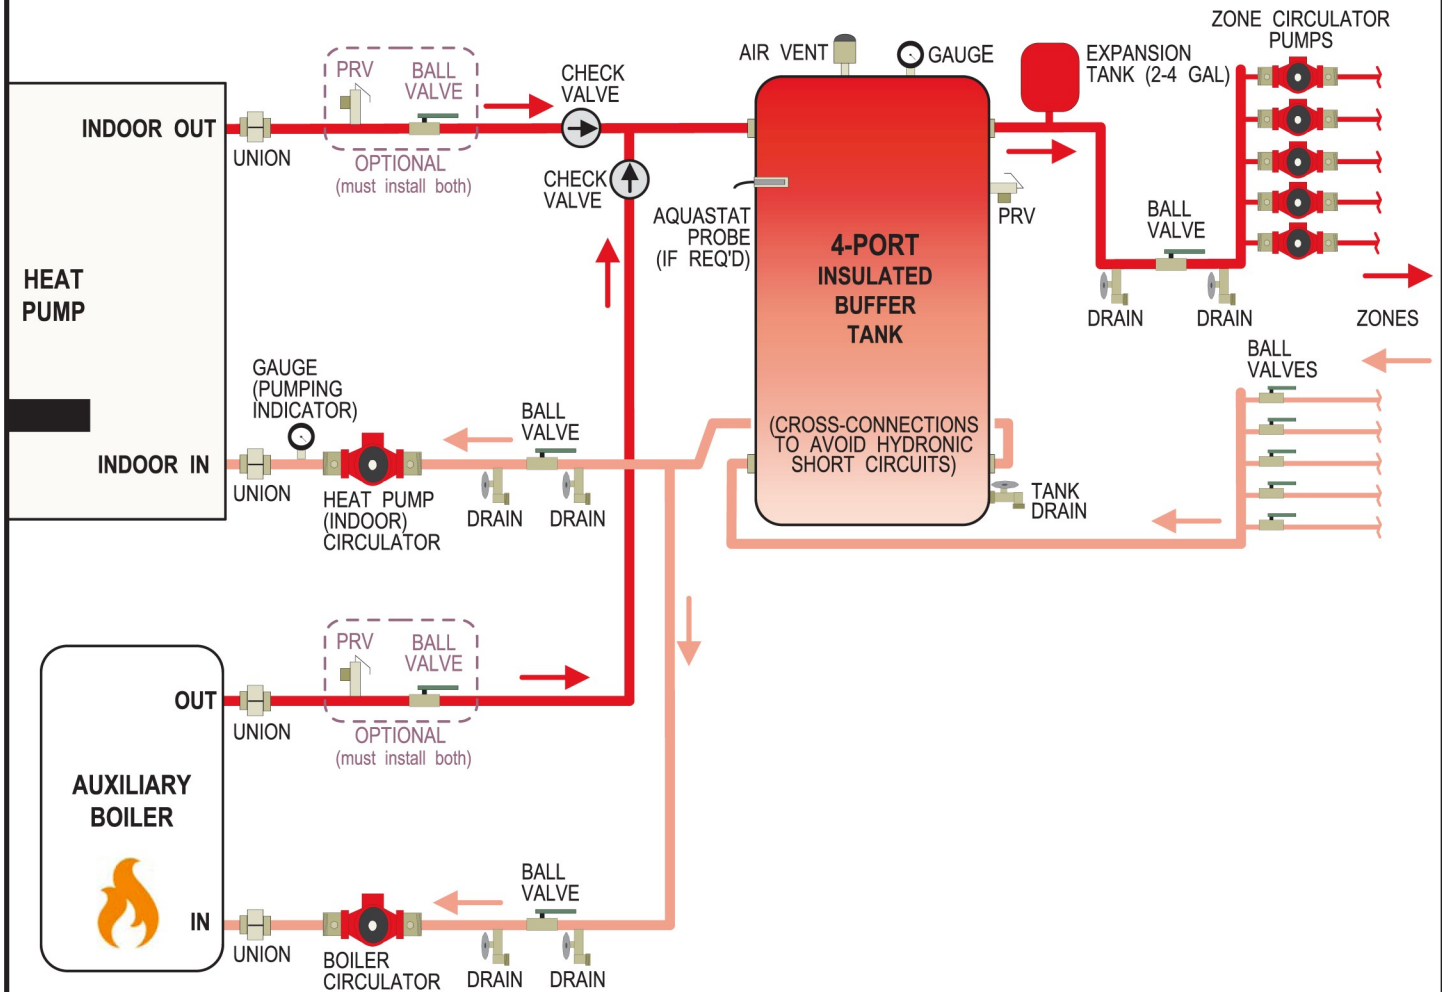


USING THIS PARALLEL ARRANGEMENT, BOILER MAY OPERATE ALONE (TO PROVIDE BACKUP HEAT) OR IN CONJUNCTION WITH HEAT PUMP (TO PROVIDE AUXILIARY HEAT).

BOILER MUST BE CONTROLLED AS 3RD STAGE OF HEAT BY HEAT PUMP CONTROL BOARD OR EXTERNAL CONTROLLER. BOILER MAY THEN OPERATE AT A HIGHER OUTPUT TEMPERATURE THAN HEAT PUMP WITHOUT CAUSING HIGH TEMPERATURE/HIGH PRESSURE PROBLEMS AT THE HEAT PUMP.

				Drawn By Dan Rheault	Date 14-Dec-2018	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4				
				Checked By Dan Rheault	Date 14-Dec-2018					
				Approved By (ENG)	Date	Drawing Name Auxiliary Boiler Piping				
				Approved By (MFG)	Date					
01	Initial Release	D. RHEAULT	D. RHEAULT	14-Dec-2018	Approved By	Date	Size A	Drawing Number 002367PDG	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Two Tank System Piping with a Reversing Heat Pump


HEATING MODE

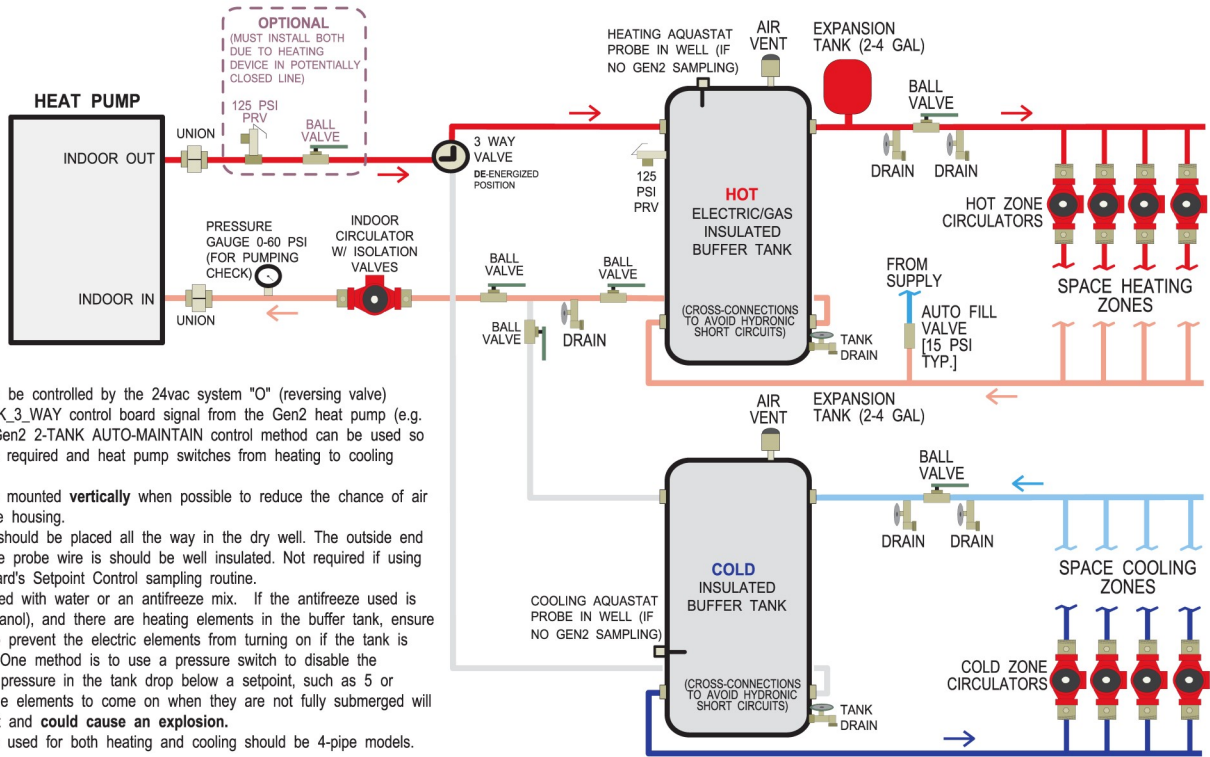

NOTES:

1. The 3-way valve can be controlled by the 24vac system "O" (reversing valve) signal, or TWO_TANK_3_WAY control board signal from the Gen2 heat pump (e.g. ATW-Series). The Gen2 2-TANK AUTO-MAINTAIN control method can be used so that no "O" signal is required and heat pump switches from heating to cooling automatically.
2. Circulators should be mounted **vertically** when possible to reduce the chance of air getting trapped in the housing.
3. The aquastat probe should be placed all the way in the dry well. The outside end of the well where the probe wire is should be well insulated. Not required if using the Gen2 control board's Setpoint Control sampling routine.
4. The loop may be filled with water or an antifreeze mix. If the antifreeze used is flammable (e.g. methanol), and there are heating elements in the buffer tank, ensure there is a method to prevent the electric elements from turning on if the tank is not completely full. One method is to use a pressure switch to disable the elements should the pressure in the tank drop below a setpoint, such as 5 or 10PSIG. Allowing the elements to come on when they are not fully submerged will burn the element out and **could cause an explosion**.
5. Hydronic air handlers used for both heating and cooling should be 4-pipe models.

COOLING MODE

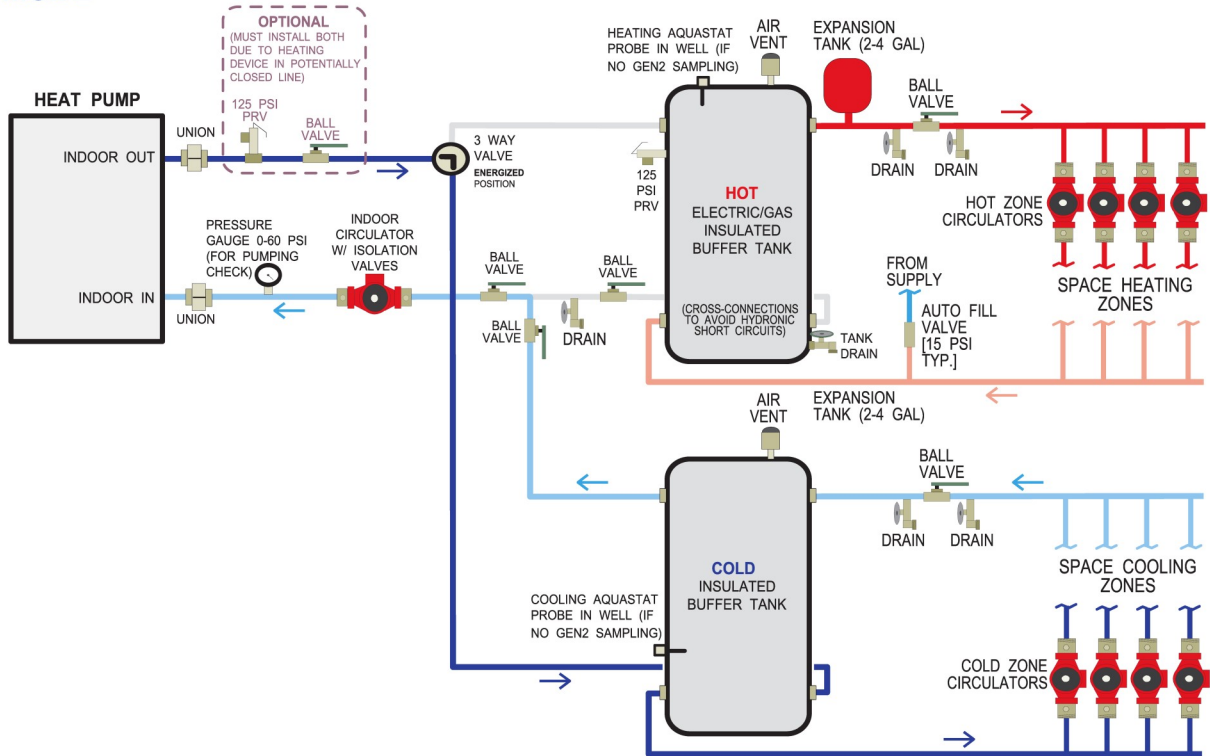

					Drawn By Dan Rheault	Date 25-Oct-2017	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
02	-	D. RHEAULT	D. RHEAULT	6-Aug-2021	Checked By Dan Rheault	Date 25-Oct-2017	
02	-	D. RHEAULT	D. RHEAULT	1-Mar-2018	Approved By Dan Rheault	(ENG) Date 25-Oct-2017	Drawing Name Two Tank System Piping with a Reversing Heat Pump
01	Initial Release	D. RHEAULT	D. RHEAULT	25-Oct-2017	Approved By (MFG) Date		
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A
							Drawing Number 002252PDG
							REV 03
							SHEET 1 of 1

Two Tank Simultaneous Heating / Cooling


Non-reversing water-to-water heat pumps move heat from cold tank to hot tank. Simultaneous loads with use both sides of heat pumps, effectively doubling the COP.

Heat pump(s) are activated when cold tank temperature exceeds setpoint, or when hot tank temperature falls below setpoint.

When heating and cooling loads are not balanced, the hot tank will get too hot (when building cooling load is greater), or the cold tank will get too cold (when building heat load is greater). When this happens, controller will move the 3-way valve to direct flow through that tank and start the appropriate ground loop pump. Ground loop fluid will be circulated through the tank to bring its temperature back into range.




Note that ground loop fluid (with antifreeze) is present everywhere in this system, since there is not the separation between hot and cold sides that exists with a reversing system.

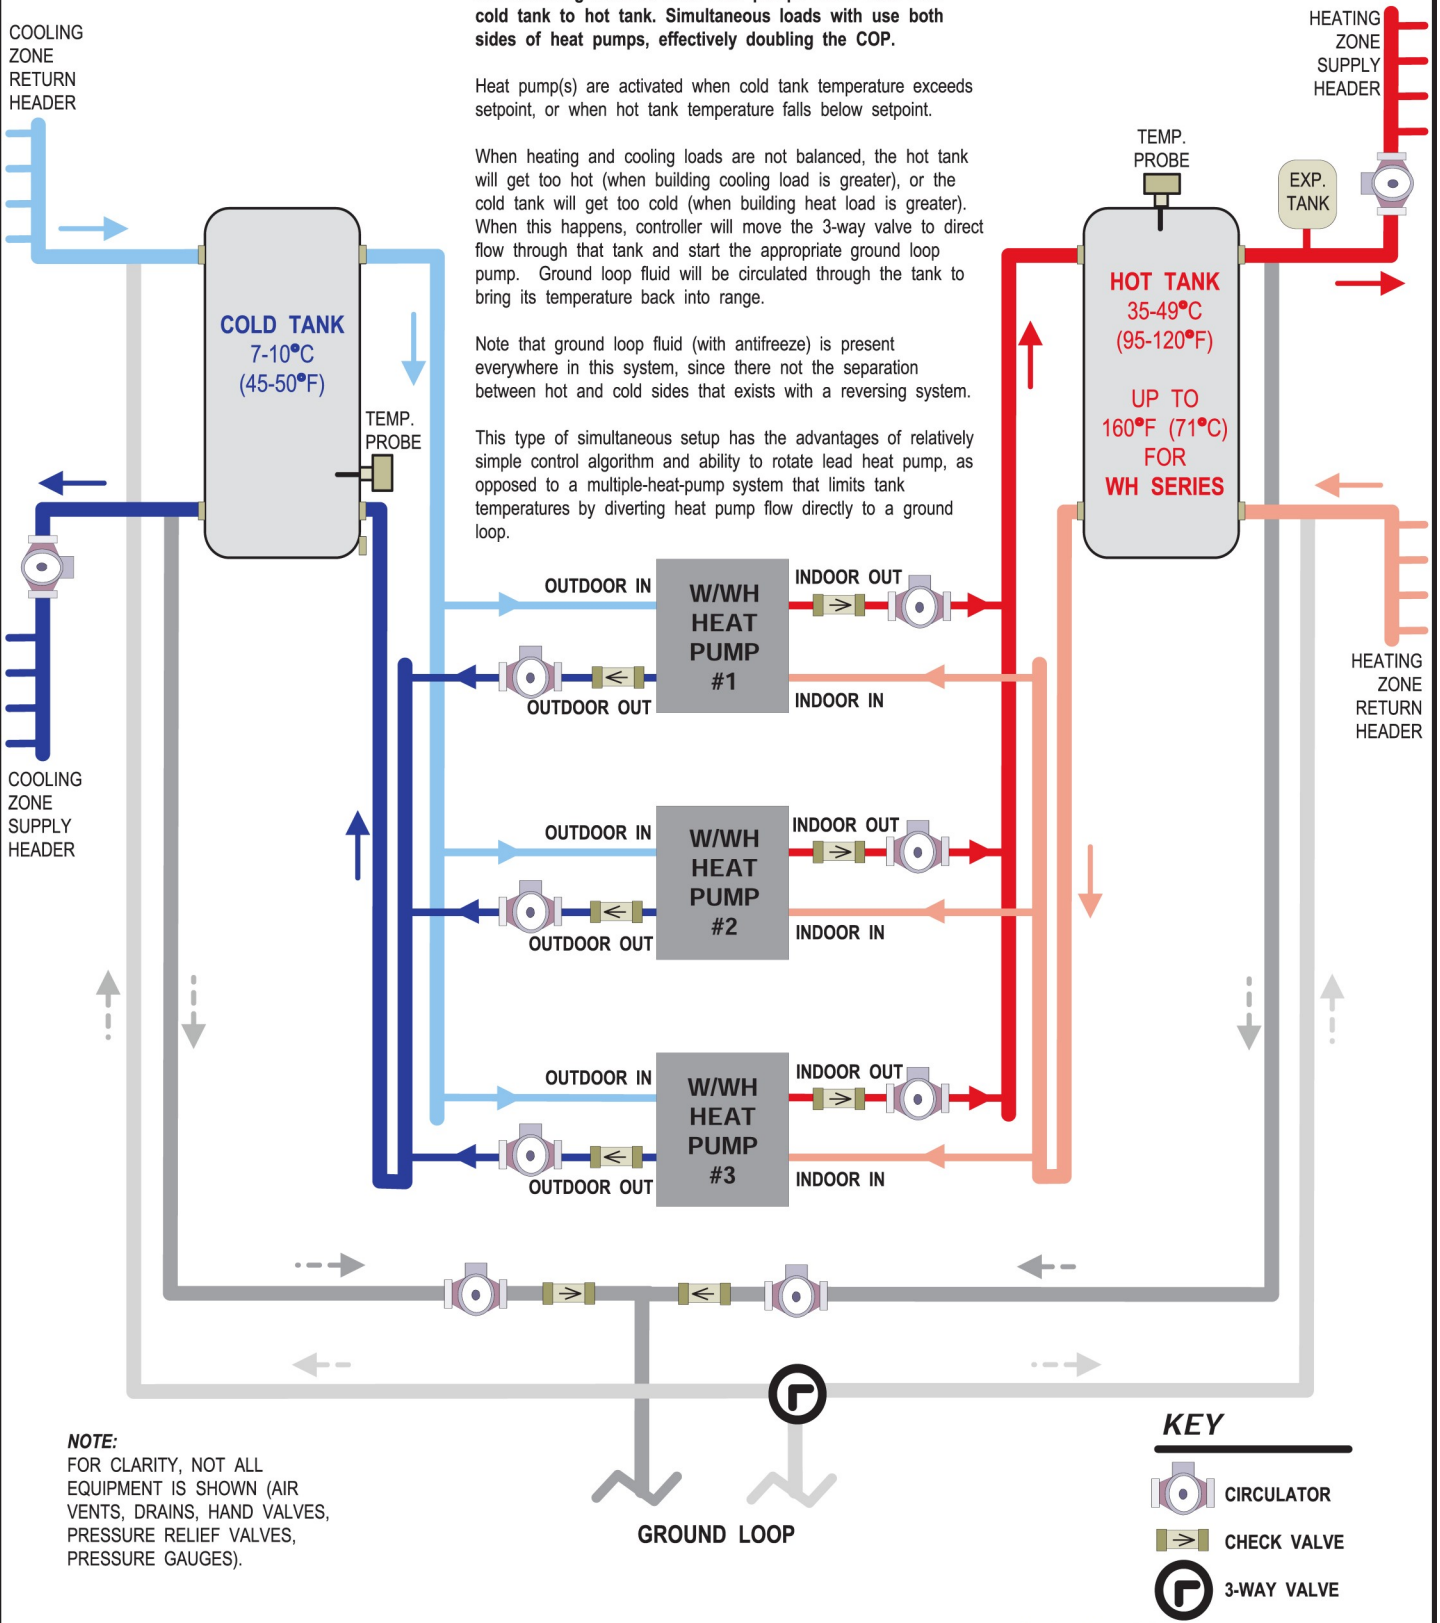This type of simultaneous setup has the advantages of relatively simple control algorithm and ability to rotate lead heat pump, as opposed to a multiple-heat-pump system that limits tank temperatures by diverting heat pump flow directly to a ground loop.




NOTE:
FOR CLARITY, NOT ALL EQUIPMENT IS SHOWN (AIR VENTS, DRAINS, HAND VALVES, PRESSURE RELIEF VALVES, PRESSURE GAUGES).

KEY

-  CIRCULATOR
-  CHECK VALVE
-  3-WAY VALVE

				Drawn By Dan Rheault	Date 2-Mar-2018	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
				Checked By Dan Rheault	Date 2-Mar-2018				
				Approved By (ENG)	Date	Drawing Name Two Tank Simultaneous Heating / Cooling			
				Approved By (MFG)	Date	Size A	Drawing Number 002288PDG	REV 01	SHEET 1 of 1
01	Initial Release	D. RHEAULT	D. RHEAULT	2-Mar-2018	Approved By	Date			
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date			

Typical Zone Types for Hydronic Applications

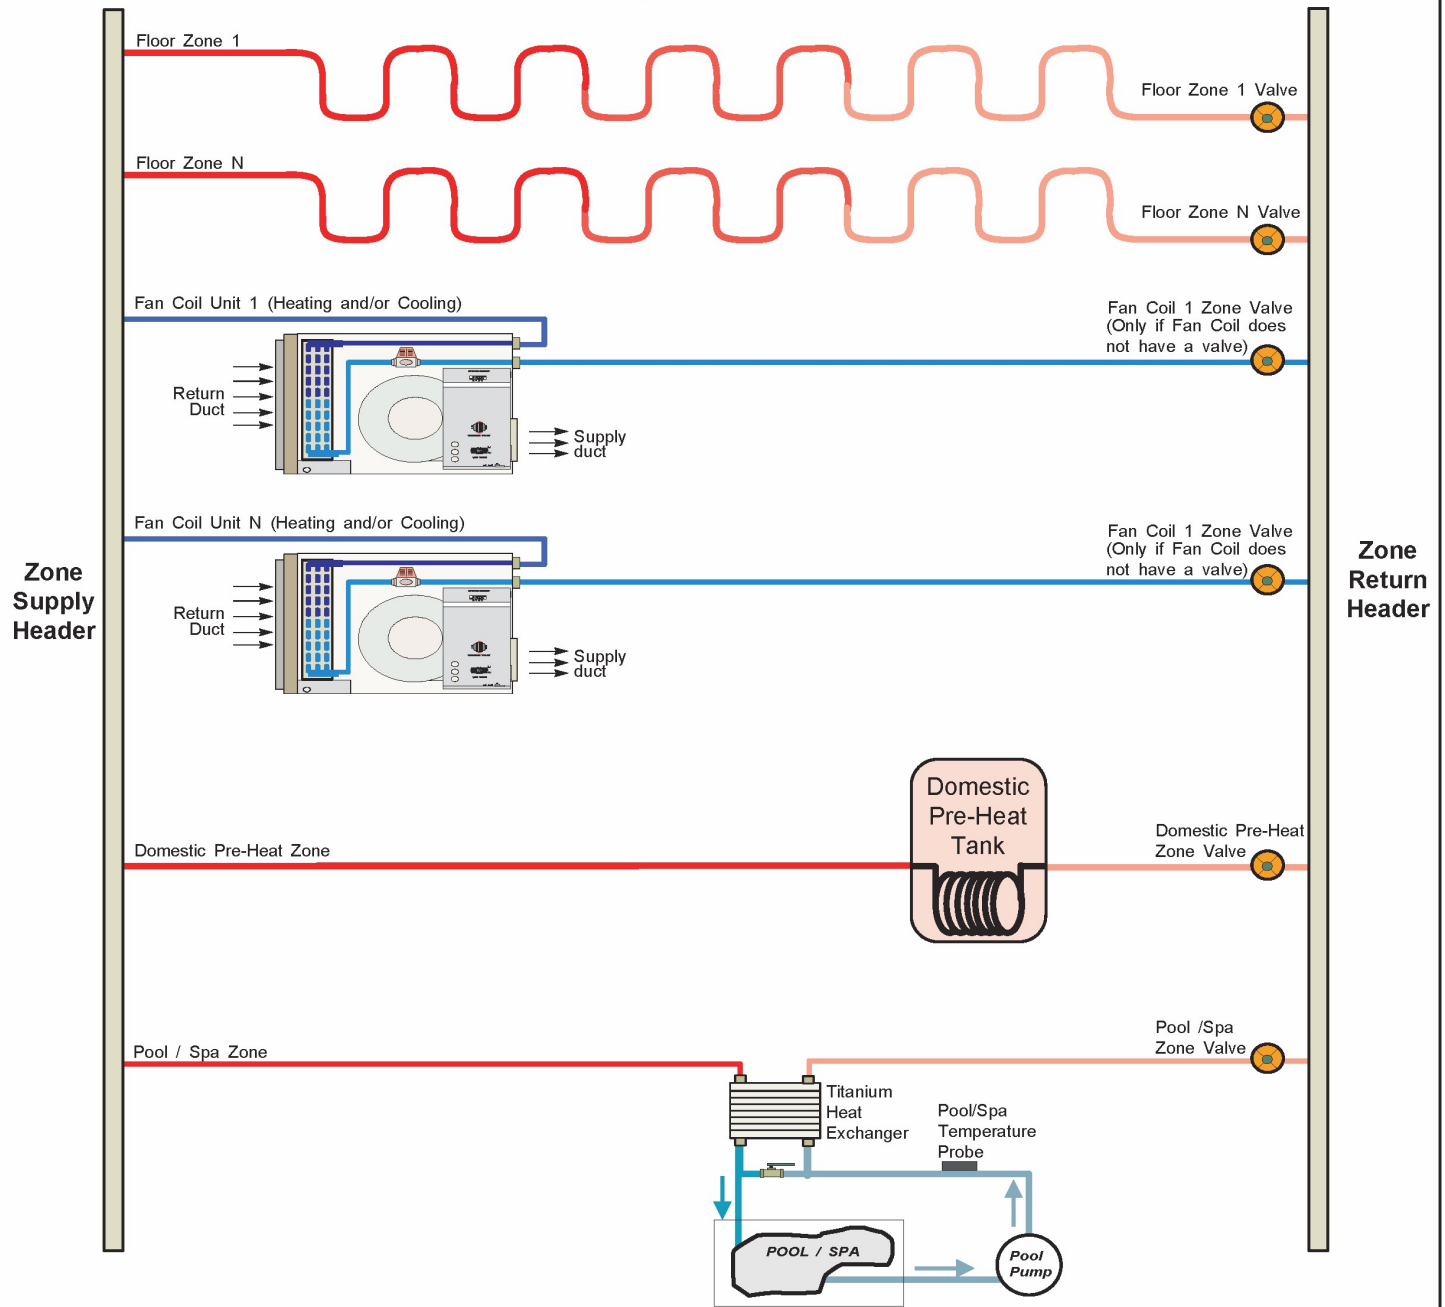

NOTES:

1. Floor zones are heating only. Cooling a floor zone will cause condensation in the floor. Floor zone valves should be wired through a relay that is controlled by the cooling signal (O) that breaks the signal when in cooling mode to ensure that they cannot accidentally be energized.
2. There may be multiple floor zones.
3. There may be multiple fan coil units, (heating and /or cooling). A zone valve is not required if the unit has a internal valve.
4. Domestic Pre-Heat Tank is for on-demand applications. The tank must have a heat exchanger in it or an external one must be used to separate the zone loop from the potable water supply.
5. Ensure the floor circulator is adequately sized to accomodate the type and number of zones connected to the system.
6. The pool aquastat will operate the Pool/Spa Zone Valve.

					Drawn By Chris Geddes	Date 06 SEP 07	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
					Checked By Chris Geddes	Date 06 SEP 07	
					Approved By Chris Geddes	(ENG) Date 06 SEP 07	Drawing Name
					Approved By (MFG)	Date	Typical Zone Types for Hydronic Applications
01	Initial Release	C. GEDDES	C. GEDDES	06 SEP 07	Approved By	Date	Size A
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Drawing Number 000530PDG
							REV 01
							SHEET 1 of 1

Ground Loop Installations

Refer to diagrams **000608INF** & **000609INF** at the end of this section for typical ground loop configurations. They are for reference only, and should not be used to replace formal training and computerized loop design.

Once the ground loop has been pressure tested and the header pipes have been connected to the circulator pump module, the heat pump can be connected to the circulator pump module. **The port connections for the Outdoor Loop are brass FPT fittings. They are marked as OUTDOOR IN and OUTDOOR OUT.**

Circulator Pump Module

Maritime Geothermal Ltd. offers compact pump modules with built in three way valves to facilitate filling and purging the ground loop. Refer to drawing **000906CDG** at the end of this section. Alternatively, Grundfoss Model UPS 26-99 or Taco Model 0011 pumps or other brands with similar pumping capability may be used. The single pump module will typically handle systems up to 3 tons (model sizes up to 45); the two pump module will typically handle 4 to 6 ton systems (model sizes 55, 65, 75, 80). This is based on a typical parallel system with one circuit per ton.

Maritime Geothermal recommends calculating the total pressure drop of the ground loop (including headers, indoor piping and heat pump exchanger drop) based on the antifreeze type and concentration at the desired minimum loop temperature. A pump module that can deliver the flow required for the unit at the calculated total pressure drop should be selected. Refer to the **Model Specific Information** section for unit flow requirements.

Loop pressure drops can be calculated using software such as those mentioned in the Horizontal Ground loops section, or can be calculated in a spreadsheet using the pipe manufacturer's pressure drop tables for pipe diameter and fittings.

The circulator pump module must be connected to the heat pump Outdoor Loop ports with a lineset suitable for the flow required with minimum pressure drop. 1" rubber or plastic lines should be used.

The installation of P/T plugs/ports (pressure / temperature, pronounced "Pete's plugs") is recommended on both the entering and leaving lines at the heat pump. This will allow the installer or homeowner to check water flow through the loop by measuring the pressure difference through the heat exchanger and comparing it to that listed in the **Model Specific Information** section. P/T ports, adapters, and gauge adapters are available as accessories from Maritime Geothermal Ltd..


Flushing & Purging

Once the groundloop has been installed and all connections are completed between the heat pump, circulator pump module and ground loop, the entire ground loop system should be **pressure tested with air to 100 PSIG** to make sure there are no leaks on any of the inside fittings. Soap all joints and observe that the pressure remains constant for 1 hour.

When satisfied that all connections are leak free, release the air pressure and connect a purge cart (see **Figure 1**) to the flushing access ports at the pump module (refer to drawing **000906CDG**). A temporary flushing system can alternately be constructed using a 45 gal. barrel and a pump with sufficient volume and head capability to circulate fluid at a **velocity of at least 2 ft./min.** through all parts of the loop.

Adjust the circulator pump module valves to connect the purge cart to the ground loop. Begin pumping water through the ground loop, ensuring that the intake of the pump stays submerged at all times by continuously adding water. Water flowing back from the return line should be directed below the water level in the barrel or flush tank to prevent air being mixed with the outgoing water.

Figure 1: Ground Loop Accessories & Tools

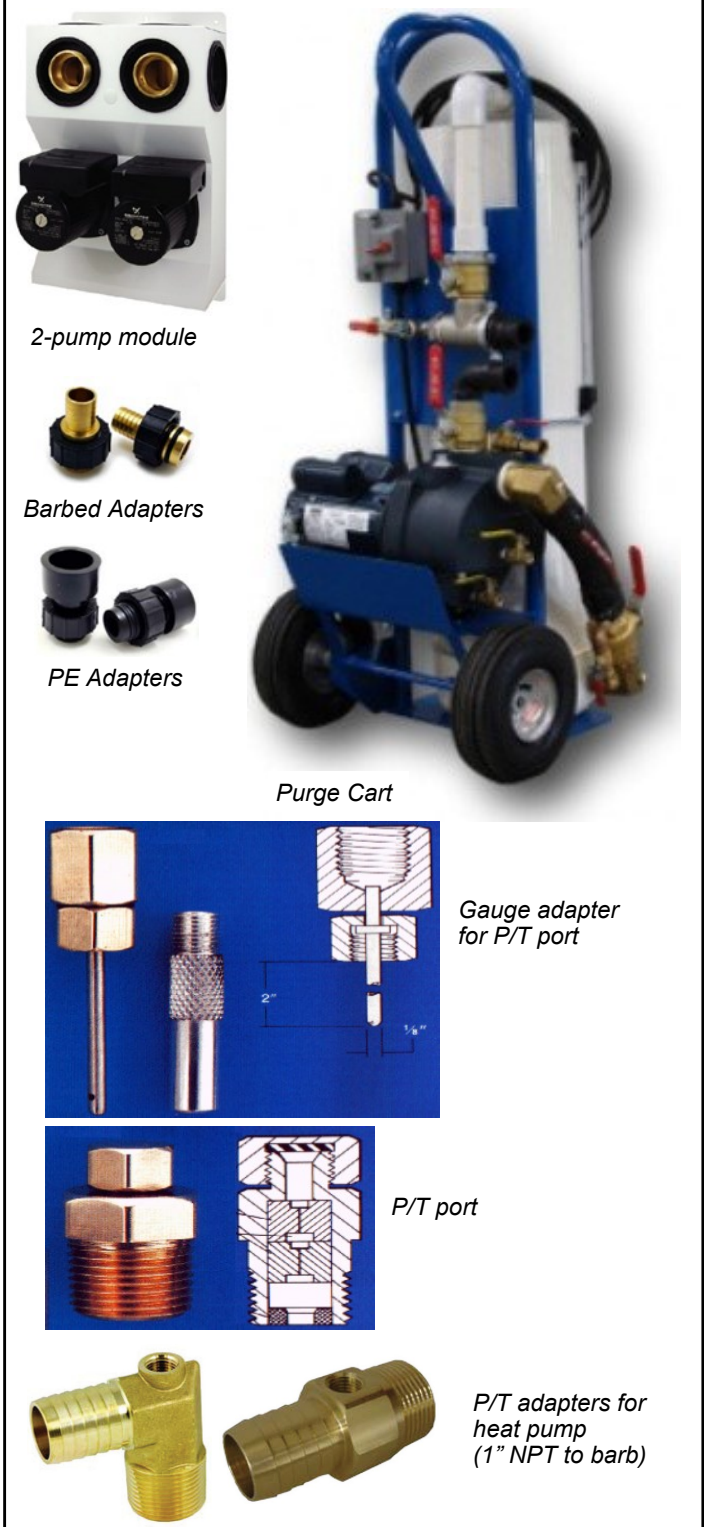

Once the lines have been filled and no more air bubbles are appearing in the line, adjust the circulator pump module valves to circulate water through the heat pump using the same technique as described above. When all air is removed reverse the flow of water through the lines by interchanging the flush cart lines and purge again. You will be able to visibly tell when all air is removed.

Adding Antifreeze Solution

In most mid and northern areas of the US and in all of Canada it is necessary to condition the loop fluid by the addition of some type of antifreeze solution so that it will not freeze during operation in the winter months. This antifreeze is required because the loop fluid will normally reach a low entering temperature of **28°F to 32°F (-2°C to 0°C)** and refrigerant temperatures inside the heat pump's heat exchanger may be as low as **20°F (11°C)** cooler. See table for details of freeze protection provided by different concentrations.

TABLE 11 - Antifreeze Percentages

BY VOLUME				
Protection to:	10°F	15°F	20°F	25°F
Methanol	25%	21%	16%	10%
Propylene Glycol	38%	30%	22%	15%
BY WEIGHT				
Protection to:	10°F	15°F	20°F	25°F
Methanol	16.8%	13.6%	10%	6.3%
Propylene Glycol	30%	23.5%	18.3%	12.9%



WARNING: Add enough antifreeze to allow for a temperature 20°F (11°C) lower than the expected lowest loop fluid temperature entering the heat pump. Insufficient antifreeze concentration could cause the heat exchanger to freeze and rupture, voiding the warranty.

Although many different antifreeze solutions have been employed in geothermal systems, the alcohols such as methanol or ethanol have the most desirable characteristics for groundloop applications. The overall heat transfer characteristics of these fluids remain high although care must be taken when handling pure alcohols since they are extremely flammable. Once mixed in a typical 25% by volume ratio with water the solution is not flammable. In situations where alcohols are not allowed as a loop fluid due to local regulations then propylene glycol is a non-toxic alternative which can be substituted. Propylene glycol should only be used in cases where alcohols are not permitted since the heat transfer characteristics are less desirable and it becomes more viscous at low temperatures, increasing pumping power.

The volume of fluid that the loop system holds can be closely estimated by totaling the number of ft. of each size pipe in the system and referencing table the for approximate volume per 100 ft.

When the volume of the loop has been calculated and the appropriate amount of antifreeze is ready for addition by referencing table; drain the equivalent amount of water from the flush cart or mixing barrel and replace it with the antifreeze.

TABLE 12 - Volume of fluid per 100 ft. of pipe

		Volume /100ft.		
Type of Pipe	Diameter	l.gal	gal	L
Copper	1"	3.4	4.1	15.5
	1-1/4"	5.3	6.4	24.2
	1-1/2"	7.7	9.2	34.8
Rubber Hose	1"	3.2	3.9	14.8
Polyethylene	3/4" IPS SDR11	2.3	2.8	10.6
	1" IPS SDR11	3.7	4.5	17.0
	1-1/4" IPS SDR11	6.7	8.0	30.3
	1-1/2" IPS SDR11	9.1	10.9	41.3
	2" IPS SDR11	15.0	18.0	68.1
Other Item Volumes				
Heat Exchanger	Average	1.2	1.5	5.7
Purge Cart Tank	See cart manual	TBD		

When using alcohols, be sure to inject below the water line to reduce initial volatility of the pure antifreeze. If the loop is large it may be necessary to refill the tank with antifreeze several times to get all the antifreeze into the loop. Pump the loop for 5 to 10 minutes longer to ensure the remaining fluid has been well mixed.

Initial Pressurization

At this point open all valves in the flow circuit and slowly close off the supply and return flush cart valves in a manner that leaves about **20-30 psig** on the system. If an air bladder expansion tank is used it should be charged to the above pressure before actual water pressure is put on the system. Systems without an expansion tank will experience greater fluctuations in pressure between the heating and cooling seasons, causing pressure gauges to have different values as the loop temperature changes. This fluctuation is normal since expansion and contraction of the loop fluid must be handled by the elasticity of the plastic loop.


- Pressurize the loop to a static pressure of **45 psig**. when installing a system in the fall going into the heating season.
- Pressurize the loop to a static pressure of **25 psig**. when installing a system in the spring or summer going into the cooling season.

After operating the heat pump for a period of time, any residual air in the system should be bled off and the static pressure should be verified and adjusted if necessary. Add additional water / antifreeze mix with the purge cart to bring the pressure back to the original setting if required.


Pipe Insulation

All ground loop piping inside the structure (between the structure entry point and the heat pump) should be insulated with 3/8" thick closed cell pipe insulation to prevent condensation and dripping onto floors or walls.


TYPICAL HORIZONTAL GROUND LOOP CONFIGURATION

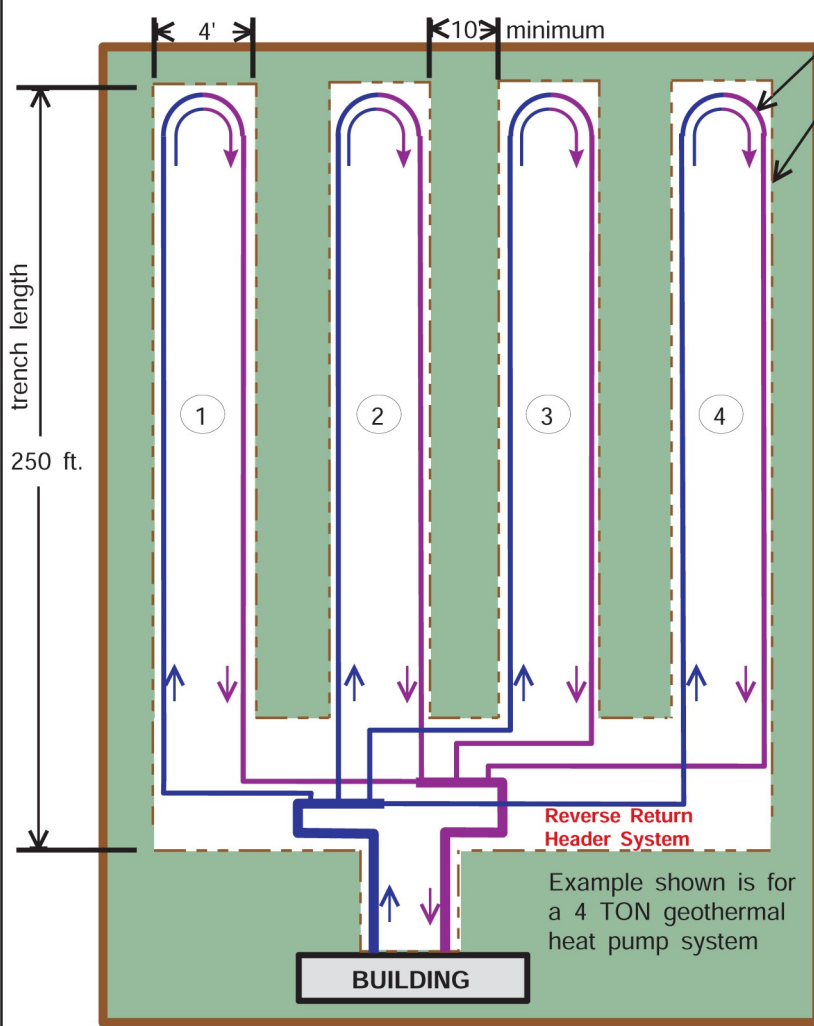

- Type PE 3408 Pipe
- Excavated trenches minimum 4' wide x 6' deep
- Trenches will be backfilled with material which will maximize the thermal conductivity of the adjacent earth.
- Each loop consists of 500ft. of 3/4" type 3408 PE 160 psig (SDR 11) geothermal heat pump polyethylene tubing.
- Each trench is 250ft. beginning from the header. This allows one 500ft. roll of pipe to be used with only two fusion connections (one at each header).
- Allow a minimum of 10 ft. between each trench and preferably 15 - 20 ft. if space is available.
- Insulate all tubing within 12ft. of the structure with 1/2" thick closed cell armaxflex insulation.
- Piping that is laid in a header trench should be insulated to a point where each loop branches to it's individual trench.
- The loop with the most pipe in the header trench could be left uninsulated to pick up heat from the header trench as long as the header trench is more than 12' out from the building.
- Reverse return headers minimize flow imbalances between loops.

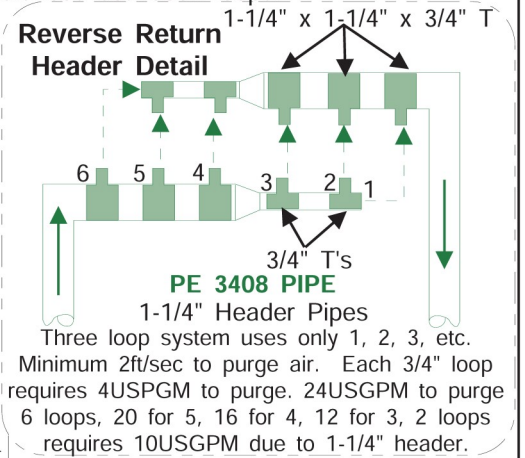

Elevation View of Trench

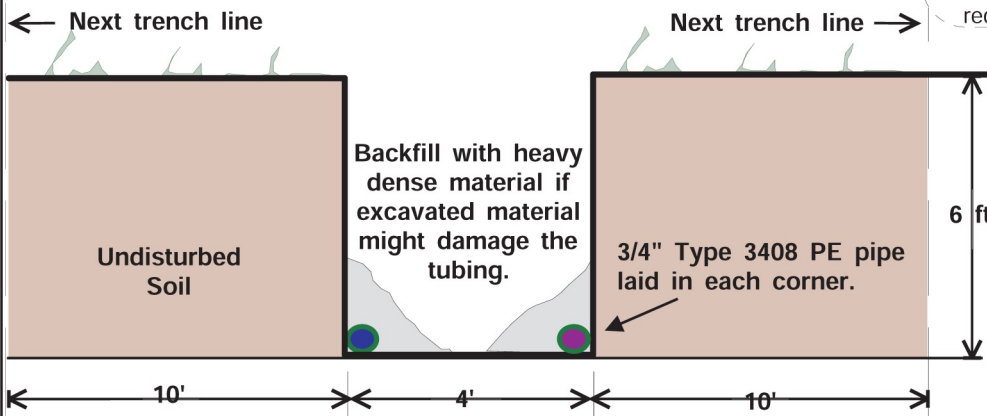


- Hand backfilling in the area just over the plastic pipe is recommended to prevent crushing or pinching of the pipe during backfilling operations.
- Horizontal style pipe runs should be placed 6' deep x minimum of 48" wide trench as shown above, with a minimum of 10ft. between trenches


				Drawn By Chris Geddes	Date 17 JAN 08	MARITIME GEOTHERMAL LTD.		170 Plantation Rd. Petitcodiac, NB E4Z 6H4	
				Checked By Chris Geddes	Date 17 JAN 08				
				Approved By Chris Geddes (ENG)	Date 17 JAN 08	Drawing Name			
				Approved By (MFG)	Date	Typical Horizontal Ground Loop Configuration			
01	Initial Release	C. GEDDES	C. GEDDES	17 JAN 08	Size	Drawing Number		REV	SHEET
REV	ECO #	IMPL BY	APVD BY	DATE	A	000608INF		01	1 of 1

TYPICAL VERTICAL GROUND LOOP CONFIGURATION


Vertical Layout Example 1

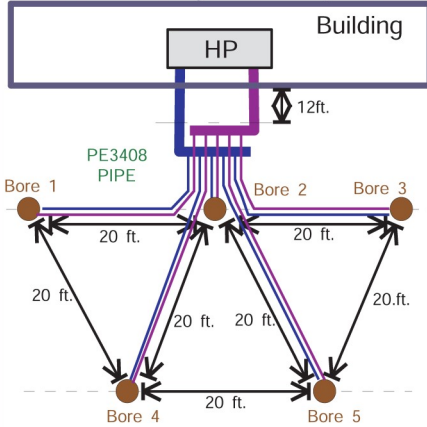


Vertical Layout Example 2

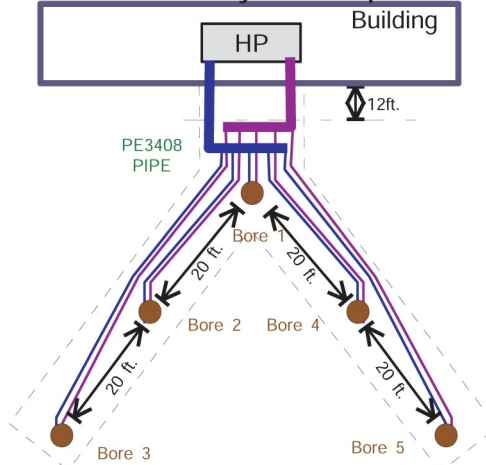

**Angled Vertical Layout Example 1
(can be vertical layout with 20ft spacing)**

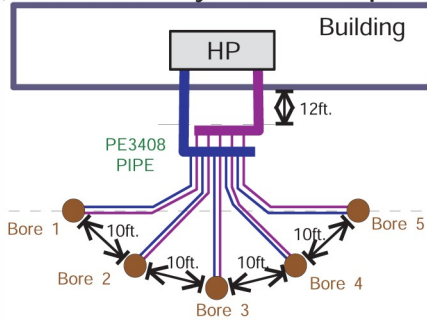


Reverse Return Header Detail

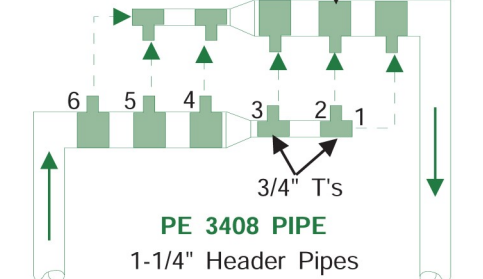

Three loop system uses only 1, 2, 3, etc. Minimum 2ft/sec to purge air. Each 3/4" loop requires 4USGPM to purge. 24USGPM to purge 6 loops, 20 for 5, 16 for 4, 12 for 3, 2 loops requires 10USGPM due to 1-1/4" header.

Borehole Detail

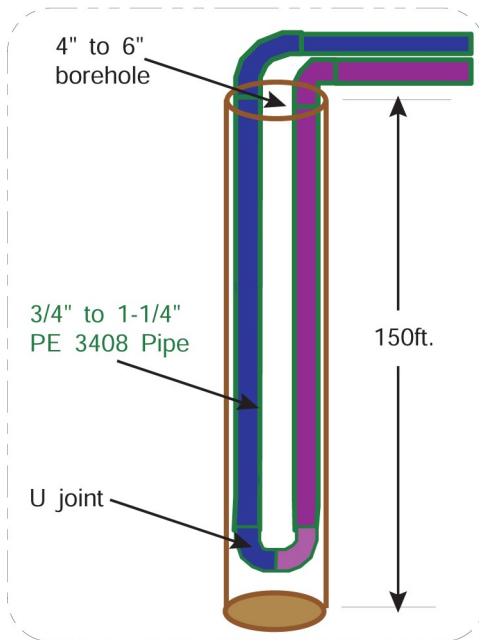


- Examples shown are for a 5 TON geothermal heat pump system
- **Type PE 3408 Pipe**
- Excavated trenches to boreholes minimum 4' wide x 6' deep
- Trenches should be backfilled with material which will maximize the thermal conductivity of the adjacent earth.
- Hand backfilling in the area just over the plastic pipe is recommended to prevent crushing or pinching of the pipe during backfilling operations.
- Allow a minimum of 20 ft. between each borehole for vertical boreholes and 10ft for vertical angled boreholes.
- Piping that is laid in a header trench should be insulated up to the individual trench to the borehole.
- Insulate all tubing within 12ft. of the structure with 1/2" thick closed cell armaflex insulation.
- Reverse return headers minimize flow imbalances between loops.
- The number of boreholes can be reduced by increasing the depth of the boreholes. Do not exceed 300ft depth and care must be taken to size the circulator pump module accordingly.
- Be sure to obtain permission prior to drilling if angled boreholes enter neighbouring properties.

- Each loop consists of minimum 300ft. of 3/4" type 3408 PE 160 psig (SDR 11) geothermal heat pump polyethelene tubing.
- Each borehole is 4-6" diameter and 150ft deep for 1 loop per ton applications.
- Allow enough extra pipe to be able to reach the headers to minimize the number of fusion joints.
- "U" tubes should be taped together every 10ft. A heavy piece of rebar or galvanized pipe can be taped to the last 10ft. to help keep the end straight and also for added weight.
- Fill each "U" tube with water and pressurize to 100PSIG before insertion. The added weight of the water will help with the insertion process
- Tremie grout from the bottom to within 10ft of the top of the borehole. Use neat cement or a mixture of neat cement and bentonite. Check local codes, there may be regulations that must be adhered to.

				Drawn By Chris Geddes	Date 22 JAN 08	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
				Checked By Chris Geddes	Date 22 JAN 08	
				Approved By Chris Geddes (ENG)	Date 22 JAN 08	Drawing Name
				Approved By (MFG)	Date	Typical Vertical Ground Loop Configuration
01	Initial Release	C. GEDDES	C. GEDDES	22 JAN 08		Size
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Drawing Number
						000609INF
						REV
						01
						SHEET
						1 of 1


Geo-Flo Circulator Pump Module Installation (Units with Brass FPT Fittings)

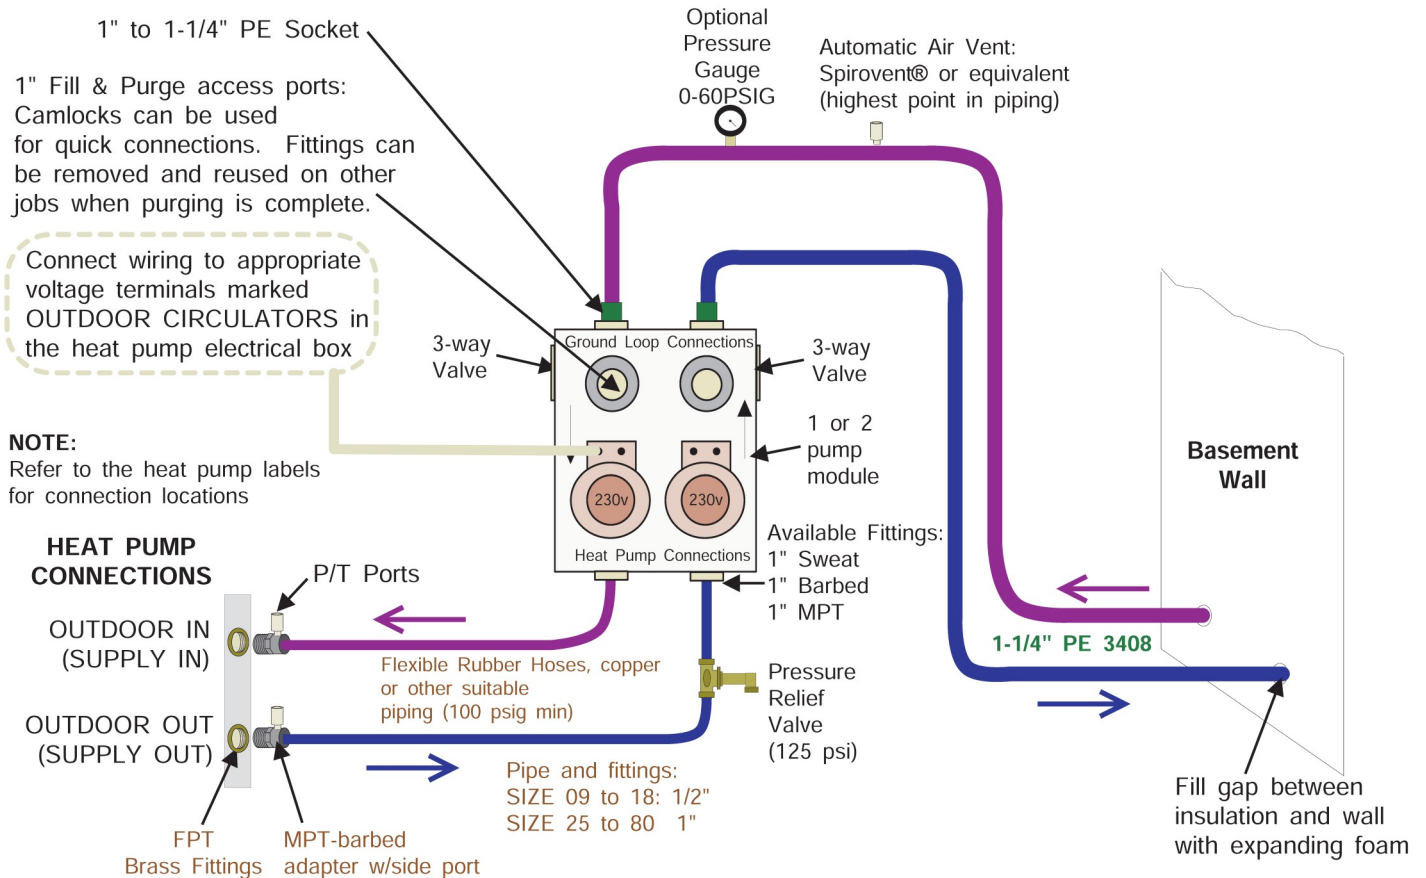

NOTES:

- Circulator Pump Module should be mounted vertically to minimize the possibility of air locking the circulators.
- All lines inside the structure and through the wall should be insulated with 3/8" to 1/2" thick closed cell pipe insulation.
- Holes through the foundation / structure should be filled with expanding foam from both sides to prevent leakage.
- Proper drainage material should be used on the outside of the wall to prevent water buildup.
- Pump module fittings are available from Maritime Geothermal Ltd.
- A pressure gauge is recommended if P/T plugs are not installed.
- For most applications, a 1 pump module will accommodate model sizes 09 to 45, and a 2 pump module will accommodate sizes 55 to 80. The total loop pressure drop including the headers, inside piping and heat exchanger drop should be calculated based on the antifreeze mixture and lowest desired entering water temperature. The pump module selected must provide the required flow at this calculated pressure drop value.

CIRCULATOR PUMP MODULE 3-WAY VALVE POSITIONS (LEFT SIDE VIEW)

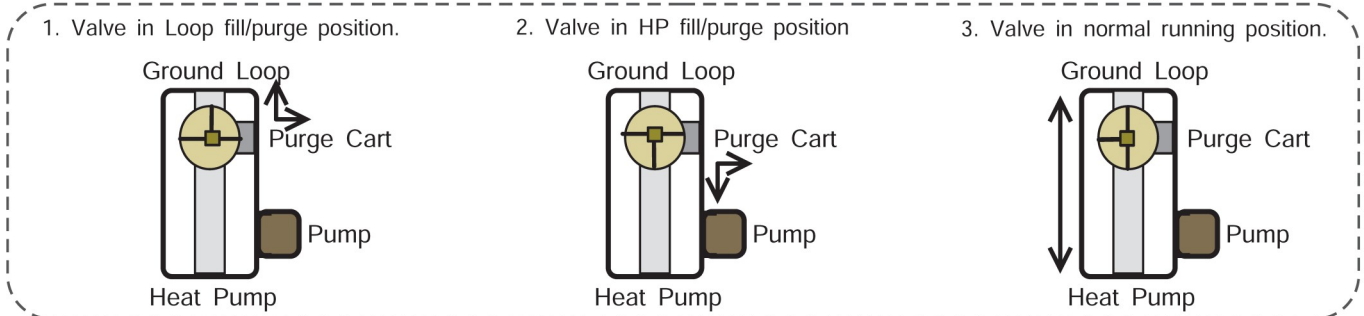


					Drawn By Chris Geddes	Date 09 DEC 08	MARITIME GEOTHERMAL LTD.	170 Plantation Rd. Petitcodiac, NB E4Z 6H4		
03	000264	D. RHEAULT	D. RHEAULT	21-Aug-2018	Checked By Chris Geddes	Date 09 DEC 08				
02	000213	C. GEDDES	C. GEDDES	21-May-2013	Approved By Chris Geddes (ENG)	Date 09 DEC 08	Drawing Name Geo-Flo Circulator Pump Module Installation (Brass FPT)			
01	Initial Release	C. GEDDES	C. GEDDES	9-Dec-2008	Approved By (MFG)	Date	Size A	Drawing Number 000906PDG	Drawing Rev 03	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date				

Geo-Flo Circulator Pump Module Installation - Two Units On One Ground Loop

NOTE:

Refer to the heat pump labels for connection locations


Connect wiring to appropriate voltage terminals marked **OUTDOOR CIRCULATORS** in the heat pump electrical box

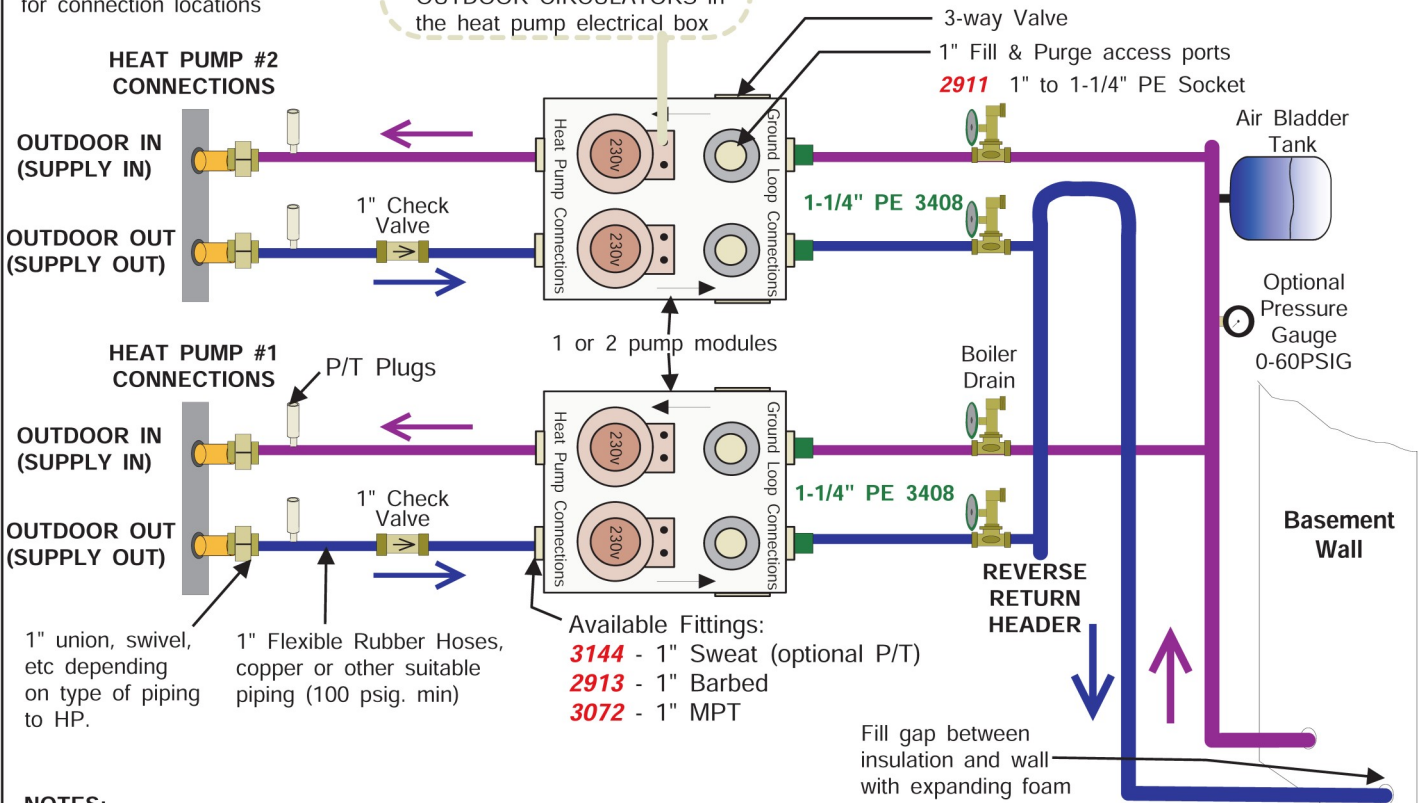

NOTES:

- Circulator Pump Module should be mounted vertically to minimize the possibility of air locking the circulators.
- Check valves in the OUT line of each heat pump prevent flow through the heat pump when it is not in operation.
- Ensure that each pump module can provide the required flow to its heat pump when operating solo.
- All lines inside the structure and through the wall should be insulated with 3/8" to 1/2" thick closed cell pipe insulation.
- Holes through the foundation / structure should be filled with expanding foam from both sides to prevent leakage.
- Proper drainage material should be used on the outside of the wall to prevent water buildup.
- Pump module fittings are available from Maritime Geothermal Ltd., Geo-Flo Part Numbers are indicated above (italics).
- A pressure gauge is recommended if P/T plugs are not installed.
- The air bladder tank should be pressurized to the desired static pressure of the ground loop before installation.
- For most applications, a 1 pump module will accommodate NORDIC models sizes 25, 35, and 45, and a 2 pump module will accommodate sizes 55, 65 and 75. The total loop pressure drop including the headers, inside piping and heat exchanger drop should be calculated based on the antifreeze mixture and lowest desired entering water temperature. The pump module selected must provide the required flow at this calculated pressure drop value.

CIRCULATOR PUMP MODULE 3-WAY VALVE POSITIONS (LEFT SIDE VIEW)

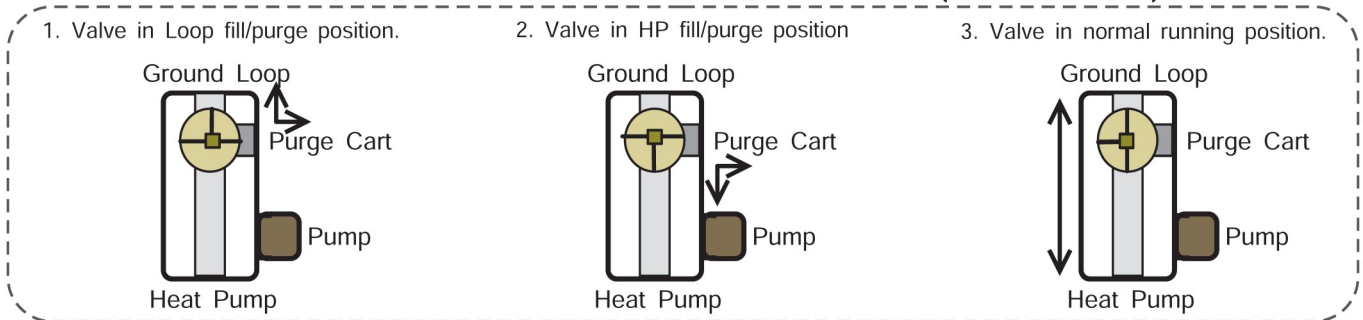

				Drawn By Chris Geddes	Date 21 FEB 08	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Pettitcodiac, NB E4Z 6H4
				Checked By Chris Geddes	Date 21 FEB 08	
				Approved By Chris Geddes (ENG)	Date 21 FEB 08	Drawing Name Geo Flo Circulator Pump Module
01	Initial Release	C. GEDDES	C. GEDDES	Approved By (MFG)	Date	Installation-Two Units on One Ground Loop
REV	ECO #	IMPL BY	APVD BY	Approved By	Date	Size A
						Drawing Number 000629PDG
						REV 01
						SHEET 1 of 1

Open Loop Installations

Well Water Temperature

The temperature of the well water should be a minimum of **41°F (5°C)**, and should normally be **45+°F (7°C+)**. In general, groundwater temperatures across the Canadian prairie provinces and Northern Ontario may be close to the 41°F minimum, while in other parts of southern Canada it will probably be 46-50°F, although local exceptions will exist. In more southern locations, it will be warmer.

The groundwater temperature should be verified as the first step in a proposed open loop installation.

Well Water Flow

The water source is normally a drilled water well with submersible pump that is the same well which supplies domestic water needs. It must be able to supply the required water flow as listed under the Total Flow column in the table.

TABLE 13 - Required Flow

Model Size	Flow* gpm (L/s)	Domestic Water Usage - gpm (L/s)	Total Flow gpm (L/s)
12	3.0 (0.20)	4 (0.25)	7.0 (0.46)
15	3.5 (0.24)	4 (0.25)	7.5 (0.49)
18	4.5 (0.28)	4 (0.25)	8.5 (0.54)

* These are minimum water requirements based on an entering water temperature of 45° F.

For groundwater temperatures of 50°F or greater, these flows can be reduced by 25% if required.

Rather than being estimated by a well driller, the flow from a proposed source well should be measured by performing an extended flow test to be sure it is capable of supplying the required flow over an extended period of time. This is done by flowing the well at the highest possible rate, noting the static water level in the well, and monitoring the pumping fluid level until stable. Unless the fluid level is very high, fluid level monitoring will require a device called a water level sounder. The flow rate can then be measured either by a cumulative gallon meter, a flowmeter, or by timing the filling of a bucket of known size. The test data can be recorded as follows:

TIME	METER READING (USGAL)	TOTAL FLOW (USGAL)	FLOW RATE (USGPM)	WATER LEVEL (FT)		WATER LEVEL (FT)
20:25	131735.5	0		20	6	20.5
20:27	131756	20.5	10.3	24	0	24.0
20:30	131779	23	6.0	26	0	26.0
20:42	131847	68	6.1	29	0	29.0
20:51	131906	59	6.6	29	0	29.0
21:03	131982	76	6.3	29	0	29.0
21:32	132156	174	6.0	29	0	29.0

It is best to flow the well for as long as possible (e.g. 12 hours) at the flow rate required by the proposed heat pump size. However, if the test is performed before a larger submersible pump is installed, it may be assumed that any unused water level drop during the test (that is, any distance remaining be-

tween the pumping fluid level and the pump intake) would contribute linearly to the flow rate should a larger pump be installed.

In the above example, it was recorded that the flow rate stabilized at 6 gpm, while the water level dropped from 20 to 29 feet (9 feet). If the intake of a larger pump could be placed so that a further pumping fluid level drop of 9 feet could be achieved (total 18 feet), it can be assumed that the flow would double to 12 gpm. Of course, this should be verified with a second test once the larger pump is actually installed.

Well Water Quality

The well water should be tested to be sure it meets minimum standards. Although the threat of poor water quality to open loop installations is often exaggerated, poor water quality can lead to rapid heat exchanger failure or frequent servicing.

First, the well should not produce any sand. Sand will physically erode heat exchanger surfaces, and quickly clog return (injection) wells. Solids or TDS should be less than 1 ppm (1 mg/L) if a return well is used.

To avoid scale formation on the inside of the heat pump's outdoor loop coil, total hardness should be less than 350 ppm / 350 mg/L. In practice, scaling is very rarely a problem at northern groundwater temperatures of 50°F or less because scale does not generally form at low well water temperatures (unlike, for example, in a domestic hot water tank). In more southern climates, the hardness guideline will be a more important consideration. Should scale form, heat pump performance will gradually deteriorate, and will require periodic flushing with a calcium/lime removing solution (see General Maintenance section). If the need for periodic flushing is anticipated, the optional Cupro-Nickel (CuNi) coil and piping should be ordered.

Corrosive (salty) water can cause failure of the inner tube of the heat exchanger, leading to loss of refrigerant and water entering the refrigeration circuit, which ruins the heat pump. If chlorides exceed 20 ppm (20 mg/L), the optional CuNi coil and piping should be ordered. If chlorides exceed 150 ppm (150 mg/L), or significant Ammonia (>0.5 ppm) or H₂S (>0.2 ppm) is present, the use of an open loop system should be reconsidered.

Water Discharge Methods

Water disposal methods vary from area to area. However, some consideration should be made to prevent the cooled discharge water from immediately coming in contact with the supply source. Attempting to return the water to the source well will eventually cool the water so much that the heat pump will shut off on its low pressure safety control.

Acceptable methods for disposing of the waste water are listed below. The waste water is clean; the heat pump has no effect other than reducing the temperature of the water. **Refer to drawing 000907INF** for typical disposal method diagrams.

- Second well (return well)
- Percolation (Drain, ditch, leaching field)
- Pond, river or stream

ENSURE SELECTED METHOD CONFORMS TO LOCAL REGULATIONS.

A return well should be a minimum of **80 ft.** from the supply well for residential applications. The water returned to the well

Figure 2: Open Loop Accessories & Tools

Water Level Sounder



Cumulative Gallon Meter





Taco EBV




Rainbird Solenoid Valve

Dole Valve

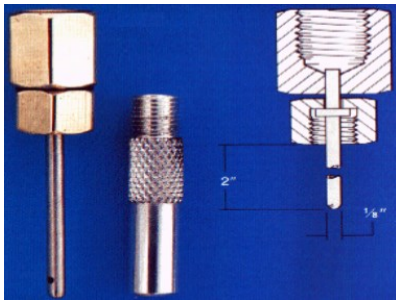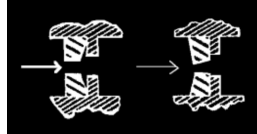

Gauge adapter for P/T port

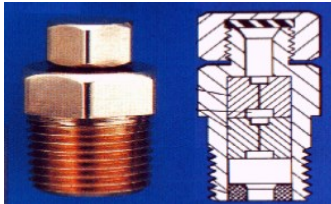

P/T port



P/T adapters for heat pump (1" NPT to barb)

will not necessarily be pumped into the same aquifer, depending on underground conditions. The return well must be able to supply at least the same quantity of water as the amount you wish to inject into it, preferably much more, since injection capacity will tend to decrease over time due to clogging. It may be necessary to place a pressure-tight cap on the well to keep the return water from flowing out the top of the well. This cap is commonly required since a certain amount of pressure may be needed to force the return water back down the well in cases of limited injectivity.

Water discharged by percolation will generally soak into the ground within a distance of 50 to 100 ft. If suitable care is taken to ensure that the drain pipe runs downhill and the end of the pipe is protected by a bale of hay or spruce bows, the end of the pipe will not freeze as the pipe will empty out when the heat pump shuts off and the water valve closes. A screen should be installed on the end of large discharge pipes, to prevent animals from building nests inside during extended 'off' periods and causing a backflooding risk for open water drains.

When snow comes it will usually cover the entire process much like a small spring. It is recommended that the pipe be below the frost line when possible for maximum freeze protection.

When discharging into a river or stream, or above the surface of a pond, the same guidelines should be followed as described in the paragraph above for the percolation method.

When discharging the waste water below the surface of a pond or lake, the discharge pipe should be placed below the frost line to prevent the pipe from freezing. As opposed to the percolation method, water will remain in the end of the pipe. It is recommended that the surface of the pond be lower than the installation location of the heat pump. This reduces the back pressure generated by the weight of the water in the pond.

Water Valve

Water flow through the heat pump is turned on and off by a water valve, which is controlled by a 24VAC signal from the heat pump. It should be installed on the OUT pipe of the heat pump, so that the heat exchanger remains full of water at all times. There are 3 types of water valves that may be available from Maritime Geothermal.

- **Hailin** or equivalent slow acting **motorized ball valve**, which is always powered with 24VAC from **R** and opened with a **Y** or **Y1** signal.
- **Taco** slow acting **motorized ball valve**, which is powered open and stores the energy required to close using a capacitor.
- **Rainbird** or equivalent fast acting **solenoid valve**.

Most installations use a slow closing motorized ball valve. These take 5-15 seconds to close, so avoid the water hammer which can occur with fast acting valves. A fast acting solenoid valve can be used for applications where water hammer is not expected.

All valves come from Maritime Geothermal Ltd. with a **wiring harness**, which plugs into a connector behind the pipe post of the heat pump. (If buying a water valve elsewhere, be sure to get the wiring harness from Maritime Geothermal.) This both allows the heat pump to properly control the valve, turning the water flow on and off with the compressor, and also tells the heat pump to select the higher low pressure safety control for open loop operation (since there is no antifreeze present).

Water Flow Control

A flow restricting ('Dole') valve is highly recommended, installed downstream of the water valve. This is a passive (non-electrical) device which automatically varies the size of its rubber orifice in order to restrict flow to its stamped gpm value, regardless of water pressure. This is important in order to provide some backpressure to the water system, which could otherwise be too low for the comfort of people taking showers or otherwise using the domestic water system. It also prevents excessively low refrigerant discharge pressure when in cooling mode. Dole valves are available as an accessory.

Dole valves can emit a 'whistling' sound if the pressure drop through them is high. Therefore, they should be placed where the noise will not cause a nuisance, e.g. outside the basement wall or perhaps in a well insulated box.

Submersible Pump Selection

Of course, the submersible pump must be large enough to supply the flow required by the heat pump. This is usually not a problem, pumps often being oversized by default.

However, if a conventional fixed speed pump is too large, its fixed capacity will exceed that of the Dole valve at reasonable pressure switch settings (<80 psi). This will cause the submersible pump to cycle on and off continuously while the heat pump is running, causing excessive wear to the submersible pump. The installation of a large air bladder tank will cause the cycles to have a longer duration, but will not solve the problem.

To avoid this problem, the fixed speed pump should be sized according to its head vs. flow curve. The required head should be calculated using height between the pumping fluid level in the well and the elevation of the heat pump, pipe pressure drop at nominal flow rate, desired system water pressure, and any back pressure from return well. Then a pump can be selected that delivers the nominal flow for the chosen heat pump size at that head. In case this calculation is not exact, a variety of Dole valves can be carried by the installer, and a larger Dole valve installed if submersible pump cycling is observed.

An alternate approach would be to install a variable speed submersible pump, which varies its speed to maintain a constant water system pressure. Or use a mechanical 'cycle stop' valve, which is installed upstream of the air bladder / pressure tank and varies its orifice to put backpressure on the pump during periods of low flow in order to keep it from cycling off.

Submersible Pump Power Draw

In an open loop installation, the submersible water pump draws significant power compared to the heat pump, especially for smaller heat pump sizes. This is particularly true when using a conventional fixed speed submersible pump. Under traditional usage, the efficiency of such a pump is not particularly important, due to its short run times in a domestic water system. But when used with a geothermal heat pump, which can run all day on the coldest days of the year, it is highly recommended that effort be made to select an energy efficient submersible pump. However, these may be hard to find.

Plumbing the Heat Pump

The port connections for the outdoor loop are brass FPT fittings. They are marked as **OUTDOOR IN** and **OUTDOOR OUT**.

Plumbing lines, both IN (supply) and OUT (discharge), must be of adequate size to handle the water flow necessary for the heat pump. A copper or plastic line should be run to the Outdoor IN (Supply IN) pipe of the heat pump. Similarly, a line should be run from the Outdoor OUT (Supply Out) pipe to the method of disposal. P/T plugs should be installed at each port. See **Figure 1** in the Ground Loop section for a description of P/T plugs. The water valve should be installed in the OUT (discharge) line. Refer to **drawing 000907CDG** at the end of this section for the recommended setup. Placing the water valve in the discharge line ensures that the heat exchanger inside the heat pump remains full of water when the unit is not running. Unions or some other form of disconnect should be used so that the coaxial heat exchanger may be accessed should it required cleaning.

As mentioned earlier, the heat pump has an electrical connector for the water valve just inside the case. After the water valve is installed, run the valve harness into the case through the hole provided. Remove the jumper plug from the valve connector and connect the harness in its place.

Optionally, a water flow meter can be installed in the discharge line so that the exact amount of water flowing can be determined at a glance. It should be placed between the Outdoor OUT (Supply OUT) pipe of the heat pump and the water valve.

With proper flow, there should be **5-7°F (3-4°C)** delta T between the IN and OUT water temperatures of the heat pump when operating in the heating mode.

All water line valves on both the supply and discharge lines should be either BALL or GATE valves. GLOBE valves have a higher pressure drop, meaning more pumping power to maintain the required flow to the heat pump.


Pipe Insulation

All ground water piping to and from the Outdoor Loop ports on the heat pump should be insulated with 3/8" closed cell pipe insulation, to prevent condensation and dripping onto floors or walls.

Typical Ground Water Installation for Size 25-80 Heat Pumps for Units With Brass FPT Fittings TACO 24VAC EBV (Electronic Ball Valve)

NOTE: Refer to the heat pump labels for connection locations.

NOTE: Dole valves can be quite noisy. Placing a the optional ball valve approximately two feet from the Dole valve can reduce the noise level. Alternately, the Dole valve can be placed outside the home.

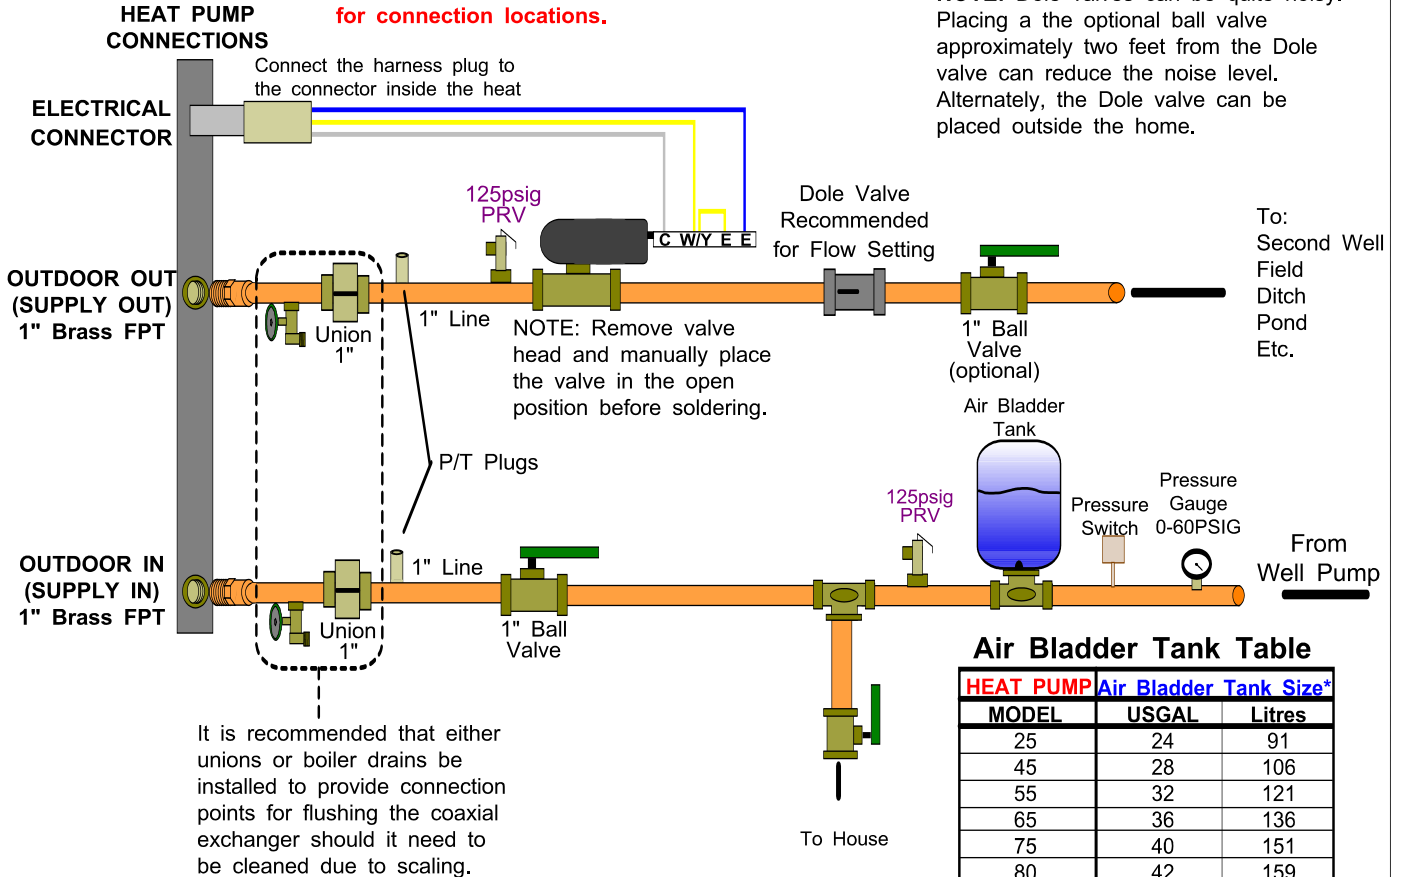

It is recommended that either unions or boiler drains be installed to provide connection points for flushing the coaxial exchanger should it need to be cleaned due to scaling.



Air Bladder Tank Table

HEAT PUMP MODEL	Air Bladder Tank Size* USGAL	Litres
25	24	91
45	28	106
55	32	121
65	36	136
75	40	151
80	42	159

*Based on 2 minute well pump run time. A larger tank may be used if a longer run time is desired.

TACO 24VAC Slow Close Water Valve


Connect the harness plug to the connector inside the heat pump.

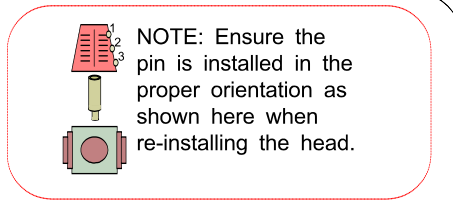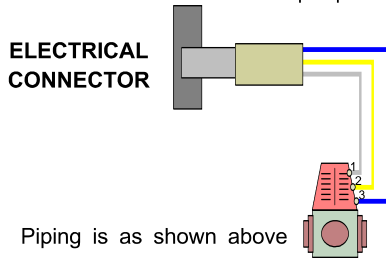

NOTE: Remove the head from the valve before soldering the valve in place.




Generic 24VAC Solenoid Water Valve

Connect the harness plug to the connector inside the heat pump.

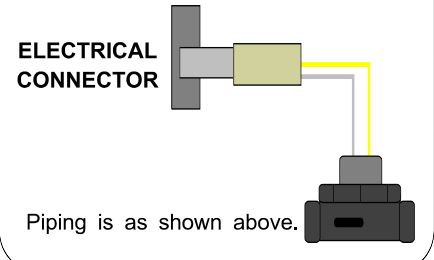

02	000228	C. GEDDES	C. GEDDES	21 MAY 2014	Drawn By Chris Geddes	Date 10 DEC 08	MARITIME GEOTHERMAL LTD.	170 Plantation Rd. Petitcodiac, NB E4Z 6H4
01	Initial Release	C. GEDDES	C. GEDDES	10 DEC 08	Checked By Chris Geddes (ENG)	Date 10 DEC 08		
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By Chris Geddes (MFG)	Date	Drawing Name Typical Ground Water Installation for Size 25-80 Heat Pumps (Brass FPT)	
					Approved By	Date	Size A	Drawing Number 000907CDG
							Drawing Rev 02	SHEET 1 of 1

GROUND WATER DISPOSAL METHODS

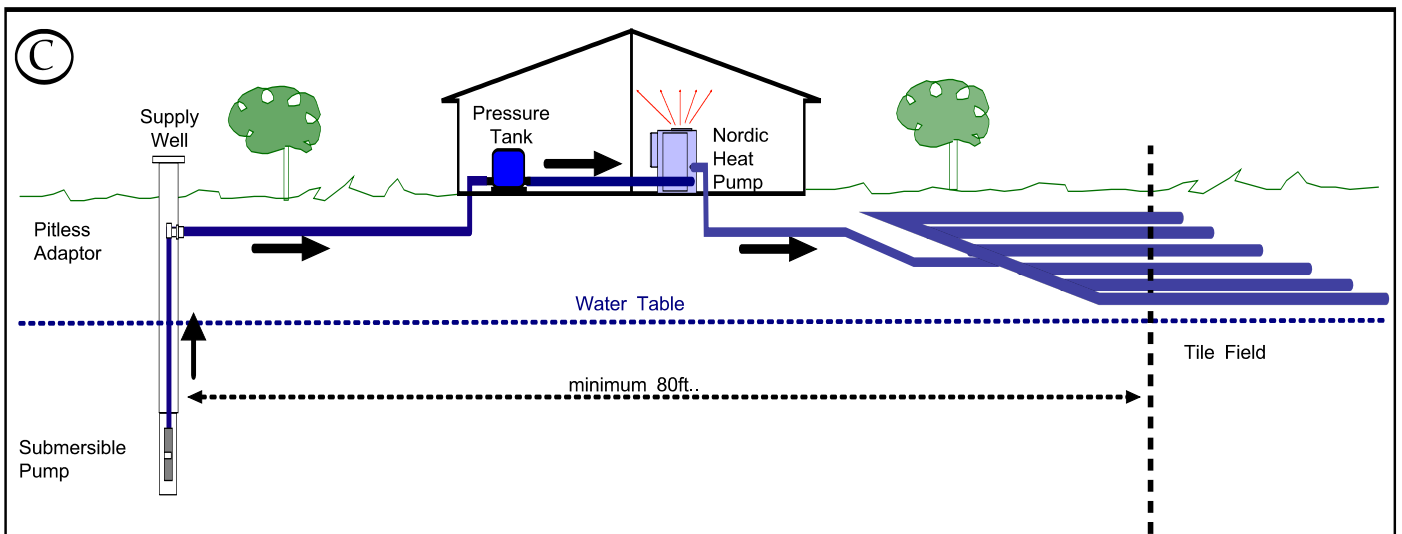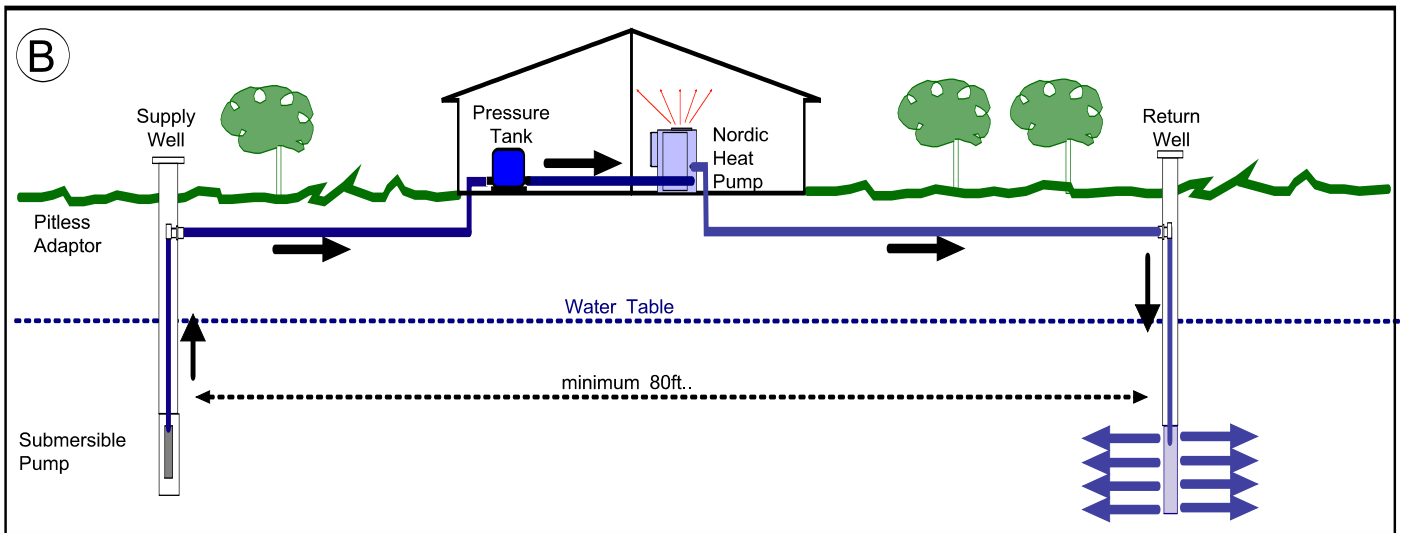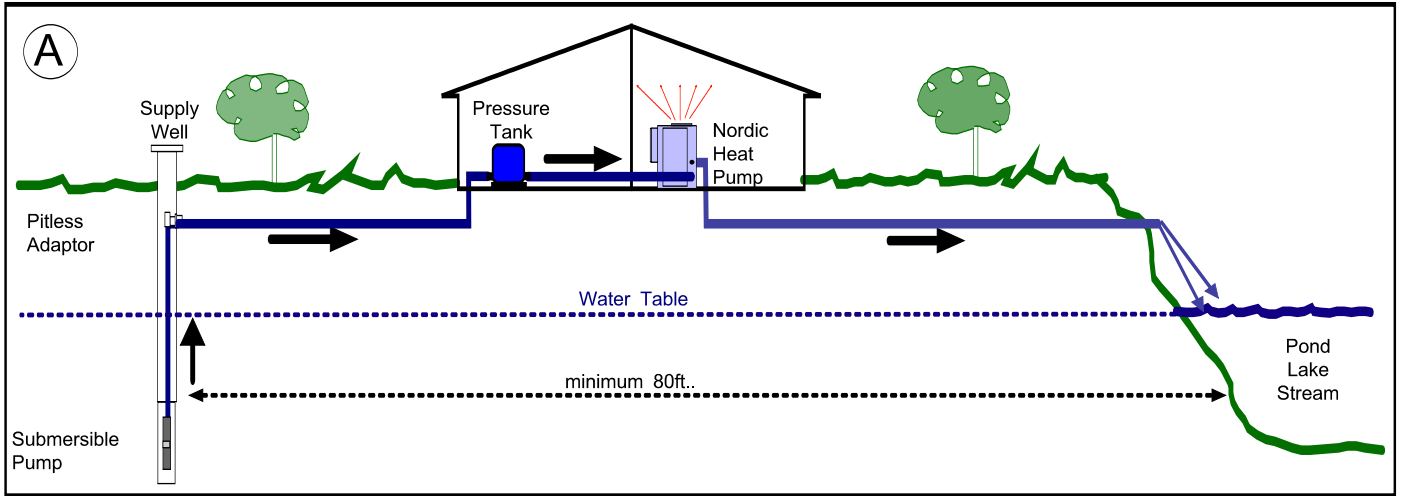

				Drawn By Chris Geddes Date 04 FEB 08	Date 04 FEB 08	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4			
				Checked By Chris Geddes Date 04 JAN 08 (ENG)	Date 04 FEB 08		Drawing Name Ground Water Disposal Methods		
				Approved By Chris Geddes Date (MFG)					
01	Initial Release	C. GEDDES	C. GEDDES	04 FEB 08		Size A	Drawing Number 000619INF	REV 01	SHEET 1 of 1
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date			

Startup Procedure

The W-Series R410a Startup Record located in this manual is used in conjunction with this startup procedure to provide a detailed record of the installation. A completed copy should be left on site, a copy kept on file by the installer and a copy should be sent to Maritime Geothermal Ltd.

Check the boxes or fill in the data as each step is completed. For data boxes, circle the appropriate units.

Pre-Start Inspection

Indoor Loop (Hydronic Loop):

1. Verify that all shutoff valves are fully open and there are no restrictions in the piping from the heat pump to the indoor loop, and that full flow is available to the heat pump.
2. Verify that the entire system has been flooded and all the air has been purged as much as possible. Further purging may be required after the system has been operating for a while.
3. Verify that the loop contains the proper mix of antifreeze (if used) for the intended application. If applicable, record the type of antifreeze and the mixture value on the startup sheet, circle % Vol. or % Weight.
4. Record the static loop pressure on the startup sheet.

Outdoor Loop (Ground Loop):

1. Verify that all shutoff valves are fully open and there are no restrictions in the piping from the heat pump to the ground loop, and that full flow is available to the heat pump.
2. Verify that the entire system has been flooded and all the air has been purged as much as possible. Further purging may be required after the system has been operating for a while.
3. Verify that the loop contains the proper mix of antifreeze for the intended application. Record the type of antifreeze and the mixture value on the startup sheet; circle % Vol. or % Weight.
4. Record the static loop pressure on the startup sheet.

Outdoor Loop (Open Loop):

1. Verify there are no leaks in the connections to the unit. Verify the water valve is installed and properly oriented in the water out line.
2. Verify that there is flow control in water out line.

Electrical:

1. **Ensure the power to the unit is off.**
2. Verify all high voltage connections. Ensure that there are no stray wire strands, all connections are tight and the ground wire is connected tightly to the ground connector.
3. Record the fuse / circuit breaker size and wire gauge for the heat pump.
4. Verify that the control connections to the unit are properly connected and all control signals are off, so that the unit will not start up when the power is turned on.
5. Verify that the circulator pumps are connected to the proper voltage terminals in the heat pump. Record the voltages of the circulator pumps.
6. Ensure all access panels except the one that provides access to the electrical box are in place.

Unit Startup

The unit is now ready to be started. The steps below outline the procedure for starting the unit and verifying proper operation of the unit controlled by aquastats. **It is recommended that safety glasses be worn during the following procedures.**

Preparation:

1. Remove the caps from the service ports and connect a refrigeration manifold set to the unit.
2. Turn the power on to the heat pump and set the all controls to OFF.
3. Measure the following voltages on the compressor contactor and record them on the startup sheet: L1-L2, L2-L3, L1-L3.

Heating Mode:

1. Set the aquastat setpoint to 110°F to activate compressor. The compressor will start (allow 30-60 seconds for the water valve to open for ground water systems) as well as the circulator pumps.
2. Check the refrigeration gauges. The suction and discharge pressures will depend on the loop temperatures, but they should be about **90-110PSIG** and **260-360PSIG** respectively for a typical start-up.
3. Monitor the refrigeration gauges while the unit runs. Record the following after 10 minutes of runtime:
 1. Suction pressure
 2. Discharge pressure
 3. Indoor Loop In (Hot In) temperature
 4. Indoor Loop Out (Hot Out) temperature
 5. Indoor Delta T (should be between **8-12°F, 4-6°C**)
 6. Outdoor Loop In (Supply In) temperature
 7. Outdoor Loop Out (Supply Out) temperature
 8. Outdoor Delta T (should be between **5-8°F, 3-4°C**)
 9. Outdoor flow (if available)
 10. Compressor L1(C) current (black wire, place meter between electrical box and compressor)
4. Adjust the aquastat setpoint to the desired buffer tank temperature and let the unit run through a cycle. Record the setpoint and the discharge pressure when the unit shuts off.

Cooling Mode:

1. Adjust setpoint to 50°F (10 °C) to activate cooling mode.
2. Monitor the refrigeration gauges while the unit runs. Record the following after 10 minutes of runtime:
 1. Suction pressure
 2. Discharge pressure
 3. Indoor Loop In (Hot In) temperature
 4. Indoor Loop Out (Hot Out) temperature
 5. Indoor Delta T
 6. Outdoor Loop In (Supply In) temperature
 7. Outdoor Loop Out (Supply Out) temperature
 8. Outdoor Delta T
3. Adjust the cooling aquastat setpoints to the desired tank temperature, and allow the unit to run through a cycle. Record the aquastat setpoint and the suction pressure when the unit shuts off.

Final Inspection:

1. Turn the power off to the unit and remove all test equipment.
2. Install the electrical box cover and the access panel on the heat pump. Install the service port caps securely to prevent refrigerant loss.
3. Do a final check for leaks in the ground water / ground loop system and ensure the area is clean.
4. Turn the power on to the unit. Set the aquastats to the final settings and record the values.

Startup Record:

1. The startup personnel shall sign and date the Startup Record and have the startup witness or appropriate site personnel sign as well. The startup personnel shall leave the Startup Record with the homeowner, retain a copy for filing, and send a copy to Mari-time Geothermal Ltd. for warranty registration.

Startup Record Sheet - W-Series Size 12-18

Installation Site		Startup Date	Installer	
City			Company	
Province		Check boxes unless asked to record data. Circle data units.	Model	
Country			Serial #	
Homeowner Name		Homeowner Phone #		

PRE-START INSPECTION

Indoor Loop (Hydronic)	All shut-off valve are open (full flow available)				
	Loop is full and purged of air				
	Antifreeze type				
	Antifreeze concentration		% Volume	% Weight	
	Loop static pressure		PSI	kPa	
Ground Loop System	All shut-off valve are open (full flow available)				
	Loop is full and purged of air				
	Antifreeze type				
	Antifreeze concentration		% Volume	% Weight	
	Loop static pressure		PSI	kPa	
Ground Water System	Water valve installed in return line				
	Flow control installed in return line				
Electrical	High voltage connections are correct and securely fastened				
	Circuit breaker (or fuse) size and wire gauge for Heat Pump		A		Ga.
	Circulator pump voltages (Outdoor 1, Outdoor 2, Indoor 1)		V		V
	Low voltage connections are correct and securely fastened				


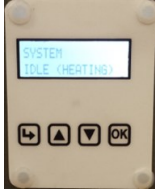

STARTUP DATA

Preparation	Voltage across L1 and L2, L1 and L3, L2 and L3				VA C
Heating Mode (10 minutes)	Suction Pressure / Discharge Pressure			psig	kPa
	Indoor In (Hot In), Indoor Out (Hot Out), and Delta T	In		Out	°F °C
	Outdoor In (Supply In), Outdoor Out (Supply Out), and Delta T	In		Out	°F °C
	Outdoor Flow	lgpm	USgpm	L/s	
	Compressor L1 (black wire) current	A			
	Aquastat setpoint and discharge pressure at cycle end	°F °C		psig	kPa
Cooling Mode (10 minutes)	Suction Pressure / Discharge Pressure			psig	kPa
	Indoor In (Hot In), Indoor Out (Hot Out), and Delta T	In		Out	°F °C
	Outdoor In (Supply In), Outdoor Out (Supply Out), and Delta T	In		Out	°F °C
	Cooling aquastat setpoint and suction pressure at cycle end	°F °C		psig	kPa
Final Aquastat Settings	Heating S1 Setpoint, S1 Delta, S2 Setpoint, S2 Delta			°F °C	
	Cooling S1 Setpoint, S1 Delta, S2 Setpoint, S2 Delta			°F °C	

Date:		Startup Personnel Signature:		Witness/Site Signature:	
--------------	--	-------------------------------------	--	--------------------------------	--

A total of three copies are required, one for the site, one for the installer/startup and one to be sent to Maritime Geothermal Ltd.

Routine Maintenance

MAINTENANCE SCHEDULE		
Item	Interval	Procedure
Compressor Contactor 	1 year	Inspect for pitted or burned points. Replace if necessary.
LCD Interface or PC App 	When heat pump problem is suspected	Check for alarms and faults (only necessary if alarms not reported through a BACnet system). Rectify problem if alarms found. See Troubleshooting chapter.
Coaxial Heat Exchangers 	When experiencing performance degradation that is not explained by a refrigeration circuit problem or low loop flow rate	Disconnect the loop and flush heat exchanger with a calcium removing solution. Generally not required for closed loop or cold water open loop systems or indoor loops; whenever system performance is reduced for warm water open loop systems. See instructions below.

Coaxial Heat Exchanger Flushing Procedure - Open Loop

1. Isolate the heat exchanger by closing the valves in the IN and OUT ports to the heat exchanger.
2. Blow out the heat exchanger into a clean 5 gallon bucket using compressed air.
3. If a purge cart is not available, use a 5 gallon plastic bucket, a circulator and some plastic piping to create a make-shift pump system. Connect a the inlet and outlet to the heat exchanger ports.
4. Place 2 gallons of RYDLYME or similar in the purge cart (or bucket). Circulate the fluid through the heat exchanger for at least 2 hours (3 hours recommended).
5. Disconnect the purge system and dispose of the solution. RYDLYME is non-toxic and biodegradable and as such can be poured down a drain.
6. Connect fresh water and a drain to the heat exchanger ports and flush the exchanger for several minutes.
7. Return the plumbing to its original configuration and open the IN and OUT valves. Operate the system and check for improved performance.

Coaxial Heat Exchanger Flushing Procedure - Closed Ground Loop

1. Isolate the heat exchanger by placing the pump module valves in the exchanger flushing position.
2. Connect a compressed air and a drain pipe to the pump module purge ports and blow the anti-freeze solution into a clean 5 gallon bucket.
3. Connect a purge cart to the pump module purge ports.
4. Place 2 gallons of RYDLYME or similar in the purge cart. Circulate the fluid through the heat exchanger for at least 2 hours (3 hours recommended).
5. Disconnect the purge cart and dispose of the solution. RYDLYME is non-toxic and biodegradable and as such can be poured down a drain. Clean the purge cart thoroughly.
6. Connect fresh water and a drain to the pump module purge ports and flush the exchanger for several minutes.
7. Blow the heat exchanger out with compressed air as per STEP 2 and dump the water down a drain.
8. Connect the purge cart to the pump module purge ports. Re-fill and purge the heat exchanger with as per standard procedures (the antifreeze from STEP 2 can be re-used).
9. Disconnect the purge cart and set the pump module valves back to the original positions. Operate the system and check for improved performance.

Troubleshooting Guide

The following steps are for troubleshooting the heat pump. Repair procedures and reference refrigeration circuit diagrams can be found later in this manual.

- STEP 1:** Turn on the ON/OFF switch and verify that the display is present on the internal aquastat. If it is not present, proceed to POWER SUPPLY TROUBLE SHOOTING, otherwise proceed to STEP 2.
- STEP 2:** Remove the door and electrical box cover and check to see if there is a fault code on the control board. If there is, record the fault code. Turn the power off, wait 10 seconds and turn the power back on. Set the aquastat and/or room thermostats to call for heating or cooling depending on the season.
- STEP 3:** If a 24VAC signal does not appear across Y on the control board and C of the terminal strip after 5 minutes, proceed to the INTERNAL AQUASTAT TROUBLESHOOTING section, otherwise proceed to STEP 4.
- STEP 4:** If a fault code appears once a signal is present at Y on the control board and the compressor does not attempt to start, proceed to the FAULT CODE TROUBLESHOOTING section, otherwise proceed to STEP 5.
- STEP 5:** If no fault codes appear and the compressor does not attempt to start, attempts to start but cannot, starts hard, or starts but does not sound normal, proceed to the COMPRESSOR TROUBLESHOOTING section, otherwise proceed to STEP 6.
- STEP 6:** If the compressor starts and sounds normal, this means the compressor is OK and the problem lies elsewhere. Proceed to the OPERATION TROUBLESHOOTING section.
- NOTE:** To speed up the troubleshooting process, the TEST jumper on the safety board can be placed to the YES position to change the anti-short cycle timer to 5 seconds. **Be sure to set it back to NO when servicing is complete.**

POWER SUPPLY TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
No power to the heat pump	Disconnect switch open (if installed)	Verify disconnect switch is in the ON position.	Determine why the disconnect switch was opened, if all is OK close the switch.
	Fuse blown / breaker tripped	At heat pump disconnect box, voltmeter shows 230VAC on the line side but not on the load side.	Reset breaker or replace fuse with proper size and type. (Time-delay type "D")
No display on internal aquastat	ON/OFF switch is OFF.	Examine the switch on left side of cabinet. "1"=ON, "0"=OFF.	Turn on switch.
	Transformer impedance protection tripped or faulty transformer	230VAC is present across L1 and L3 of the compressor contactor but 24VAC is not present across R and C of the terminal strip.	Replace transformer.
	Faulty aquastat.	24VAC is present across 24V and COM of the aquastat but there is no display.	Replace aquastat.

INTERNAL AQUASTAT TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
No Y signal to heat pump control board	Incorrect internal aquastat setup.	Internal aquastat does not indicate a red dot beside HEAT or COOL on its display.	Correct the setpoint or setup.
	Open loop water valve end switch (if present) is not closing.	Examine water valve as it is activated by the aquastat signal to be sure it is fully opening and end switch is working.	Replace water valve.
	Faulty internal aquastat.	No 24VAC between Control board Y and C on terminal strip when HEAT or COOL is indicated on the aquastat display.	Replace internal aquastat.
Setting(s) not retained	Faulty internal aquastat.	Setpoint is reset by power on/off.	Replace aquastat.

FAULT CODE TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Fault Code 1 (High Pressure Control)	High operating refrigerant pressure	Using a refrigeration gauge set, verify that high pressure approaches or exceeds 565psi with compressor on.	See "High Discharge Pressure" in Heating Mode / Cooling Mode Troubleshooting section.
	Faulty High Pressure Control, failed open (very unlikely) * For this test there must be a signal present on Y, but compressor should not be running (disconnect compressor power plug).	Verify that there is 24VAC across HP1 on the control board and C on the terminal strip, as well as HP2 and C.	Replace high pressure control if voltage is present on one terminal but not the other.
	Faulty control board (very unlikely)	24VAC is present across HP1 on the control board and C on the terminal strip, as well as HP2 and C, but is not present across CC on the control board and C after 10 minutes.	Replace control board.
Fault Code 2 (Low Pressure Control)	Low operating refrigerant pressure	Using a refrigeration gauge set, verify that low pressure approaches or dips below 55psi (ground loop) or 75 psi (open loop) with compressor on.	See "Low Discharge Pressure" in Heating Mode / Cooling Mode Troubleshooting section.
	Faulty low pressure control, failed open (very unlikely) * For this test there must be a signal present on Y1, but compressor should not be running (disconnect compressor power plug)	Verify that there is 24VAC across LP1 on the control board and C on the terminal strip, as well as LP2 and C.	Replace high pressure control if voltage is present on one terminal but not the other.
	Faulty control board (very unlikely)	24VAC is present across LP1 the control board and C on the terminal strip, as well as LP2 and C, but is not present across CC on the control board and C after 10 minutes.	Replace control board.
	Little or no refrigerant in unit	With compressor off, use a refrigeration gauge set to check refrigeration pressure of the unit for a very low value (less than 100 psi).	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.
Fault Code 5 (Brownout)	Low voltage from the electrical grid	Verify that the electrical supply has dropped below ~165VAC, causing transformer voltage to drop below 18VAC.	Contact electrical utility or wait for regular service to be restored.
Fault Code 6 (Flow Switch)	Low or no indoor loop flow	Delta T across the indoor loop ports should be 8-12°F (3-6°C), or compare pressure drop to the tables for the unit.	Verify pump is working and sized correctly. Check for restrictions in the circuit, e.g. valve partially closed.

COMPRESSOR TROUBLESHOOTING			
Fault	Possible Cause	Verification	Recommended Action
Compressor will not start	Faulty control board	Measuring from C on the terminal strip, verify there is voltage at Y, HP1, HP2, LP1, and LP2 but no voltage present at CC.	Replace control board.
	Faulty run capacitor	Check value with capacitance meter. Should match label on capacitor. Compressor will hum while trying to start and then trip its overload.	Replace if faulty.
	Loose or faulty wiring	Check all compressor wiring, including inside compressor electrical box.	Fix any loose connections. Replace any damaged wires.
	Faulty compressor contactor	Voltage on line side with contactor held closed, but no voltage on one or both terminals on the load side. Points pitted or burned. Or, 24VAC across coil but contactor will not engage.	Replace contactor.
	Thermal overload on compressor tripped	Ohmmeter shows reading when placed across R and S terminals and infinity between C & R or C & S. A valid resistance reading is present again after the compressor has cooled down.	Proceed to Operation Troubleshooting (particularly <i>high suction pressure</i> and <i>high discharge pressure</i>) to determine the cause of the thermal overload trip.
	Burned out motor (open winding)	Remove wires from compressor. Ohmmeter shows infinite resistance between any two terminals Note: Be sure compressor overload has had a chance to reset. If compressor is hot this may take several hours.	Replace the compressor.
	Burned out motor (shorted windings)	Remove wires from compressor. Resistance between any two terminals is below the specified value.	Replace the compressor.
	Motor shorted to ground	Remove wires from compressor. Check for infinite resistance between each terminal and ground.	If any terminal to ground is not infinite replace the compressor.
Seized compressor due to locked or damaged mechanism	Compressor attempts to start but trips its internal overload after a few seconds. (Run capacitor already verified)	Attempt to "rock" compressor free. If normal operation cannot be established, replace compressor.	
Compressor starts hard	Compressor is "tight" due to damaged mechanism	Compressor attempts to start but trips its internal overload after a few seconds. Run capacitor has been verified already.	Attempt to "rock" compressor free. If normal operation cannot be established, replace compressor.

OPERATION TROUBLESHOOTING - HEATING MODE

Fault	Possible Cause	Verification	Recommended Action
High Discharge Pressure	Aquastat set too high	Verify internal aquastat setting.	Lower setting to recommended max. value of 120°F (49°C) .
	Low or no indoor loop flow	Delta T across the indoor loop ports should be 8-12°F (3-6°C), or compare pressure drop to the tables for the unit.	Verify pump is working and sized correctly. Check for restrictions in the circuit, e.g. valve partially closed.
	TXV adjusted too far closed	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be high if TXV is closed too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Filter-dryer plugged	Feel each end of the filter-dryer; they should be the same temperature. If there is a temperature difference then it is plugged. Also causes low suction pressure.	Replace filter-dryer.
	Unit is overcharged. (Only possible if unit has been field serviced and incorrectly charged.)	High subcooling, low delta T across indoor water coil.	Remove 1/2lb of refrigerant at a time and verify that the discharge pressure reduces. Or remove charge and weigh back in the amount listed on nameplate.
Low Suction Pressure	Low or no outdoor loop liquid flow	Delta T across the Outdoor Loop ports should be 5-7°F (3-4°C), or compare pressure drop to the tables for the unit.	Determine the cause of the flow restriction and correct it. Verify pumps are working and sized correctly for ground loop systems. Verify pump and water valve are working for open loop systems.
	Entering liquid temperature too cold	Measure the entering liquid temperature to see if it is less than ~25F.	Increase the size of the ground loop.
	Dirty or fouled coaxial heat exchanger (more likely for open loop, unlikely for ground loop)	Disconnect the water lines and check the inside of the pipes for scale deposits.	Backflush the coaxial exchanger with a calcium-removing cleaning solution.
	Indoor loop entering liquid temperature too cold	Measure temperature. Should be above 60°F (15°C).	Restrict Indoor liquid flow temporarily until buffer tank comes up to temperature.
	TXV stuck almost closed or partially blocked by foreign object.	Adjusting the TXV does not affect the superheat or the suction pressure. TXV may be frosting up.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Low refrigerant charge.	Entering liquid temperature, flow and entering air temperature are good but suction is low. Check static refrigeration pressure of the unit for a very low value. Weigh refrigerant out and compare to charge listed on nameplate.	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.
High Suction Pressure (may appear to not be pumping)	Faulty compressor, not pumping (unlikely)	Pressures change only slightly from static values when compressor is started.	Replace compressor.

OPERATION TROUBLESHOOTING - HEATING MODE

Fault	Possible Cause	Verification	Recommended Action
High Suction Pressure (may appear to not be pumping)	Leaking reversing valve (can cause compressor to overheat and trip internal overload)	Reversing valve is the same temperature on both ends of body, common suction line is warm, compressor is running hot, low compressor discharge pressure.	Tap reversing valve, and switch it back and forth between heating and cooling positions. If this does not work for a long term fix, replace reversing valve.
	TXV adjusted too far open.	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be low if TXV is open too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV stuck open	Adjusting the TXV does not affect the superheat or the suction pressure. Low superheat and discharge pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
Compressor frosting up	See Low Suction Pressure in this section		
TXV frosting up	TXV stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure.	Attempt to adjust the TXV all the way out and all the way in a few times to loosen it. Replace TXV if this does not work.
Random high pressure trip (does not occur while on site)	Faulty compressor contactor	Points pitted or burned. Contactor sometimes sticks causing the compressor to run when it shouldn't, tripping the high pressure control.	Replace contactor.
	Intermittent indoor circulator	Verify wiring is good.	Correct the wiring or replace the circulator.

OPERATION TROUBLESHOOTING - COOLING MODE

Fault	Possible Cause	Verification	Recommended Action
Heating instead of cooling	Control wiring not set up properly.	Verify that there is 24VAC across Y _{C(EXT)} and C of the terminal strip when calling for cooling.	Correct control wiring.
	Faulty reversing valve solenoid coil.	Verify solenoid by removing it from the shaft while the unit is running. There should be a loud "whoosh" sound when it is removed.	Replace solenoid if faulty.
	Faulty reversing valve.	A click can be heard when the coil is energized but the unit continues to heat instead of cool.	Replace reversing valve.
High Discharge pressure	Low or no outdoor loop liquid flow	Delta T across the Outdoor Loop ports should be 8-12°F (4-7°C), or compare pressure drop to the tables for the unit.	Determine the cause of the flow restriction and correct it. Verify pumps are working for ground loop systems. Verify well pump and water valve is working for ground water systems.
	Entering liquid temperature too warm.	Most likely caused by undersized ground loop.	Verify the ground loop sizing. Increase the size of the ground loop if undersized.
	Dirty or fouled coaxial heat exchanger (more likely for open loop, unlikely for ground loop)	Disconnect the water lines and check the inside of the pipes for scale deposits.	Backflush the coaxial exchanger with a calcium-removing cleaning solution.

OPERATION TROUBLESHOOTING - COOLING MODE

Fault	Possible Cause	Verification	Recommended Action
High Discharge pressure	Unit is overcharged (only possible if unit has been field serviced and incorrectly charged)	High subcooling, low delta T across water coil.	Remove 1/2lb of refrigerant at a time and verify that the discharge pressure reduces. Or remove charge and weigh back in the amount listed on nameplate.
High Suction Pressure (may appear to not be pumping)	TXV adjusted too far open	Verify superheat. It should be between 8-12°F (3-6°C). Superheat will be low if TXV is open too far.	Adjust TXV to obtain 8-12°F (3-6°C) superheat.
	TXV stuck open	Adjusting the TXV does not affect the superheat or the suction pressure. Low super heat and discharge pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Leaking reversing valve (can cause compressor to overheat and trip internal overload)	Reversing valve is the same temperature on both ends of body, common suction line is warm, compressor is running hot, low compressor discharge pressure.	Replace reversing valve.
	Faulty compressor, not pumping (unlikely)	Pressures change only slightly from static values when compressor is started.	Replace compressor.
Low Suction Pressure	Aquastat set too low	Verify aquastat setting.	Raise aquastat setting to recommended value of 45°F (7°C)
	Low or no indoor loop flow	Delta T across the Indoor Loop ports should be 5-7°F (3-4°C), or compare pressure drop to the tables for the unit.	Verify pump is working and sized correctly. Check for restrictions in the circuit, e.g. valve partially closed.
	TXV stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure. TXV may be frosting up.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
	Low or no refrigerant charge	Entering water temperature and flow are good but suction is low. Check static refrigeration pressure of the unit for a very low value. Weigh refrigerant out and compare to charge listed on nameplate.	Locate the leak and repair it. Spray 9, a sniffer, and dye are common methods of locating a leak.
Compressor frosting up	See Low Suction Pressure in this section.		
TXV frosting up	TXV stuck almost closed or partially blocked by foreign object	Adjusting the TXV does not affect the superheat or the suction pressure.	Adjust the TXV all the way in and out a few times to loosen it. Replace TXV if this does not work.
Random Low Pressure trip (does not occur while there)	Faulty compressor contactor	Points pitted or burned. Contactor sometimes sticks causing the compressor to run when it shouldn't, tripping the low pressure control.	Replace contactor.
	Intermittent Indoor circulator	Verify wiring is good.	Correct the wiring or replace the circulator.

Repair Procedures

Pumpdown Procedure

1. Connect the refrigerant recovery unit to the heat pump's internal service ports via a refrigeration charging manifold and to a recovery tank as per the instructions in the recovery unit manual. Plan to dispose of refrigerant if there was a compressor burnout.
2. All refrigerant to water heat exchangers (brazed plates) **must either have full flow or be completely drained** of fluid before recovery begins. Failure to do so can freeze and rupture the heat exchanger, voiding its warranty.
3. Ensure all hose connections are properly purged of air. Start the refrigerant recovery as per the instructions in the recovery unit manual.
4. Allow the recovery unit suction pressure to reach a vacuum. Once achieved, close the charging manifold valves. Shut down, purge and disconnect the recovery unit as per the instructions in its manual. Ensure the recovery tank valve is closed before disconnecting the hose to it.
5. Connect a nitrogen tank to the charging manifold and add nitrogen to the heat pump until a positive gauge pressure of 5-10 psig is reached. This prevents air from being sucked into the unit by the vacuum when the hoses are disconnected.

The heat pump is now ready for repairs.

General Repair Procedure

1. Perform repairs to system.
 - Always ensure nitrogen is flowing through the system at the lowest flow rate that can be felt at the discharge during any brazing procedures to prevent soot buildup inside the pipes.
 - It is recommended to replace the liquid line filter-dryer any time the refrigeration system has been exposed to the atmosphere.
 - Place a wet rag around any valves being installed, as almost all valve types have non-metallic seats or seals that will be damaged by excessive heat, and aim the torch flame away from the valve body. Solder only one joint at a time and cool joints down in between.
2. Pressure test the system with nitrogen. It is recommended to check for leaks using leak detection spray, Spray Nine, or soapy water. Check at 10, 25, 50 and 100 psig. Allow the system to sit at 100 psig for at least an hour, then re-check.

Vacuumping & Charging Procedure

After completion of repairs and nitrogen pressure testing, the refrigeration circuit is ready for vacuumping.

1. Release the nitrogen pressure and connect the vacuum pump to the charging manifold. Start the vacuum pump and open the charging manifold valves. Vacuum until the vacuum gauge remains at less than 500 microns for at least 1 minute with the vacuum pump valve closed.
2. Close the charging manifold valves then shut off and disconnect the vacuum pump. Place a refrigerant tank with the proper refrigerant on a scale and connect it to the charging manifold. Purge the hose to the tank.
3. Weigh in the appropriate amount **and type** of refrigerant through the low pressure (suction) service port. Refer to the nameplate label on the unit for the proper refrigerant type and charge amount.
4. If the unit will not accept the entire charge, the remainder can be added through the low pressure service port after the unit has been restarted.

Compressor Replacement Procedure

1. Pump down the unit as per the Pumpdown Procedure above. **If there was a compressor burn out (motor failure), the refrigerant cannot be reused and must be disposed of according to local codes.**
2. Disconnect piping.
3. Replace the compressor. Replace the liquid line filter-dryer. Always ensure nitrogen is flowing through the system at the lowest flow rate that can be felt at the discharge during any brazing procedures to prevent soot buildup inside the pipes.
4. Vacuum the unit as per above procedure.
5. If there was a compressor burnout:
 - a) Charge the unit with **new** refrigerant and operate it for continuously for 2 hours. Pump down the unit and replace the filter-dryer. Vacuum the unit as per above procedure.
 - b) Charge the unit (refrigerant can be re-used) and operate it for 2-3 days. Perform an acid test. If it fails, pump down the unit and replace the filter-dryer.
 - c) Charge the unit (refrigerant can be re-used) and operate it for 2 weeks. Perform and acid test. If it fails, pump down the unit and replace the filter-dryer.
5. Charge the unit a final time. Unit should now be clean and repeated future burn-outs can be avoided.

Model Specific Information

MODEL	lb	kg	Refrigerant	Oil Type
W-12	1.3	0.60	R410a	POE
W-15	1.4	0.64	R410a	POE
W-18	1.5	0.68	R410a	POE

- Oil capacity is marked on the compressor label.
 - Refrigerant charge is subject to revision; actual charge is indicated on the unit nameplate.

MODEL	WEIGHT lb. (kg)	DIMENSIONS in (cm)		
		L	W	H
W-12	171 (78)	38 (97)	18 (46)	32 (81)
W-15	179 (81)	38 (97)	18 (46)	32 (81)
W-18	185 (84)	38 (97)	18 (46)	32 (81)

Loop	Mode	Parameter	(°F)	(°C)	Note
Indoor	Heating	Minimum ELT	50	10	Reduce flow if necessary during startup.
	Heating	Maximum LLT	120	49	
	Cooling	Minimum LLT	41	5	Water system (no antifreeze).
	Cooling	Minimum LLT	32	0	Antifreeze system. Adequate freeze protection required.
	Cooling	Maximum ELT	80	27	
Outdoor	Heating	Minimum ELT	39	4	Ground water (open loop) system.
	Heating	Minimum ELT	23	-5	Ground loop system. Adequate freeze protection required.
	Cooling	Minimum ELT	39	4	Ground water (open loop) system.
	Cooling	Minimum ELT	32	0	Ground loop system. Adequate freeze protection required.
	Cooling	Maximum LLT	120	49	

* Values in this table are for rated liquid flow values.

MODEL	gpm	L/s
W-12	3	0.19
W-15	3.5	0.22
W-18	4.5	0.28

Electrical Specifications

TABLE 18	Code	Power Supply			Compressor		Circulators	FLA	MCA	Max. Breaker	Min. Wire
		V-ø-Hz	MIN	MAX	RLA	LRA	Max. A	Amps	Amps	Amps	ga
W-12	1	208/230-1-60	187	253	4.7	26	3.0	7.9	9.1	15	#14-2*
	3	265/277-1-60	226	304	4.2	22	3.0	7.4	8.5	15	#14-2
W-15	1	208/230-1-60	187	253	5.5	26	3.0	8.7	10.1	15	#14-2*
	3	265/277-1-60	226	304	4.7	25	3.0	7.9	9.1	15	#14-2
W-18	1	208/230-1-60	187	253	7.0	38	3.0	10.2	12.0	20	#12-2*
	3	265/277-1-60	226	304	6.0	30	3.0	9.2	10.7	15	#14-2

* For 208/230-1-60, 1 additional conductor (neutral) is required if connecting 115VAC circulators to the unit.

Table 19: Loop Pressure Drop Data

			INDOOR (water 104°F)		OUTDOOR (water 50°F)		OUTDOOR (15% methanol 32°F)		OUTDOOR (35% prop. glycol 32°F)	
			psi	kPa	psi	kPa	psi	kPa	psi	kPa
			gpm	L/s	psi	kPa	psi	kPa	psi	kPa
W-12	2	0.13	0.2	1.1	0.6	4	0.6	4	1.0	7
	2.5	0.16	0.2	1.6	0.8	5	0.9	6	1.4	10
	3	0.19	0.3	2.2	1.1	8	1.2	8	1.8	13
	3.5	0.22	0.4	2.9	1.5	10	1.6	11	2.2	15
	4	0.25	0.5	3.7	1.8	12	2.0	13	2.7	18
	4.5	0.28	0.7	4.6	2.3	16	2.5	17	3.4	23
	5	0.32	0.8	5.5	2.8	19	3.0	21	4.0	28
W-15	2	0.13	0.2	1.1	0.6	4	0.6	4	1.0	7
	2.5	0.16	0.2	1.6	0.8	5	0.9	6	1.4	10
	3	0.19	0.3	2.2	1.1	8	1.2	8	1.8	13
	3.5	0.22	0.4	2.9	1.5	10	1.6	11	2.2	15
	4	0.25	0.5	3.7	1.8	12	2.0	13	2.7	18
	4.5	0.28	0.7	4.6	2.3	16	2.5	17	3.4	23
	5	0.32	0.8	5.5	2.8	19	3.0	21	4.0	28
	5.5	0.35	1.0	6.7	3.5	24	3.8	26	5.0	34
W-18	2.5	0.16	0.2	1.6	0.8	5	0.9	6	1.4	10
	3	0.19	0.3	2.2	1.1	8	1.2	8	1.8	13
	3.5	0.22	0.4	2.9	1.5	10	1.6	11	2.2	15
	4	0.25	0.5	3.7	1.8	12	2.0	13	2.7	18
	4.5	0.28	0.7	4.6	2.3	16	2.5	17	3.4	23
	5	0.32	0.8	5.5	2.8	19	3.0	21	4.0	28
	5.5	0.35	1.0	6.7	3.5	24	3.8	26	5.0	34

Standard Capacity Ratings

Standards ARI/ISO/CSA 13256-2

Table 20 - Standard Capacity Ratings - Ground Loop Heating*						60Hz
EWT 104°F (40°C) * 15% Methanol by Weight Ground Loop Fluid					ELT 32°F (0°C)	
Model	Liquid Flow (Outdoor & Indoor)		Input Energy	Capacity		COP _H
	gpm	L/s	Watts	Btu/hr	kW	W/W
W-12	3.0	0.19	790	8,280	2.4	2.9
W-15	3.5	0.22	975	9,900	2.9	3.0
W-18	4.5	0.28	1,235	12,800	3.8	3.0

Table 21 - Standard Capacity Ratings - Ground Loop Cooling*							60Hz
EWT 53.6°F (12°C) * 15% Methanol by Weight Ground Loop Fluid						ELT 77°F (25°C)	
Model	Liquid Flow (Outdoor & Indoor)		Input Energy	Capacity		COP _C	EER
	gpm	L/s	Watts	Btu/hr	kW	W/W	Btu/hr/W
W-12	3.0	0.19	700	10,100	3.0	4.3	14.5
W-15	3.5	0.22	845	12,200	3.6	4.2	14.4
W-18	4.5	0.28	1,065	15,100	4.4	4.2	14.3

Table 22 - Standard Capacity Ratings - Ground Water Heating						60Hz
EWT 104°F (40°C)					ELT 50°F (10°C)	
Model	Liquid Flow (Outdoor & Indoor)		Input Energy	Capacity		COP _H
	gpm	L/s	Watts	Btu/hr	kW	W/W
W-12	3.0	0.19	840	10,800	3.2	3.8
W-15	3.5	0.22	1,030	12,900	3.8	3.7
W-18	4.5	0.28	1,300	16,700	4.9	3.8

Table 23 - Standard Capacity Ratings - Ground Water Cooling							60Hz
EWT 53.6°F (12°C)						ELT 59°F (15°C)	
Model	Liquid Flow (Outdoor & Indoor)		Input Energy	Capacity		COP _C	EER
	gpm	L/s	Watts	Btu/hr	kW	W/W	Btu/hr/W
W-12	3.0	0.19	560	11,200	3.3	5.8	19.7
W-15	3.5	0.22	670	13,100	3.8	5.8	19.7
W-18	4.5	0.28	900	17,200	5.0	5.6	19.2

Performance Tables

W-12-HAC-P-*L R410a, 60 Hz, GKS102KAA

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Cond. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
HEATING	25	15	3.0	22	3	4,862	3.6	769	104	112	3.0	109	5	7,434	2.83
	30	20	3.0	26	4	5,415	3.7	786		113	3.0	109	5	8,045	3.00
	35	24	3.0	31	4	6,001	3.8	801		113	3.0	110	6	8,682	3.18
	40	29	3.0	35	5	6,631	3.9	815		114	3.0	110	6	9,361	3.37
	45	34	3.0	40	5	7,293	3.9	826		114	3.0	111	7	10,062	3.57
	50	39	3.0	44	6	7,994	3.9	836		115	3.0	111	7	10,800	3.78
	55	43	3.0	49	6	8,746	4.0	845		116	3.0	112	8	11,583	4.02
	60	48	3.0	53	7	9,560	4.0	852		116	3.0	112	8	12,419	4.27
	25	15	3.0	22	3	4,509	4.0	812	115	123	3.0	120	5	7,226	2.61
	30	20	3.0	26	4	5,061	4.1	832	115	123	3.0		5	7,849	2.76
	35	25	3.0	31	4	5,632	4.1	851	114	123	3.0		6	8,484	2.92
	40	30	3.0	36	4	6,240	4.2	867	114	123	3.0		6	9,148	3.09
	45	35	3.0	40	5	6,904	4.3	881	113	123	3.0		7	9,863	3.28
	50	39	3.0	45	5	7,604	4.3	893	113	124	3.0		7	10,605	3.48
	55	44	3.0	49	6	8,358	4.3	904	112	124	3.0		8	11,395	3.69
	60	49	3.0	54	6	9,191	4.3	912	112	124	3.0		8	12,256	3.94

	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Evap. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Cooling (Btu/hr)	EER
	COOLING	60	79	3.0	69	9	12,845	2.6	564	54	39	3.0	46	7	10,971
65		83	3.0	74	9	12,833	2.7	606	39		3.0	46	7	10,816	17.8
70		88	3.0	79	9	12,736	2.9	648	40		3.0	47	7	10,578	16.3
75		92	3.0	84	9	12,618	3.1	687	40		3.0	47	7	10,325	15.0
80		97	3.0	89	9	12,432	3.2	727	41		3.0	47	7	10,002	13.7
85		101	3.0	94	9	12,243	3.4	766	41		3.0	47	6	9,680	12.6
90		106	3.0	98	8	12,002	3.6	806	42		3.0	47	6	9,302	11.5
95		110	3.0	103	8	11,772	3.7	846	43		3.0	48	6	8,938	10.6

METRIC

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Cond. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Heating (W)	COP _H
HEATING (METRIC)	-3.9	-9.5	0.19	-5.8	1.9	1,425	3.6	769	40	44.6	0.19	42.8	2.8	2,179	2.83
	-1.1	-6.9	0.19	-3.2	2.1	1,587	3.7	786		44.9	0.19	43.0	3.0	2,358	3.00
	1.7	-4.3	0.19	-0.7	2.3	1,759	3.8	801		45.2	0.19	43.2	3.2	2,544	3.18
	4.4	-1.6	0.19	1.9	2.6	1,943	3.9	815		45.5	0.19	43.5	3.5	2,743	3.37
	7.2	1.0	0.19	4.4	2.8	2,137	3.9	826		45.8	0.19	43.7	3.7	2,949	3.57
	10.0	3.6	0.19	6.9	3.1	2,343	3.9	836		46.1	0.19	44.0	4.0	3,165	3.78
	12.8	6.2	0.19	9.4	3.4	2,563	4.0	845		46.4	0.19	44.3	4.3	3,395	4.02
	15.6	8.8	0.19	11.8	3.7	2,802	4.0	852		46.7	0.19	44.6	4.6	3,640	4.27
	-3.9	-9.4	0.19	-5.6	1.8	1,321	4.0	812	46.2	50.6	0.19	49	2.7	2,118	2.61
	-1.1	-6.7	0.19	-3.1	2.0	1,483	4.1	832	46.0	50.6	0.19		2.9	2,300	2.76
	1.7	-4.0	0.19	-0.5	2.2	1,651	4.1	851	45.7	50.7	0.19		3.1	2,486	2.92
	4.4	-1.3	0.19	2.0	2.4	1,829	4.2	867	45.5	50.7	0.19		3.4	2,681	3.09
	7.2	1.4	0.19	4.5	2.7	2,024	4.3	881	45.2	50.8	0.19		3.7	2,891	3.28
	10.0	4.1	0.19	7.0	3.0	2,229	4.3	893	44.9	50.8	0.19		3.9	3,108	3.48
	12.8	6.7	0.19	9.5	3.3	2,450	4.3	904	44.7	50.9	0.19		4.2	3,339	3.69
	15.6	9.4	0.19	12.0	3.6	2,694	4.3	912	44.3	50.9	0.19		4.5	3,592	3.94

	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Evap. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Cooling (W)	COP _c
	COOLING (METRIC)	15.6	26.1	0.19	20.6	5.0	3,764	2.6	549	12	3.7	0.19	7.9	4.1	3,215
18.3		28.5	0.19	23.3	5.0	3,761	2.7	591	4.0		0.19	8.0	4.0	3,170	5.23
21.1		31.0	0.19	26.1	5.0	3,733	2.9	632	4.3		0.19	8.1	3.9	3,100	4.79
23.9		33.4	0.19	28.8	4.9	3,698	3.1	672	4.6		0.19	8.2	3.8	3,026	4.40
26.7		35.9	0.19	31.5	4.8	3,644	3.2	712	4.9		0.19	8.3	3.7	2,931	4.03
29.4		38.4	0.19	34.2	4.8	3,588	3.4	751	5.2		0.19	8.4	3.6	2,837	3.70
32.2		40.9	0.19	36.9	4.7	3,517	3.6	791	5.5		0.19	8.6	3.4	2,726	3.38
35.0		43.3	0.19	39.6	4.6	3,450	3.7	831	5.8		0.19	8.7	3.3	2,619	3.10

Performance Tables (continued)

W-15-HAC-P-*L R410a, 60 Hz, GKS120KAB

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Cond. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
HEATING	25	14	3.5	22	3	5,662	4.7	944	104	112	3.5	109	5	8,823	2.74
	30	19	3.5	26	4	6,352	4.8	966		113	3.5	109	5	9,588	2.91
	35	24	3.5	31	4	7,061	4.9	986		113	3.5	110	6	10,364	3.08
	40	29	3.5	35	5	7,811	4.9	1,004		114	3.5	110	6	11,177	3.26
	45	33	3.5	40	5	8,596	5.0	1,018		114	3.5	111	7	12,015	3.46
	50	38	3.5	44	6	9,433	5.0	1,032		115	3.5	111	7	12,900	3.66
	55	43	3.5	49	6	10,344	5.1	1,045		116	3.5	112	8	13,853	3.89
	60	47	3.5	53	7	11,353	5.1	1,054		116	3.5	113	9	14,895	4.14
	25	15	3.5	22	3	5,287	5.0	1,001	115	123	3.5	120	5	8,640	2.53
	30	20	3.5	26	4	5,960	5.1	1,026	115	123	3.5		5	9,402	2.68
	35	24	3.5	31	4	6,635	5.2	1,049	114	123	3.5		6	10,152	2.84
	40	29	3.5	36	4	7,339	5.3	1,068	114	123	3.5		6	10,923	3.00
	45	34	3.5	40	5	8,106	5.4	1,083	113	123	3.5		7	11,747	3.18
	50	39	3.5	45	5	8,919	5.4	1,097	113	123	3.5		7	12,606	3.37
	55	44	3.5	49	6	9,809	5.5	1,108	112	123	3.5		8	13,534	3.58
	60	49	3.5	53	7	10,813	5.5	1,116	112	124	3.5		8	14,567	3.82

	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Evap. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Cooling (Btu/hr)	EER
	COOLING	60	79	3.5	69	9	15,288	2.4	678	54	38	3.5	46	7	13,036
65		83	3.5	74	9	15,234	2.9	737	39		3.5	46	7	12,781	17.3
70		88	3.5	79	9	15,155	3.3	788	40		3.5	46	7	12,527	15.9
75		92	3.5	84	9	15,066	3.7	831	40		3.5	47	7	12,292	14.8
80		97	3.5	89	9	14,955	4.0	869	41		3.5	47	7	12,050	13.9
85		101	3.5	94	9	14,833	4.3	902	42		3.5	47	7	11,817	13.1
90		106	3.5	99	9	14,688	4.6	932	42		3.5	47	7	11,569	12.4
95		110	3.5	104	9	14,532	4.8	959	43		3.5	47	6	11,321	11.8

METRIC

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Cond. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Heating (W)	COP _H
HEATING (METRIC)	-3.9	-9.8	0.22	-5.8	1.9	1,659	4.7	944	40	44.6	0.22	42.8	2.8	2,586	2.74
	-1.1	-7.2	0.22	-3.2	2.1	1,861	4.8	966		44.9	0.22	43.0	3.0	2,810	2.91
	1.7	-4.6	0.22	-0.7	2.4	2,069	4.9	986		45.2	0.22	43.3	3.3	3,037	3.08
	4.4	-1.9	0.22	1.8	2.6	2,289	4.9	1,004		45.5	0.22	43.6	3.6	3,276	3.26
	7.2	0.7	0.22	4.3	2.9	2,519	5.0	1,018		45.8	0.22	43.8	3.8	3,521	3.46
	10.0	3.3	0.22	6.8	3.2	2,765	5.0	1,032		46.1	0.22	44.1	4.1	3,781	3.66
	12.8	5.9	0.22	9.3	3.5	3,031	5.1	1,045		46.4	0.22	44.4	4.4	4,060	3.89
	15.6	8.6	0.22	11.8	3.8	3,327	5.1	1,054		46.7	0.22	44.7	4.7	4,365	4.14
	-3.9	-9.7	0.22	-5.7	1.8	1,549	5.0	1,001	46.2	50.4	0.22	49	2.7	2,532	2.53
	-1.1	-6.9	0.22	-3.1	2.0	1,747	5.1	1,026	45.9	50.5	0.22		3.0	2,755	2.68
	1.7	-4.3	0.22	-0.6	2.2	1,944	5.2	1,049	45.7	50.6	0.22		3.2	2,975	2.84
	4.4	-1.6	0.22	2.0	2.5	2,151	5.3	1,068	45.4	50.6	0.22		3.5	3,201	3.00
	7.2	1.1	0.22	4.5	2.7	2,376	5.4	1,083	45.2	50.7	0.22		3.7	3,443	3.18
	10.0	3.8	0.22	7.0	3.0	2,614	5.4	1,097	44.9	50.7	0.22		4.0	3,695	3.37
	12.8	6.4	0.22	9.5	3.3	2,875	5.5	1,108	44.6	50.8	0.22		4.3	3,966	3.58
	15.6	9.2	0.22	11.9	3.6	3,169	5.5	1,116	44.3	50.8	0.22		4.6	4,269	3.82

	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Evap. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Cooling (W)	COP _c
	COOLING (METRIC)	15.6	26.1	0.22	20.7	5.1	4,480	2.4	660	12	3.4	0.22	7.9	4.1	3,820
18.3		28.5	0.22	23.4	5.1	4,465	2.9	719	3.8		0.22	7.9	4.1	3,746	5.08
21.1		31.0	0.22	26.2	5.1	4,442	3.3	770	4.2		0.22	8.0	4.0	3,671	4.66
23.9		33.4	0.22	28.9	5.0	4,415	3.7	813	4.6		0.22	8.1	3.9	3,602	4.33
26.7		35.9	0.22	31.7	5.0	4,383	4.0	851	4.9		0.22	8.2	3.8	3,532	4.06
29.4		38.4	0.22	34.4	5.0	4,347	4.3	884	5.3		0.22	8.2	3.8	3,463	3.84
32.2		40.9	0.22	37.1	4.9	4,305	4.6	914	5.7		0.22	8.3	3.7	3,391	3.64
35.0		43.3	0.22	39.9	4.9	4,259	4.8	941	6.1		0.22	8.4	3.6	3,318	3.46

Performance Tables (continued)

W-18-HAC-P-*L R410a, 60 Hz, GJS151KAA

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°F)	Evap. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Abs. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Cond. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Heating (Btu/hr)	COP _H
HEATING	25	14	4.5	21	4	7,495	6.0	1,183	104	112	4.5	109	5	11,450	2.84
	30	19	4.5	26	4	8,331	6.1	1,217		113	4.5	110	6	12,404	2.99
	35	24	4.5	31	4	9,227	6.2	1,245		113	4.5	110	6	13,396	3.15
	40	29	4.5	35	5	10,198	6.2	1,270		114	4.5	110	6	14,453	3.33
	45	33	4.5	40	5	11,227	6.3	1,287		114	4.5	111	7	15,546	3.54
	50	38	4.5	44	6	12,323	6.4	1,304		115	4.5	111	7	16,700	3.75
	55	43	4.5	49	6	13,503	6.4	1,318		116	4.5	112	8	17,928	3.99
	60	47	4.5	53	7	14,788	6.5	1,328		116	4.5	113	9	19,247	4.25
	25	15	4.5	22	3	6,915	6.5	1,262	115	123	4.5	120	5	11,141	2.59
	30	20	4.5	26	4	7,771	6.6	1,295	115	123	4.5		5	12,111	2.74
	35	24	4.5	31	4	8,655	6.7	1,325	114	123	4.5		6	13,097	2.90
	40	29	4.5	36	4	9,606	6.7	1,350	114	123	4.5		6	14,133	3.07
	45	34	4.5	40	5	10,640	6.8	1,372	113	123	4.5		7	15,248	3.26
	50	39	4.5	45	5	11,733	6.9	1,392	113	123	4.5		7	16,408	3.46
	55	44	4.5	49	6	12,922	6.9	1,408	112	123	4.5		8	17,653	3.67
	60	49	4.5	53	7	14,225	7.0	1,424	112	123	4.5		8	19,010	3.91

	ELT (°F)	Cond. Temp.	Flow (gpm)	LLT (°F)	Delta T (°F)	Heat Rej. (Btu/hr)	Compressor Current (A)	Input Power (W)	EWT (°F)	Evap. Temp.	Flow (gpm)	LWT (°F)	Delta T (°F)	Cooling (Btu/hr)	EER
	COOLING	60	77	4.5	69	9	19,763	4.7	901	54	39	4.5	46	8	17,097
65		82	4.5	74	9	19,382	4.8	933	39		4.5	46	7	16,608	17.8
70		88	4.5	79	9	18,934	5.0	978	40		4.5	46	7	16,006	16.4
75		93	4.5	84	9	18,499	5.2	1,035	40		4.5	47	7	15,377	14.9
80		98	4.5	88	8	18,028	5.4	1,106	41		4.5	47	7	14,671	13.3
85		103	4.5	93	8	17,605	5.7	1,184	41		4.5	47	6	13,983	11.8
90		109	4.5	98	8	17,154	6.0	1,274	42		4.5	48	6	13,226	10.4
95		114	4.5	103	8	16,747	6.3	1,372	43		4.5	48	6	12,483	9.1


METRIC

	OUTDOOR LOOP						ELECTRICAL		INDOOR LOOP						
	ELT (°C)	Evap. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Abs. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Cond. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Heating (W)	COP _H
HEATING (METRIC)	-3.9	-9.8	0.28	-5.8	1.9	2,196	6.0	1,183	40	44.6	0.28	42.8	2.8	3,356	2.84
	-1.1	-7.2	0.28	-3.3	2.2	2,442	6.1	1,217		44.9	0.28	43.1	3.1	3,635	2.99
	1.7	-4.6	0.28	-0.7	2.4	2,704	6.2	1,245		45.2	0.28	43.3	3.3	3,926	3.15
	4.4	-1.9	0.28	1.8	2.7	2,989	6.2	1,270		45.5	0.28	43.6	3.6	4,236	3.33
	7.2	0.7	0.28	4.3	2.9	3,290	6.3	1,287		45.8	0.28	43.8	3.8	4,556	3.54
	10.0	3.3	0.28	6.8	3.2	3,612	6.4	1,304		46.1	0.28	44.1	4.1	4,894	3.75
	12.8	5.9	0.28	9.3	3.5	3,957	6.4	1,318		46.4	0.28	44.4	4.4	5,254	3.99
	15.6	8.6	0.28	11.7	3.8	4,334	6.5	1,328		46.7	0.28	44.8	4.8	5,641	4.25
	-3.9	-9.7	0.28	-5.7	1.8	2,027	6.5	1,262	46.1	50.5	0.28	49	2.8	3,265	2.59
	-1.1	-6.9	0.28	-3.1	2.0	2,278	6.6	1,295	45.9	50.5	0.28		3.0	3,549	2.74
	1.7	-4.3	0.28	-0.6	2.2	2,537	6.7	1,325	45.7	50.6	0.28		3.2	3,838	2.90
	4.4	-1.6	0.28	1.9	2.5	2,815	6.7	1,350	45.4	50.6	0.28		3.5	4,142	3.07
	7.2	1.1	0.28	4.5	2.8	3,118	6.8	1,372	45.1	50.6	0.28		3.8	4,469	3.26
	10.0	3.8	0.28	7.0	3.0	3,439	6.9	1,392	44.8	50.7	0.28		4.1	4,809	3.46
	12.8	6.4	0.28	9.4	3.4	3,787	6.9	1,408	44.5	50.7	0.28		4.4	5,174	3.67
	15.6	9.2	0.28	11.9	3.7	4,169	7.0	1,424	44.2	50.7	0.28		4.7	5,571	3.91

	ELT (°C)	Cond. Temp.	Flow (L/s)	LLT (°C)	Delta T (°C)	Heat Rej. (W)	Compressor Current (A)	Input Power (W)	EWT (°C)	Evap. Temp.	Flow (L/s)	LWT (°C)	Delta T (°C)	Cooling (W)	COP _c
	COOLING (METRIC)	15.6	25.1	0.28	20.7	5.1	5,792	4.7	781	12	3.7	0.28	7.8	4.2	5,011
18.3		27.9	0.28	23.4	5.0	5,680	4.8	813	4.0		0.28	7.9	4.1	4,867	5.22
21.1		30.9	0.28	26.0	4.9	5,549	5.0	858	4.3		0.28	8.0	4.0	4,691	4.80
23.9		33.8	0.28	28.7	4.8	5,422	5.2	915	4.6		0.28	8.2	3.8	4,507	4.35
26.7		36.8	0.28	31.4	4.7	5,283	5.4	984	4.9		0.28	8.4	3.6	4,300	3.89
29.4		39.7	0.28	34.0	4.6	5,160	5.7	1,062	5.2		0.28	8.5	3.5	4,098	3.46
32.2		42.6	0.28	36.7	4.5	5,027	6.0	1,151	5.5		0.28	8.7	3.3	3,876	3.04
35.0		45.6	0.28	39.4	4.4	4,908	6.3	1,250	5.8		0.28	8.9	3.1	3,658	2.67

W-HAC Schematic Diagram

208/230-1-60, Rotary Compressor

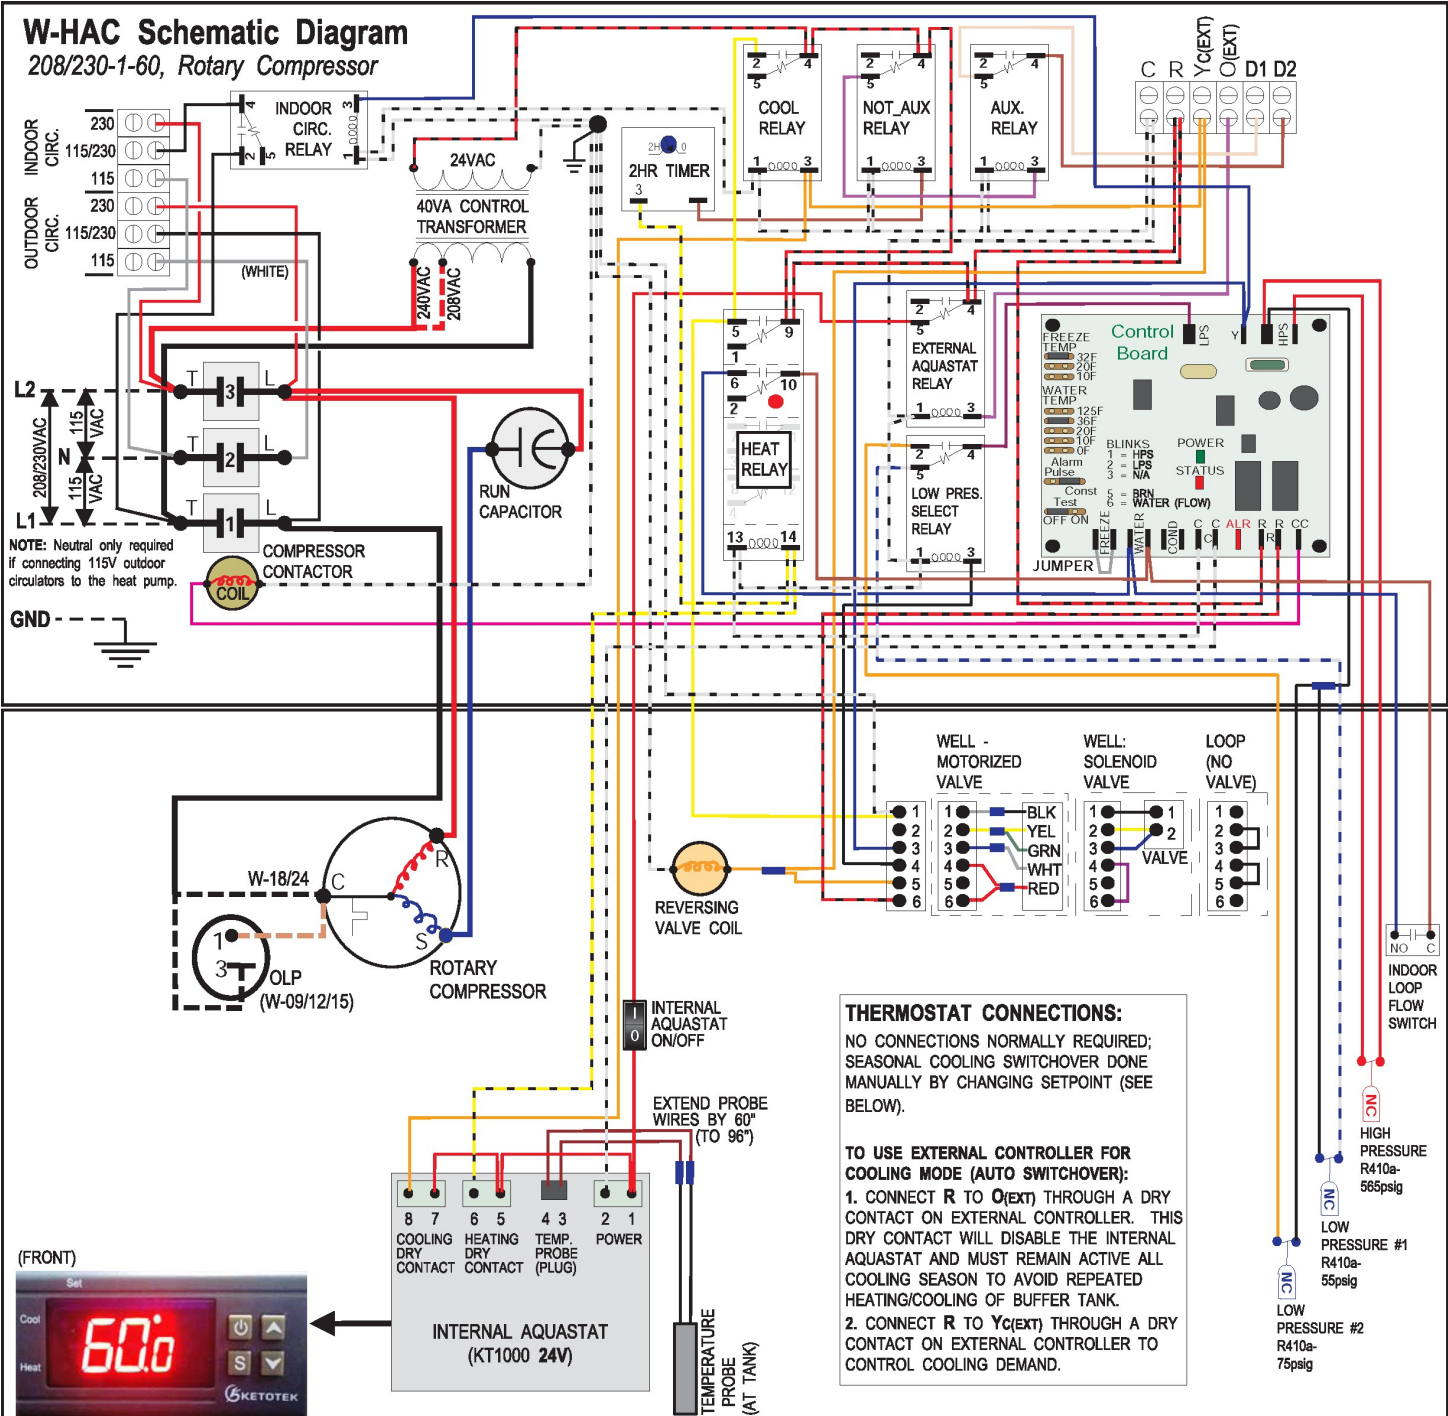

THERMOSTAT CONNECTIONS:
 NO CONNECTIONS NORMALLY REQUIRED;
 SEASONAL COOLING SWITCHOVER DONE
 MANUALLY BY CHANGING SETPOINT (SEE
 BELOW).

**TO USE EXTERNAL CONTROLLER FOR
 COOLING MODE (AUTO SWITCHOVER):**
 1. CONNECT R TO O(ext) THROUGH A DRY
 CONTACT ON EXTERNAL CONTROLLER. THIS
 DRY CONTACT WILL DISABLE THE INTERNAL
 AQUASTAT AND MUST REMAIN ACTIVE ALL
 COOLING SEASON TO AVOID REPEATED
 HEATING/COOLING OF BUFFER TANK.
 2. CONNECT R TO Y(ext) THROUGH A DRY
 CONTACT ON EXTERNAL CONTROLLER TO
 CONTROL COOLING DEMAND.

KT1000 AQUASTAT OPERATION:
 - PRESS THE UP ARROW TO CHECK THE WATER TEMPERATURE SETPOINT.
 - PRESS THE DOWN ARROW TO CHECK THE TEMPERATURE DIFFERENTIAL.

HEAT PUMP WILL OPERATE IN HEATING MODE WHEN TANK TEMPERATURE FALLS BELOW SETPOINT BY DIFFERENTIAL, AND WILL OPERATE IN COOLING MODE WHEN TANK TEMPERATURE RISES ABOVE SETPOINT BY DIFFERENTIAL.

WHEN ON/OFF SWITCH IS IN OFF(0) POSITION (OR EXTERNAL COOLING CONTROLLER IS CONNECTED AND ACTIVE), AQUASTAT DISPLAY WILL TURN OFF AND AQUASTAT WILL NOT FUNCTION. SETTINGS WILL BE RETAINED.


TO CHANGE SETTINGS:
 1. PRESS AND HOLD THE S BUTTON FOR 3 SECONDS.
 2. USE ARROW KEYS TO SELECT F1 FOR SETPOINT OR F2 FOR DIFFERENTIAL.
 3. PRESS S TO DISPLAY CURRENT VALUE. TO CHANGE, PRESS AND HOLD S WHILE SIMULTANEOUSLY PRESSING AN ARROW KEY. PRESS TO SAVE SETTING.

TO SWITCH FROM HEATING TO COOLING MODE:
 USE STEPS 1-3 ABOVE TO CHANGE SETPOINT (F1) FROM HEATING VALUE OF 90-120°F (32-49°C) TO COOLING VALUE OF 45-50°F (7-10°C).

02	000317	D. RHEAULT	D. RHEAULT	4-Aug-2023	Drawn By Dan Rheault	Date 1-Feb-2019	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Peticodiac, NB E4Z 6H4	
01	Init.Re-Release	D. RHEAULT	D. RHEAULT	2-May-2022	Checked By Dan Rheault	Date 1-Feb-2019		
00a	Initial Release	D. RHEAULT	D. RHEAULT	26-Mar-2021	Approved By Dan Rheault	Date 1-Feb-2019	Drawing Name W.-*-HAC-P-1L-**- Schematic Diagram	
00	Prelim. Rel.	D. RHEAULT	D. RHEAULT	1-Feb-2019	Approved By (MFG)	Date		
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Size A	
							Drawing Number 002380SCH	Drawing Rev 02
							SHEET 1 of 1	

W-HAC Schematic Diagram

265/277-1-60, Rotary Compressor

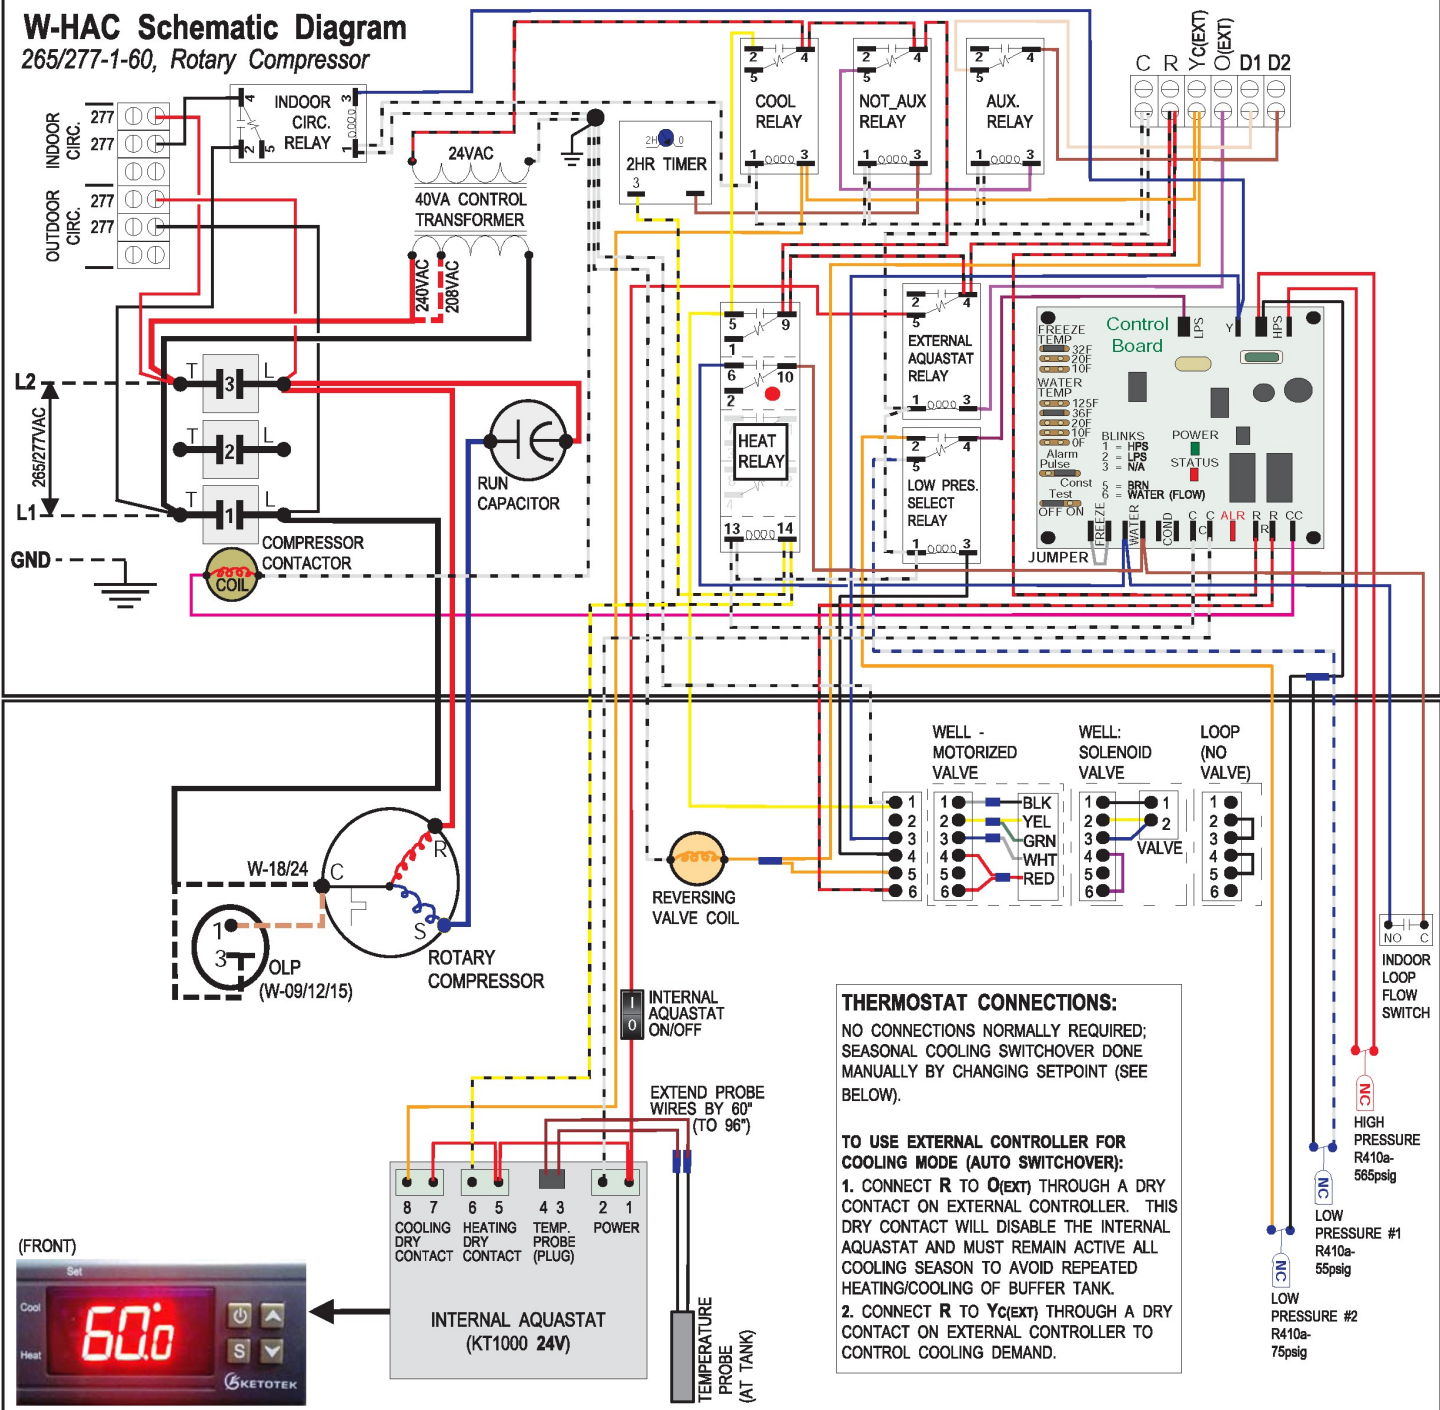

THERMOSTAT CONNECTIONS:
 NO CONNECTIONS NORMALLY REQUIRED; SEASONAL COOLING SWITCHOVER DONE MANUALLY BY CHANGING SETPOINT (SEE BELOW).

TO USE EXTERNAL CONTROLLER FOR COOLING MODE (AUTO SWITCHOVER):

1. CONNECT R TO O(ext) THROUGH A DRY CONTACT ON EXTERNAL CONTROLLER. THIS DRY CONTACT WILL DISABLE THE INTERNAL AQUASTAT AND MUST REMAIN ACTIVE ALL COOLING SEASON TO AVOID REPEATED HEATING/COOLING OF BUFFER TANK.
2. CONNECT R TO Yc(ext) THROUGH A DRY CONTACT ON EXTERNAL CONTROLLER TO CONTROL COOLING DEMAND.

KT1000 AQUASTAT OPERATION:

- PRESS THE **UP** ARROW TO CHECK THE WATER TEMPERATURE SETPOINT.
- PRESS THE **DOWN** ARROW TO CHECK THE TEMPERATURE DIFFERENTIAL.

HEAT PUMP WILL OPERATE IN **HEATING** MODE WHEN TANK TEMPERATURE **FALLS BELOW** SETPOINT BY DIFFERENTIAL, AND WILL OPERATE IN **COOLING** MODE WHEN TANK TEMPERATURE **RISES ABOVE** SETPOINT BY DIFFERENTIAL.

WHEN **ON/OFF** SWITCH IS IN **OFF(0)** POSITION (OR EXTERNAL COOLING CONTROLLER IS CONNECTED AND ACTIVE), AQUASTAT DISPLAY WILL TURN OFF AND AQUASTAT WILL NOT FUNCTION. SETTINGS WILL BE RETAINED.

TO CHANGE SETTINGS:


1. PRESS AND HOLD THE **S** BUTTON FOR 3 SECONDS.
2. USE ARROW KEYS TO SELECT **F1** FOR SETPOINT OR **F2** FOR DIFFERENTIAL.
3. PRESS **S** TO DISPLAY CURRENT VALUE. TO CHANGE, PRESS AND HOLD **S** WHILE SIMULTANEOUSLY PRESSING AN ARROW KEY. PRESS **ON** TO SAVE SETTING.

TO SWITCH FROM HEATING TO COOLING MODE:
 USE STEPS 1-3 ABOVE TO CHANGE SETPOINT (F1) FROM HEATING VALUE OF 90-120°F (32-49°C) TO COOLING VALUE OF 45-50°F (7-10°C).

02	000317	D. RHEAULT	D. RHEAULT	4-Aug-2023	Drawn By Dan Rheault	Date 24-Apr-2019	MARITIME GEOTHERMAL LTD. 170 Plantation Rd. Petitcodiac, NB E4Z 6H4
01	Init.Re-Release	D. RHEAULT	D. RHEAULT	2-May-2022	Checked By Dan Rheault	Date 24-Apr-2019	
00a	Initial Release	D. RHEAULT	D. RHEAULT	26-Mar-2021	Approved By Dan Rheault (ENG)	Date 24-Apr-2019	
00	Prelim. Rel.	D. RHEAULT	D. RHEAULT	1-Feb-2019	Approved By (MFG)	Date	
REV	ECO #	IMPL BY	APVD BY	DATE	Approved By	Date	Drawing Name W-**-HAC-P-1L-** Schematic Diagram Size Drawing Number A 002383SCH Drawing Rev SHEET 02 1 of 1

W Series Refrigeration Circuit Heating Mode


ITEM	STATUS
RV#1	DE-ENERGIZED

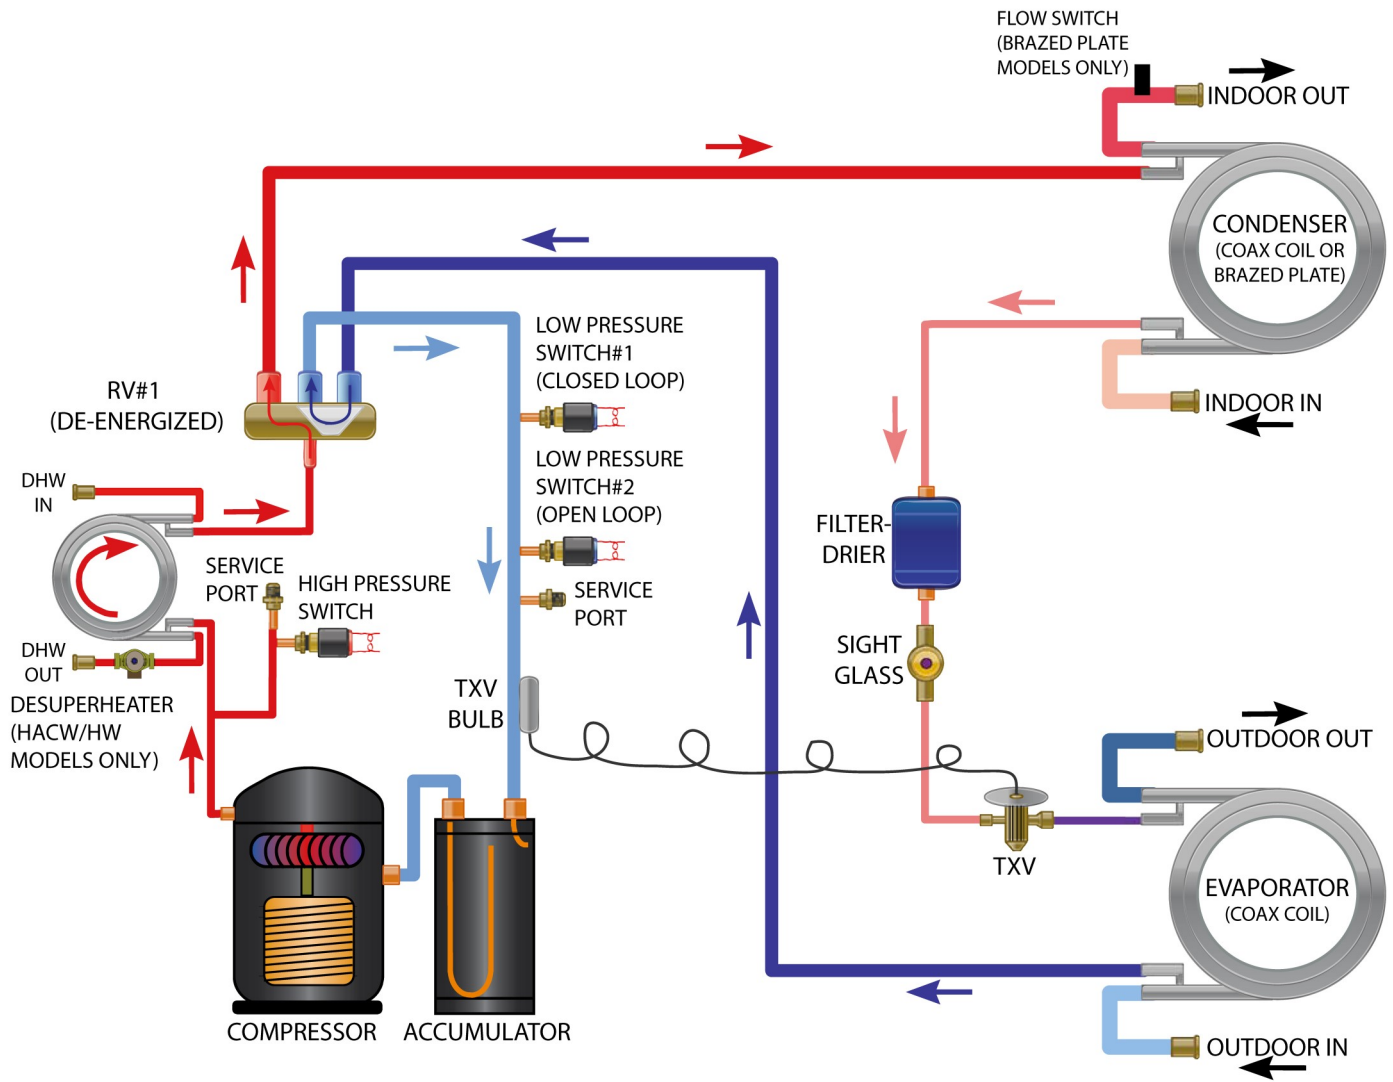

					Drawn By C.GEDDES Date 14 JUN 2011	MARITIME GEOTHERMAL LTD. P.O. Box 2555 170 Plantation Rd. Petitcodiac, NB CANADA E4Z 6H4
					Checked By C.GEDDES Date 14 JUN 2011	
					Eng. Approved By C.GEDDES Date 14 JUN 2011	
					Mfg. Approved By Date	
02	-	D. RHEAULT	D. RHEAULT	25 MAR 2021	Approved By	Date
01	Initial Release	C. GEDDES	C. GEDDES	14 JUN 2011		
REV	ECO#	IMPL BY	APVD BY	DATE		
					Size	LET
					Drawing Number	001488RCD
					Drawing Revision	02
					Sheet	1 / 1

W Series Refrigeration Circuit Cooling Mode


ITEM	STATUS
RV#1	ENERGIZED

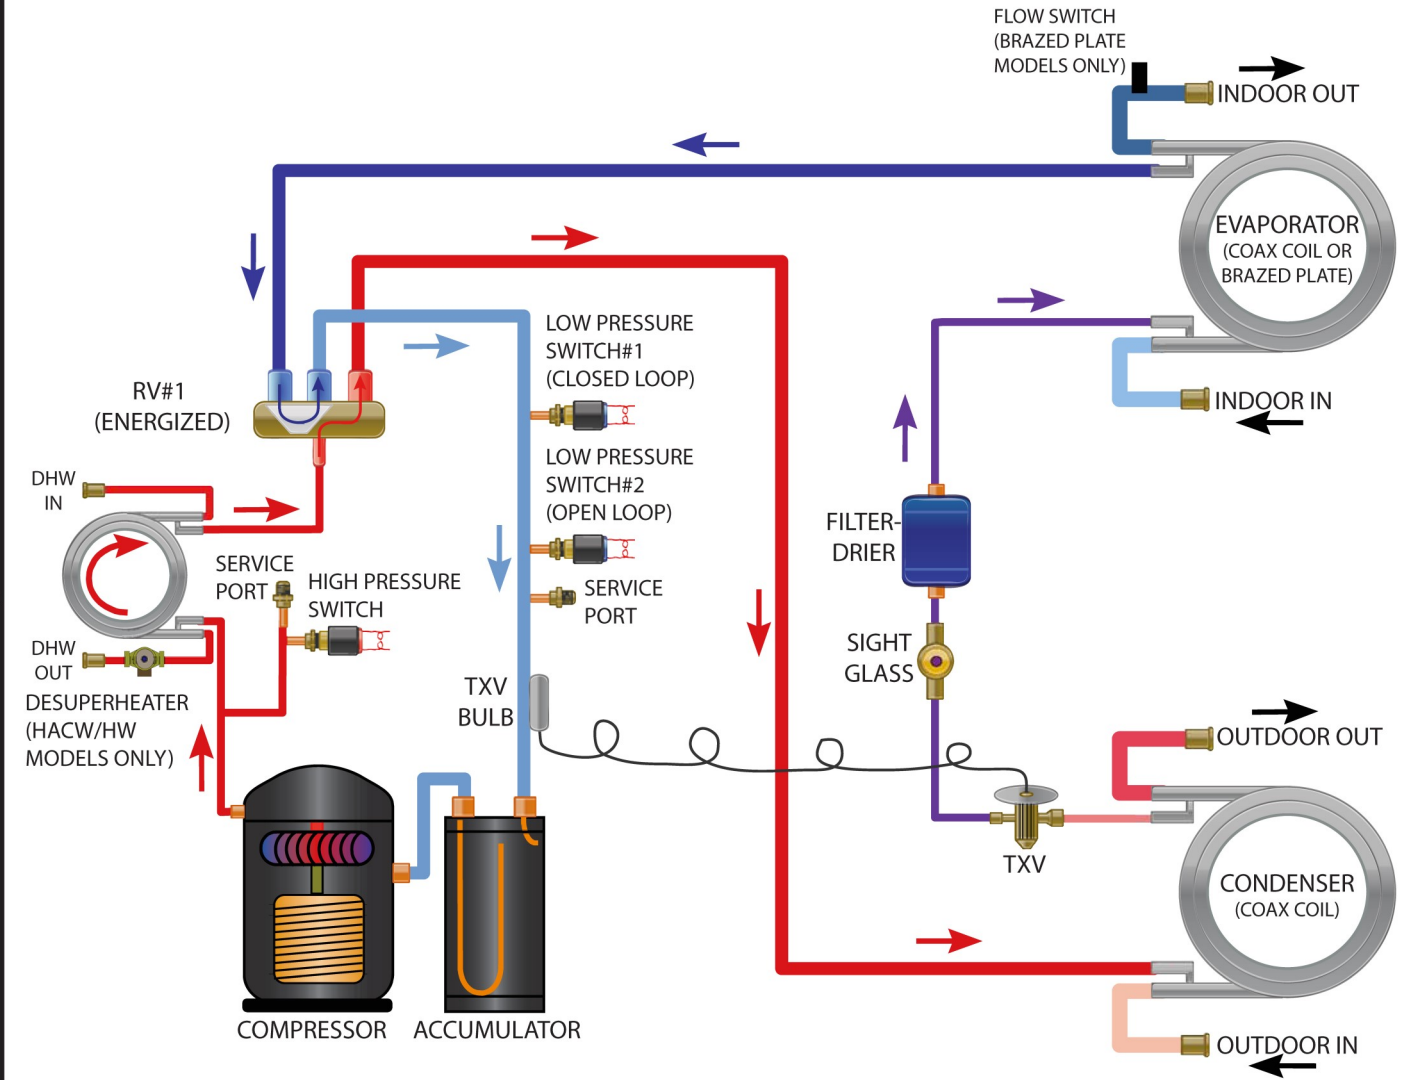

02	-	D. RHEAULT	D. RHEAULT	25 MAR 2021	Drawn By C. GEDDES	Date 14 JUN 2011	MARITIME GEOTHERMAL LTD. P.O. Box 2555 170 Plantation Rd. Petitcodiac, NB CANADA E4Z 6H4	Drawing Name W-Series Refrigeration Circuit - Cooling Mode		
01	Initial Release	C. GEDDES	C. GEDDES	14 JUN 2011	Checked By C. GEDDES	Date 14 JUN 2011				
REV	ECO#	IMPL BY	APVD BY	DATE	Eng. Approved By C. GEDDES	Date				
					Mfg. Approved By	Date				
					Approved By	Date	Size LET	Drawing Number 001489RCD	Drawing Revision 02	Sheet 1 / 1

Dimensions

RECOMMENDED FRONT CLEARANCE:
2 FT

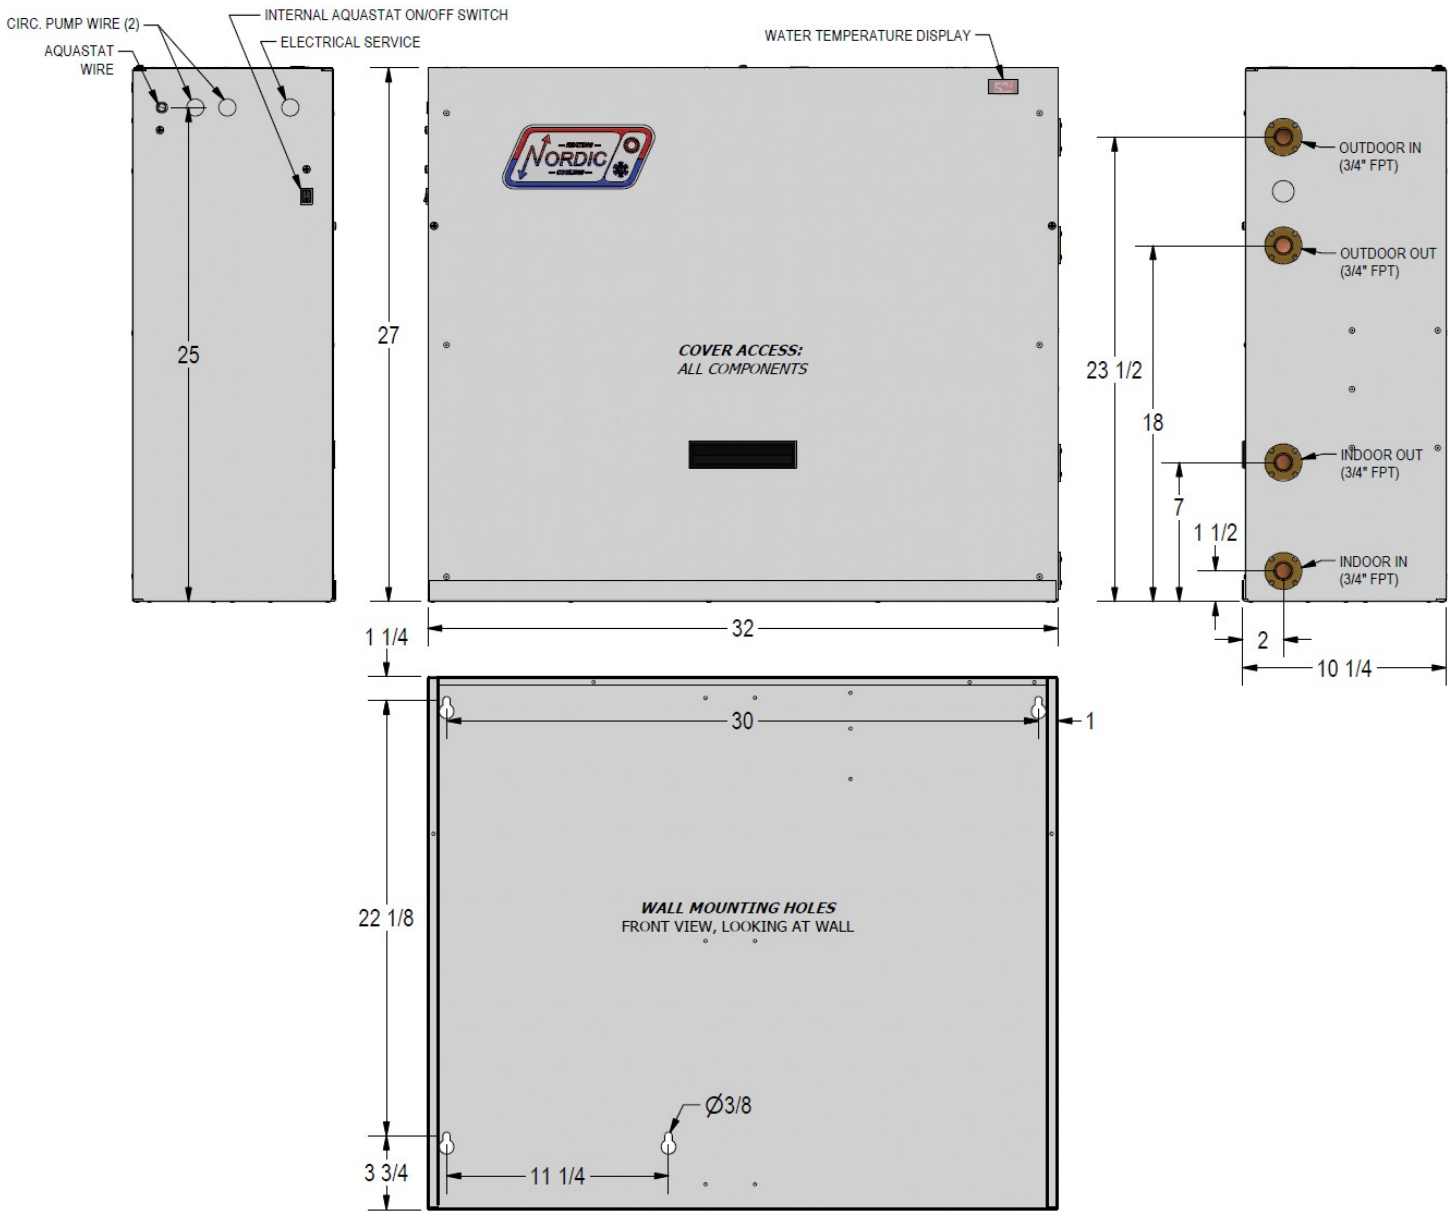

NO BACK OR SIDE CLEARANCES REQUIRED

LIMITED RESIDENTIAL WARRANTY

MARITIME GEOTHERMAL LTD. warrants that the heat pumps manufactured by it shall be free from defects in materials and workmanship for a period of (5) FIVE YEARS after the date of installation or for a period of (5) FIVE YEARS AND (60) SIXTY DAYS after the date of shipment, whichever occurs first. In addition MARITIME GEOTHERMAL LTD. warrants that the compressor shall be free of defects in materials and workmanship for an additional period of (2) TWO YEARS from said date.

MARITIME GEOTHERMAL LTD. shall, at its option repair or replace any part or parts covered by this warranty which shall be returned to MARITIME GEOTHERMAL LTD., transportation charges prepaid, which, upon examination proves to be defective in materials or workmanship. Replacement or repaired parts and components are warranted only for the remaining portion of the original warranty period.

This warranty is subject to the following conditions:

1. The NORDIC® heat pump must be properly installed and maintained in accordance with MARITIME GEOTHERMAL LTD.'s installation and maintenance instructions.
2. The installer must complete the “**Installation Data Sheet**”, have it endorsed by the owner and return it to Maritime Geothermal Ltd. within 21 days of installation of the unit.
3. It is the responsibility of the building or general contractor to supply temporary heat to the structure prior to occupancy. These heat pumps are designed to provide heat only to the completely finished and insulated structure. Start-up of the unit shall not be scheduled prior to completion of construction and final duct installation for validation of this warranty.
4. It is the customer's responsibility to supply the proper quantity and quality of water.

If the heat pump, manufactured by MARITIME GEOTHERMAL LTD., fails to conform to this warranty, MARITIME GEOTHERMAL LTD.'s sole and exclusive liability shall be, at its option, to repair or replace any part or component which is returned by the customer during the applicable warranty period set forth above, provided that (1) MARITIME GEOTHERMAL LTD. is promptly notified in writing upon discovery by the customer that such part or component fails to conform to this warranty. (2) The customer returns such part or component to MARITIME GEOTHERMAL LTD., transportation charges prepaid, within (30) thirty days of failure, and (3) MARITIME GEOTHERMAL LTD.'s examination of such component shall disclose to its satisfaction that such part or component fails to meet this warranty and the alleged defects were not caused by accident, misuse, neglect, alteration, improper installation, repair or improper testing.